

## Terms and Conditions:

### 1. This warranty is void if:

- The completely filled warranty card is not presented at the time of servicing the product.
  - The product is not operated according to the instructions given under the user manual.
  - Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
  - Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
  - Product label specifying the model number, serial number and production code has been removed and altered.
  - Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
  - Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
  - Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised service.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.

5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Manufactured for & Marketed by :

**Lifelong Online Retail Private Limited**  
**Made in India**

For queries and complaints:

please contact: [customercare@lifelongindia.com](mailto:customercare@lifelongindia.com)  
[www.lifelongindiaonline.com](http://www.lifelongindiaonline.com)

**Lifelong**

**KITCHEN**

MAKING IT POSSIBLE

## 750W 4 Jar Mixer Grinder



Handle Designed  
for Better Grip



Stainless  
Steel Jars



Wet and Dry  
Grinding



Fruit Filter  
Juicer Jar

**12 MONTH  
WARRANTY**


Dear Customer

Congratulations on your Lifelong Purchase. Our name stands for high-quality and thoroughly tested products. This amazingly versatile home appliance will help reduce your kitchen drudgery. This Lifelong Rapid 750 watt 4 jar mixer grinder is a great time saver and a helpful gadget.

Please read these instructions carefully before use.

## PRECAUTIONS BEFORE USE

- Keep the Lifelong Rapid 750 watt 4 jar mixer grinder away from heat and sunlight
- Clean the jars carefully before use
- Do not place the machine on a wet surface
- Never try to touch the moving parts or blades of the mixer grinder while in operation
- Fix the jar to the base unit by turning it clockwise.
- Make sure it is firmly locked in position prior to usage
- Never insert your hand or spatula or spoon, when in use
- Never operate the mixer grinder without the jar lid

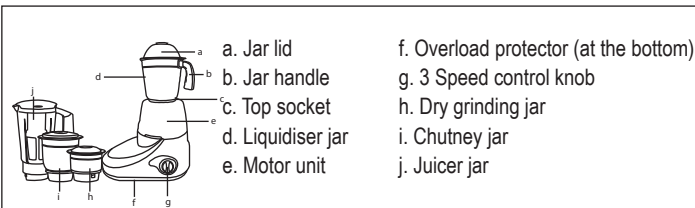

## Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

### Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: \_\_\_\_\_

Model: \_\_\_\_\_

Warranty coverage: 2 years

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: [customercare@lifelongindia.com](mailto:customercare@lifelongindia.com)

### Customer Details

Name: \_\_\_\_\_

Address: \_\_\_\_\_

Home Number: \_\_\_\_\_

Office Number: \_\_\_\_\_

E-mail Address: \_\_\_\_\_

### Product Details

Model No.: \_\_\_\_\_

Serial No.: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Invoice Number: \_\_\_\_\_

Online Site: \_\_\_\_\_

Please log onto to [www.lifelongindiaonline.com](http://www.lifelongindiaonline.com) and complete the online warranty form with your personal and product details within 14 days.

- When removing the blade please keep the washer in a good condition for fitting again.
- The jars can be cleaned by using regular dishwashing soap.
- After thoroughly rinsing with soap, clean the jars with a dry cloth.
- Never store the jars with closed lids.
- Do not use any detergent soap solutions on the main body.
- Clean the body with a dry cloth before storing for next use.
- Never immerse the motor in the water for cleaning



- Since the blades are quite sharp, be careful while changing them
- Never pull the cord to take out the plug from the socket
- Always switch off the power supply button before cleaning, emptying or when not in use.
- For citrus fruits like oranges and sweet limes it is advisable not to use the plunger so that the seeds pop up automatically. However, for best results cut the fruit into small pieces and remove the seeds before extracting juice
- Do not use the Liquidizer jar for dry/wet grinding, grating, chopping or mincing functions.
- Do not worry if you experience some burning smell when you run your mixer grinder for the first time. This is due to the motor varnish getting heated for the first time. The problem should not recur in subsequent uses. If it does, please contact our customer care.

## HOW TO USE

### FRUIT FILTER JUICER JAR

- Insert the fruit filter into the blender jar and rotate it slightly so that it settles down and the grooves get locked with the slugs on the blender jar wall.
- Place the lid on the jar and rotate it anti-clockwise to lock.
- Place the assembly onto the drive shaft of the juicer mixer grinder and rotate clockwise to lock it into position.
- Cut small pieces of fruits to be juiced.
- Remove the cap on the lid by rotating anticlockwise. Put the cut pieces into the filter and switch on the juicer mixer grinder.
- You can continue adding more fruit pieces from the centre opening in the lid as they are juiced.
- The juice is sieved out through the filter and the pulp/seeds get accumulated inside the filter and pour out the contents from the jar by tilting.

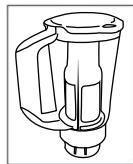


Fig 1

### LIQUIDIZING AND BLENDING

STEP 1: The Liquidizing and blending jar (refer fig 2) is used for preparation of shakes, juices etc.

STEP 2: Before starting the mixer grinder for the first time or after a long period of time, rotate the motor shaft with hand to ensure that it turns freely and smoothly.

STEP 3: Place all the ingredients in the jar and put the lid properly

STEP 4: Now switch on the grinder for operation

**Note:** Do not use this jar for wet grinding.



Fig 2

## WET/DRY GRINDING

STEP 1: The wet /dry grinding jar (refer fig 3) is used for grinding items like Idli and dosa batter, coconut chutney, groundnut, red chili powder, sugar, palak etc.

STEP 2: Make sure that the dry grinding jar is absolutely clean and dry before use.

STEP 3: Use small pieces of ingredients for grinding.

STEP 4: Fill the jar with ingredients up to the marked capacity

STEP 5: Put the flat lid on top of the Jar. Grind at low speed for 15-30 seconds and then move to higher speed

**Note:** Always move gradually from lower speeds to higher speed. During grinding process, the jar might gethealed up due to friction. Do not panic. This happens gradually.



Fig 3

## CHUTNEY MAKING

STEP 1: The chutney jar (refer fig 4) is mainly used for making chutney.

STEP 2: Use small pieces of ingredients for grinding.

Step 3: Put the ingredients in the chutney jar for grinding. Hold the lid tightly so that it won't get healed up.

STEP 4: The ingredients should not be too large. Break ingredients into smaller pieces.

**Note:** The lid should be properly pressed.



Fig 4

## OVERLOAD PROTECTION

- The overload protector (OLP) is designed to protect the motor (refer fig 4) from burning.
- In case of an overload, the blade of the jar stops rotating and the motor gets jammed or starts heating up.
- If such a situation occurs the mixer grinder will automatically trip off and hence protect the motor.
- Let the motor cool down for a couple of minute. The red button of the overload protector switch located at the bottom of the mixer grinder has to be pressed for re-operation.
- If you have to reset the OLP again and again, try reducing the quantity of ingredients in the Jar.



overload protector

## CLEANING INSTRUCTIONS

- Before use pour warm water in the jar, run for a few seconds and throw away the water.
- The cleaning of the mixer grinder and jars are very necessary for maintaining smooth operation of the mixer grinder and proper hygiene.
- After you have used the mixer grinder, use warm water to remove the smell of the material from the jars and then rinse under running water.
- In order to clean the blades thoroughly, remove the blades by using the spatula to loosen the screw by twisting the dome nut on the blade clockwise, while holding the coupler from under the jar.