

Alpha Pro Beard Trimmer LLPCM19



Lifelong Online Retail Pvt Ltd

5th Floor, Unit No. 508, DLF
South Court, Saket District
Center, Saket, New Delhi -110017

+91-9711558877

customer@lifelongindia.com

www.lifelongindiaonline.com

LifelongOnlineIn f
Lifelong_Online t
Lifelong.Online o



Charges in
1.5 hours



Use up to
1.5 hours



Stainless
steel blades




2 years
warranty

Lifelong Alpha Pro Beard Trimmer

Model No.: LLPCM19

1. Position comb
2. Blade
3. Regulator

4. On/off switch
5. Power port
6. USB Cable

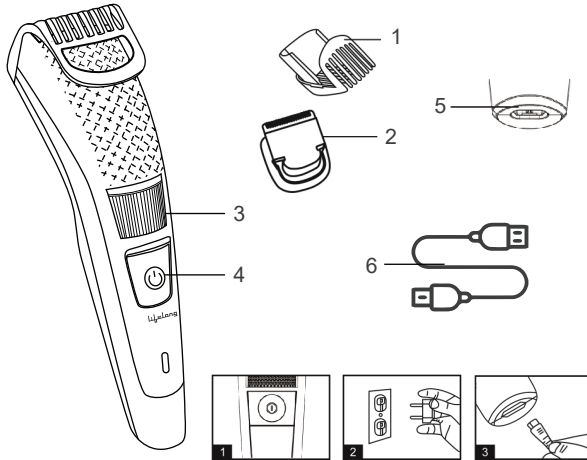

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 2 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log onto to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.

HOW TO USE

- Please attach the comb to the trimmer.
- Adjust the blade length as per beard length you desire.
- Push the switch to “ON” to turn on the trimmer.
- Please turn off the hair trimmer after using.

Important: Please do not use the hair trimmer in an inverted position, this can cut the hair too deep. Trimming your hair without the comb will trim hair length to approx. 0.5 mm

HOW TO CLEAN

- Ensure the hair trimmer is turned off and the power cord is removed.
- Please clean the beard trimmer's surface with a wet cloth. Do not use any cleaner or chemical substance.
- Wipe the beard trimmer's surface with dry cloth. Do not use blower or other dry heat exchange.
- The hair trimmer should not be cleaned by immersing into water.
- Remove the blade and you can wash it under running water.
- As a good practice and for longevity of your trimmer, please do regular oiling of trimmer's motor and blade. This will always keep friction reduced between blade and increase blade and battery life.

Terms and Conditions:

1. This warranty is void if:
 - a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised service.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as will as any other expenses and incidentals will be borne by the consumer.
5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Manufactured for & Marketed by :
Lifelong Online Retail Private Limited

Made in China

For queries and complaints:
please contact: customercare@lifelongindia.com
www.lifelongindiaonline.com

WARNING

- If the blade is deformed or damaged, please do not use it, or it may cause skin irritation
- Please do not charge at the place with temperature lower than 40°C (104°F), direct sunlight or near heat or a humid source
- Please dry the hair trimmer before charging
- Keep the hair trimmer far away from water source, keep your hands dry during the course of charging
- Store the power cord in a dry place as to avoid damage
- Do not pull, twist or bend the power cord

CHARGING THE TRIMMER

- Plug the USB power cord in a USB port of mobile, phone adapter/ laptop. When using an adaptor, use 5V, up to 2 ampere adaptor.
- The trimmer can be used for about 1.5 hours after a full charge. Do not overcharge. Please stop charging after 1.5 hours.
- Charge the appliance in a location where it will not be exposed to direct sunlight or other heat sources.
- Plug the power cord into a USB port where there is no moisture. In case of plugging the USB cable in adaptor use adaptor in main socket where there is no moisture.
- Do not damage or deform the power cord, do not place heavy objects on the power cord.
- While getting charged, the charging light turns on.