

## Terms and Conditions:

1. This warranty is void if:
  - a. The completely filled warranty card is not presented at the time of servicing the product.
  - b. The product is not operated according to the instructions given under the user manual.
  - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
  - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
  - e. Product label specifying the model number, serial number and production code has been removed and altered.
  - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
  - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
  - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.


5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranties, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Manufactured for & Marketed by :  
**Lifelong Online Retail Private Limited**  
Made in China

For queries and complaints:  
please contact: [customercare@lifelongindia.com](mailto:customercare@lifelongindia.com)  
[www.lifelongindiaonline.com](http://www.lifelongindiaonline.com)

# lifelong

## BEARD TRIMMER LLPCM01

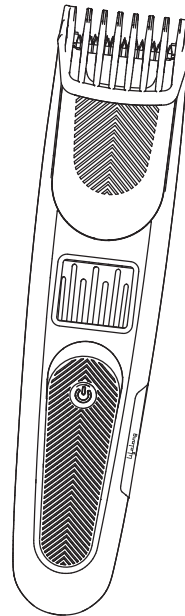


## Beard Trimmer

### Model: LLPCM01

#### INTRODUCTION

Your trimmer is complete with charger and includes 1 different comb attachments that can be quickly fitted to cover all your grooming requirements.

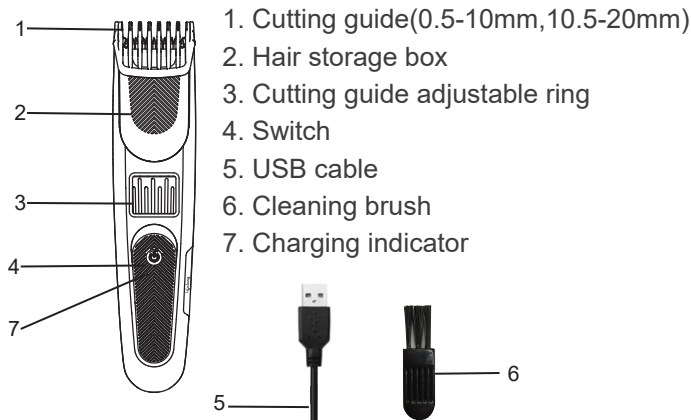

#### Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

#### Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: \_\_\_\_\_

Model: \_\_\_\_\_

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: [customercare@lifelongindia.com](mailto:customercare@lifelongindia.com)

#### Customer Details

Name: \_\_\_\_\_

Address: \_\_\_\_\_

Home Number: \_\_\_\_\_

Office Number: \_\_\_\_\_

E-mail Address: \_\_\_\_\_

#### Product Details

Model No.: \_\_\_\_\_

Serial No.: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Invoice Number: \_\_\_\_\_

Online Site: \_\_\_\_\_

Please log onto to [www.lifelongindiaonline.com](http://www.lifelongindiaonline.com) and complete the online warranty form with your personal and product details within 14 days.

## SAFETY PRECAUTION

Read through these instructions carefully before using the device.

- To avoid a potentially deadly electric shock and/or fire, please observe the following:
- Children shall not play with the appliance.
- The appliance is only to be used with USB cable provided with the appliance.
- The USB/Supply cord (of adaptor/charger) cannot be replaced.
- This appliance is designed for domestic use only.
- Keep the appliance on a table or flat surface.
- Do not place the appliance on any surface when it is switched on.
- Switch off and unplug the appliance before cleaning or not in use.
- Do not use this appliance if there is any damage on appliance or on the USB Cord
- Do not place the USB cord across or near the heating source.
- Do not use the groomer if you have open wounds, cuts, sunburn or blisters.
- Batteries are not intended to be replaced by the user.
- The product is built with an internal rechargeable battery: do not expose the product to excessive heat such as sun heat or fire
- The battery unit must be removed from the appliance before it is scrapped.
- The battery is to be disposed of safely

## CHARGING

- Before using the appliance charger, ensure that the voltage of your electricity supply is the same as that indicated on the charger.
- Your trimmer contains re-chargeable batteries and may be used cordless for approximately at least 45 minutes when the batteries are fully charged.

**IMPORTANT NOTE:** The batteries must be charged for a minimum of 2 hours for the first charge cycle. This will ensure the maximum life for the batteries.

## USAGE INSTRUCTIONS

1. Connect the USB cable to the unit
2. Insert USB to the computer or adaptor head to supply source of 5V 1A.
3. The Charge indicator on the trimmer will light whilst charging.
4. Leave the trimmer until fully charged (approximately 90 mins if the batteries were fully discharged).
5. After charging, disconnect the USB cable and store it in a safe place.
6. The trimmer is now ready for use.

## BATTERY CARE

For a longer rechargeable battery service life, it is recommended that the batteries are completely discharged before they are recharged. To completely discharge the battery, run the device until it comes to a complete stop.

## OPERATING INSTRUCTIONS

When using this appliance for the first time it is advisable to experiment initially on an area of light hair growth.

1. Choose a comb to give the cutting length you want. The combs are marked inside with their cutting length – 0.5-10mm, 10.5-20mm.
2. Install the comb onto the head of the trimmer.
3. Check that the comb are fully engaged on the trimmer.
4. Switch on the trimmer.
5. Use the trimmer against the direction of hair growth for effective.

## TECHNICAL SPECIFICATION

- Input: 5V, 1000mA
- Battery unit: 14430/3.2V/500mAh
- USB cable: Input: 5V, 1000mA

### Box Includes:

USB cable, cleaning brush,  
Attachments: Cutting guide

## CARE AND CLEANING

The appliance must be switched off and disconnected from the charger before cleaning.

1. Clean the blades and comb attachments with the cleaning brush (supplied) to remove remaining loose hair clippings.
2. Clean the housing of the groomer with a soft, dry cloth.

## STORAGE

- Always let the appliance cool down fully before storing.
- After cleaning, store the appliance, charger and all the attachments in the storage pouch provided.