



HAIR TRIMMER

#READYTOROCK



Easy to select and
lock-in length setting,
from 1-10 mm



Detachable head
for easy cleaning



Rounded tips to
prevent irritation

Congratulations on your purchase!

The Lifelong Hair trimmer is your go to device for that perfectly groomed look

HOW TO USE

- Check blade smoothness and apply oil if too dry
- Attach the position comb to the hair trimmer.
- Adjust the position comb according to desired length from 0.5 mm to 10 mm
- Push the switch to "ON" to turn on the hair trimmer
- Style beard as desired
- Please turn off the hair trimmer after using

CHARGING

Charging the appliance:

- The product can be used for 30 minutes after a full charge of 8 hours
- Push the switch to "OFF" to turn off the hair trimmer.
- Plug the adaptor into household main socket.
- Plug the cable into the power port of the hair trimmer.
- When the charge connection is normal, the hair trimmer indicating light turns on, the charge indicating light must turn on during the course of charge. If the light fails to turn on, please try again.
- Please unplug the adaptor after 8 hours' charge.

WARNING

If the blade is deformed or damaged, please do not use it again, or it may cause skin irritation.

The blade has a fixed life. In order to obtain best result, we recommend you replace the blade regularly.

Please use the matching charge cable in the package.

Please dry the hair trimmer before charging.

Keep the hair trimmer far away from water source, keep your hands dry during the course of charging.

When you unplug the power cord from AC power supply, pulling too hard may damage the appliance.

Store the charge cable to dry place as to avoid damage.

Do not pull, twist or bend the charge cable.

Please do not remove the shell, or it may result in damage or improper operation.

This product is not waterproof and cannot be used in the shower.

This product is not suitable for animal hair or other purposes.

Keep out of reach of children.

Please contact the authorized after-sale service for any maintenance and damage question.

The discarded battery shall be removed from the hair trimmer.

Before removing the battery, you must unplug the power cord, make sure the product has been disconnected to avoid shock

Safely dispose the battery.

Service life of the blade: Assuming the hair trimmer is used 4 times one month, and each time for about 20 minutes, then service life will be around 1 year.

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from the date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 6 months

Please note:

Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log onto to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.

Attention during the charging course:

- Never use this hair trimmer around water
- Do not use the trimmer once the battery starts to die down
- Charge the appliance in a location where it will not be exposed to direct sunlight or other heat sources, at temperature of 5oC to 35oC.
- Plug the cable into a household main socket where there is no moisture and handle it with dry hands.
- Do not damage or deform the adaptor, do not place heavy objects on the adaptor.
- Do not use the appliance if the adaptor or power cord is worn, or if the power cord do not fit snugly in the hair trimmer coupling.

Attention: If it is the first time that you are charging the product or in case the product has not been used for over 3 months, please charge for 16 hours, to ensure the product works properly

HOW TO CLEAN

Pay attention to following points before cleaning:

- Ensure the hair trimmer is turned off and the power cord is cut off.
- Please clean the hair trimmer surface with a wet cloth, do not use cleaner or chemical substance.
- Wipe the hair trimmer surface with a dry cloth, do not use blower or other dry heat exchange.
- The hair trimmer should not be cleaned by immersing into water.

How to clean:

- Push the switch to "OFF" to turn off the hair trimmer
- Take off the position comb
- Hold the main body, place your thumb against the blades and then push them away from the main body. Brush off any hair trimmings from the hair storeroom
- Brush off any hair trimmings from the blade
- Take the blade back in place after cleaning.

Terms and Conditions

1. This warranty is void if:
 - a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised service provider.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.
5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply notwithstanding the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Imported and marketed by:
Lifelong Online Retail Private Limited
Made in India

For queries and complaints please contact:
customercare@lifelongindia.com
www.lifelongindiaonline.com