

lifelong

HOME

MAKING IT POSSIBLE

Aspire VC10 Wet and Dry Vacuum Cleaner



Plastic
Durable Body



Efficient and
Powerful Motor



Strong Suction
Power



Easy to
Move



Large Tank
Capacity



 
Long
Cord

**1 YEAR
WARRANTY**

THE DESCRIPTION AND INTRODUCTION

Usage of the handle:

Pull out the plastic clips and then naturally bend the fingers holding the hand to lift up the machine head.



Usage of the clips:

Follow the picture, pull out the clips to open and remove the machine head



The connection method for hose:



Insert the hose connector. Turn off the into the suction mouth, and then rotate about 90° swith after using “—” for power turn on Backpack function to make it tightly locked.

Backpack function:

Take out the backpack belt and put into the slot, when use, you can carry it on your back. After using, remember to take it down and reserve for next use.

Blowing function:

Connect the hose connector with the blowing mouth and tighten, when it works, put the suction nozzle toward the object. Remember to check the hose to make sure the hose wall is clean.

Tube assembly storage function:

Put the tube assembly here for next use.

Hanging wire function:

After using, hang the wire here for storage and fix the power cord to the left slot to ensure that the power cord is clean.

INSTRUCTION AFTER USE

1. Turn off the switch "o" for turn off "-" for turn on.



2. Pull out the plug and put the wire in order.



3. Take off the hose and floor brush, clean the rest dust.



6. Take off the filter, wash and dry it for next use.



 
5. Clean the tank and dry with a soft cloth.



4. Take off the head as the picture.




PROTECTIVE DEVICE

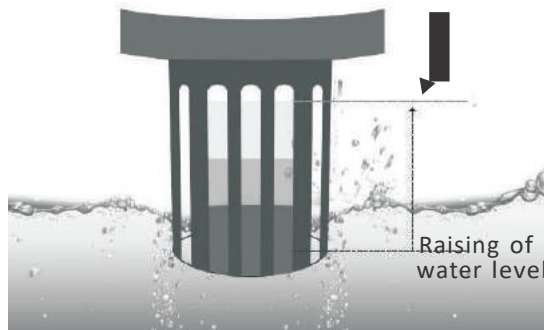

Special instruction of the protective device

- When tank is full of water, the device will raise up, suction power will stop and abnormal noise indicate that the motor is running at a high speed. If this happened, you should cut off the power, and pour away the water. Return on the power, it will begin to work normally again.
- When vacuum cleaner overturn or shaking, the device works, you should cut off the power and make it upright, then turn on the machine again.
- When tank is full of water, the device will raise up, suction power will cut off, please stop the working immediately.

 CLEANING & MAINTENANCE

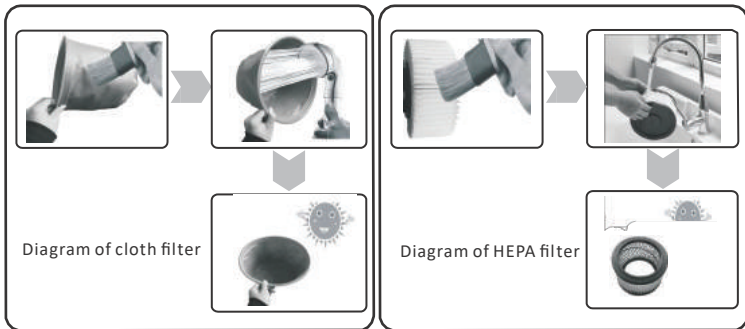

Before cleaning , please turn off the power and pull off the plug.

Methods of cleaning:

 
- Use brush to clean the dust on the filter
- Use tap or shower wash the filter from inside to outside for better clean.
- Put the filter in a well-ventilated place to air-dry it.
- Store it properly for your next use.

Note: After your washing

- Be sure of intensive drying (To avoid bad smell or block)
- Do not use air blower or another kind of hot-blast air drying it (To avoid causing failures due to out of shape).
- Do not use detergent/bleach/thinner/alcohol etc (to avoid causing cracks and fading color).

ATTENTION TO AVOID FIRE

- Do not move it when the clips unlocked. (To avoid damages when you moving it).
- Use wire and plug in a correct way. Please pull out the plug when you not use it. (To avoid the bad insulation causing electric shock/the leakage of electricity or fires).



Avoid incorrect operation

- Do not put metal into the connector of this machine (To avoid electric shock).
- Do not pull the plug by the wire.
- Do not pull or move the machine by pulling the hose.
- Please use the handle to move or pull it (To avoid damages cause by falling) .

OPERATION REQUIREMENTS

- Please not collect the following things in case caused breakdown or bad smell:

Dehumidizer.

Massive of powder(construction waste/powder of fire extinguisher).

Pet excreta etc.

Glass/tins/needles/toothpicks.

Something easy to block the Hose (ropes/stockings).

- Please use the hose carefully (to avoid it damaged).
- To avoid the motor overheating Please not use it continually more than half an hour, otherwise this may reduce its working life time.

When the tank is full of dust.

When the suction mouth is blocked.

When the hose, tube, nozzle is blocked.

- Please not use the hose or the tube to collect dust directly to avoid wear.
- Please use the floor brush or crevice nozzle etc.
- Please not block the air-outlet (To avoid out of shape caused by overheating)
- Please do not continually use it, when the suction mouth is blocked.
- Please check whether the cloth or HEPA filter was installed before using (To avoid the waste go into the motor directly, caused the burning).

TROUBLESHOOTING

Problem	Analysis reasons	Solutions
Not work	1, Check whether the plug has been inserted tightly 2, Check the socket is power on or off	1, Re-insert the plug into the socket tightly 2, Ensure the socket is power on
Suction reducing	1, Check whether the hose, tube was blocked 2, Check whether the filter was blocked 3, Check whether the machine was fastened tightly 4, Check whether the air-out filter was blocked 5, Check whether the adjust window in the adjust handle(hose) is closed	1, Clean up the obstructions in time 2, Clean up or replace the filter
Big noise or unnormal noise	1, Check whether the filters were blocked 2, Check whether the hose, tube or accessories were blocked	1, Clean & maintain the filter 2, Clean up the obstructions

NOTICE

This mark indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material. To return your used device, please use the return and collection systems or contact the retailer where you purchase this machine, so the product can be recycled.



Terms and Conditions:

1. This warranty is void if:
 - a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.

5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Manufactured for & Marketed by :

Lifelong Online Retail Private Limited

For queries and complaints:
please contact: customercare@lifelongindia.com
www.lifelongindiaonline.com

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 1 Year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log onto to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.