 


lifelong

HOME

MAKING IT POSSIBLE

Amaze Pro Vacuum Cleaner

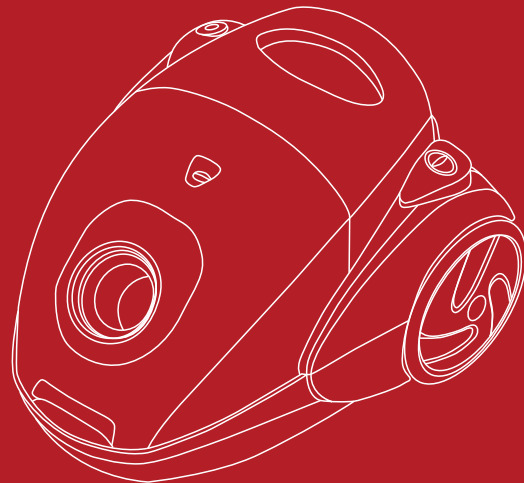

Powerful
Suction Motor
1200 W



High Capacity
Re-usable
Dust Bag



Wide Range
Of Accessories



Auto - Retractable
Cord

 


Compact &
Portable Design

**1 YEAR
WARRANTY**

THE DESCRIPTION AND INTRODUCTION

- A. **Handle**
- B. **Hose**
- C. **Wind-force Adjuster**
- D. **Tube**
- E. **Floor Brush**
- F. **Cup Clasp**
- G. **Hose Connector**
- H. **Power Switch**
- I. **Cable Rewind Button**
- J. **2-in-1 Nozzle**
- K. **Sofa Brush**

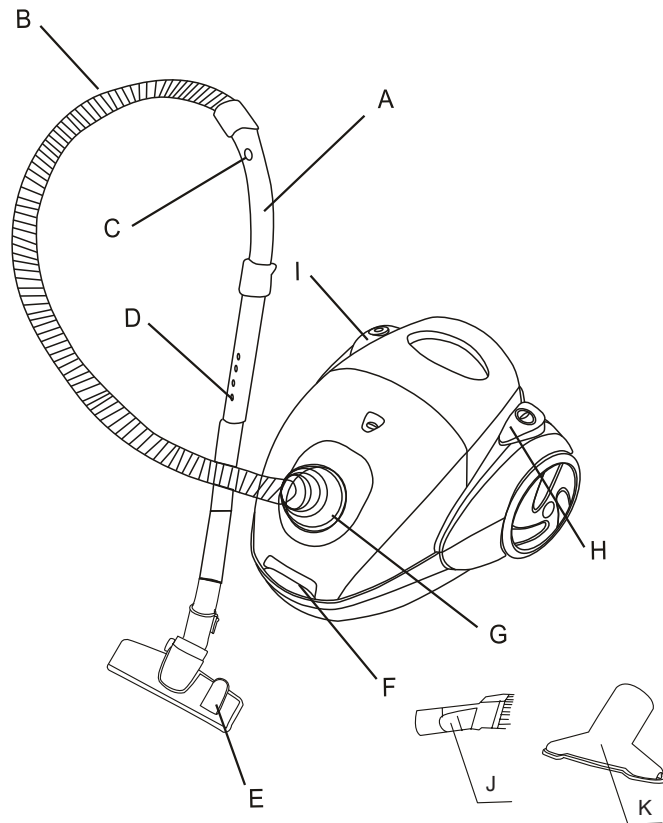


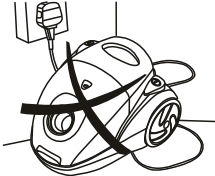 

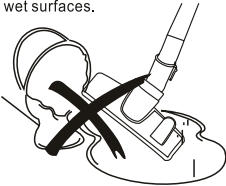 
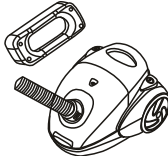 

SAFETY INSTRUCTIONS

Please read all instructions carefully before using:

1. Do not use outdoors or on wet surfaces.
2. Do not touch the power cord or plug with wet hand.
3. Do not use the appliance to vacuum inflammable substances, like cigarette and hot ashes.
4. Keep the openings free to avoid blockage, like hair, loose clothing that may reduce air flow.
5. Turn off the control before unplugging.
6. Always turn off the appliance after using.
7. Never allow children to use this appliance.
8. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.


- This appliance is not intended for use by persons (Including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.

<p>Do not remove the plug from the socket try pulling the cable or the appliance itself.</p> 	<p>Do not run the appliance over the power cable.</p> 	<p>Do not the appliance to vacuum lighted matches, cigarette ends or hot ash.</p> 
<p>Do not use the appliance on wet surfaces.</p> 	<p>Do not use the appliance when it is upright)</p> 	<p>Do not use the appliance to vacuum needles, drawing-pins or sting.</p> 

ASSEMBLING THE VACUUM CLEANER

 -Always remove the plug from the power socket before fitting or removing accessories.

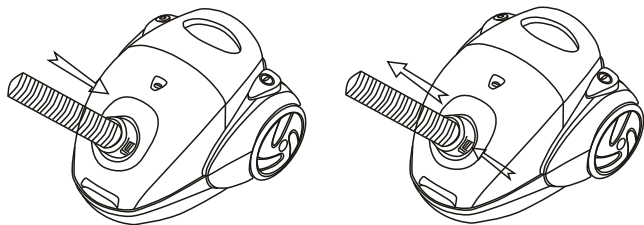


Fitting the flexible tube

Insert the flexible tube into the air intake duct on the appliance. To do this, slide the intake duct cover insert the tube and press until it clicks into position.

Removing the flexible

Remove the plug from the power socket. To release the flexible tube, press the button on the end of the tube firmly the air intake duct.

 Fitting the extension tubes and accessories

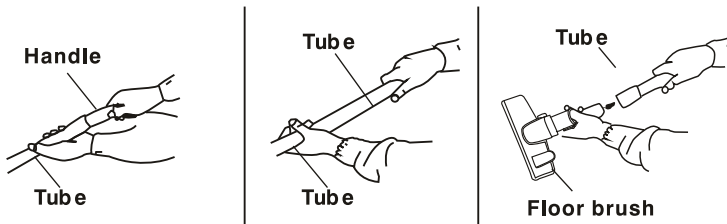

Removing the extension tubes and accessories

 
To remove the accessories, pull firmly apart.

INSTRUCTION FOR USE

- Before using the appliance, unwind length of cable and insert the plug into the power socket. A YELLOW mark on the power cable shows the ideal cable length, do not extend the cable beyond the RED mark, to rewind the power cable, press the rewind button which on hand, and guide the other hand to ensure that it does not whip causing damage. If the power cable can't rewined completely. Please pull out the power cable a little bit and press the rewinder button again. You can repeat the rewinding

steps until the cable is rewinded completely.

- Press the ON/OFF button to switch the appliance on.

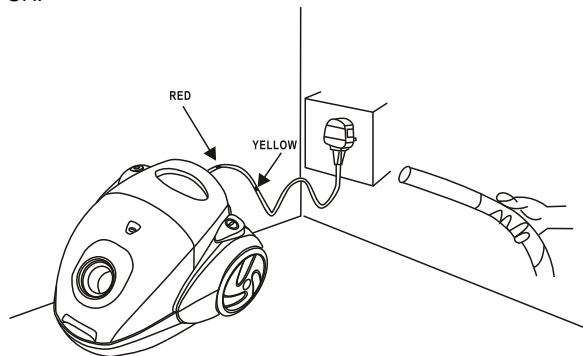


HOW TO CLEAN THE DUST CABIN

- Press the locking block to open the front cover.
- Pull out the dust bag by holding the card. Put back a new or clean bag.
- Paper dust bag can't be reused; cloth bag can be reused after cleaning.

ATTENTION: the opening of the cloth bag must be completely closed by the clip.

 
- Close the cover

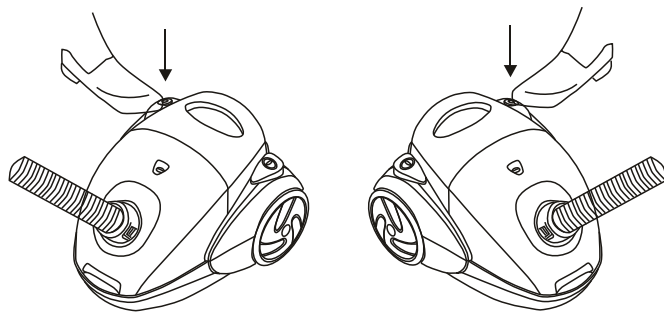

MAINTENANCE

When the motor filter is dirty, remove the filter and wash carefully in liquid or water. Allow the filter to dry completely before replacing it.

 
1. To clean or replace the air outlet filter, first detach the grille by pulling firmly away from the appliance.
2. Remove the filter from the appliance. Clean or replace the filter. The filter should be washed regular under the tap and allowed to dry before replacing it in the filter grille.
3. Replace the filter every 2-3 months, depending on how for quantity is used.

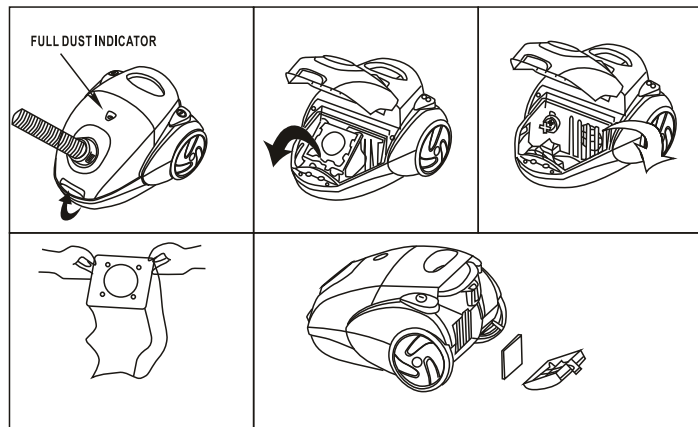


USING THE CLEANING ACCESSORIES

Dual-Position carpet/floor brush.

 1. Bristles extended, for hard floors.

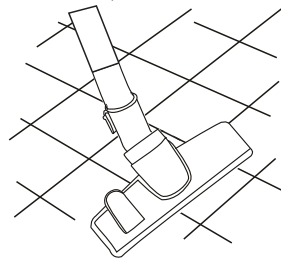


 2. Bristles shrinkled, for carpets

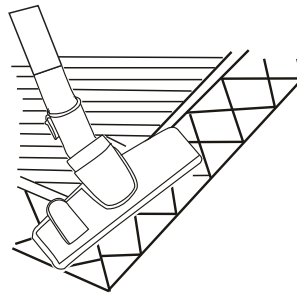


Narrow Nozzle

 For cleaning radiators, corners, edges, drawers etc.

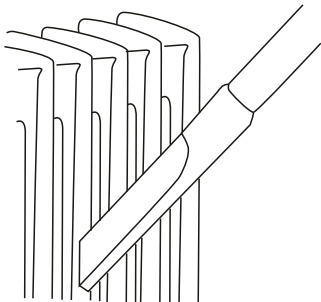

Small Brush

 For cleaning curtains, shelves, books, lamps and other delicate objects.

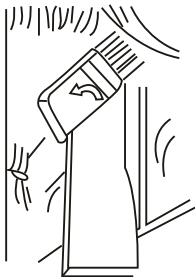

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Terms and Conditions:

1. This warranty is void if:
 - a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.

5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Manufactured for & Marketed by :

Lifelong Online Retail Private Limited

For queries and complaints:
please contact: customercare@lifelongindia.com
www.lifelongindiaonline.com

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 1 Year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log onto to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.