 


lifelong

HOME

MAKING IT POSSIBLE

Stromix Bagless Vacuum Cleaner

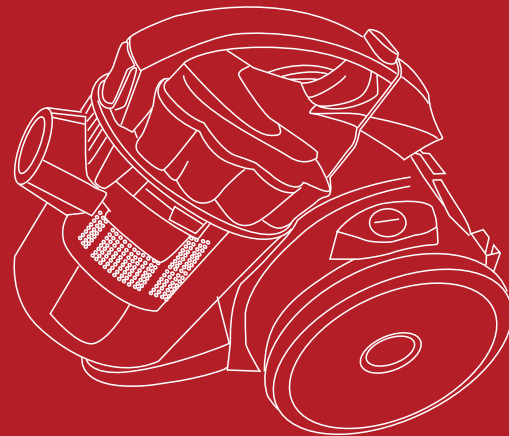

Powerful
Suction Motor
1200 W



Compact &
Portable Design



Long Range Of
Cleaning



Wide Range
Of Accessories



Re-usable
Dust Bag

 


Removable and
Washable Filter

**1 YEAR
WARRANTY**

THE DESCRIPTION AND INTRODUCTION

- A. **Floor Brush**
- B. **Tube**
- C. **Airflow Control**
- D. **Bend Tube**
- E. **Hose**
- F. **Hose Guider**
- G. **Handle**
- H. **Cord Rewind Button**
- I. **Power Button**
- J. **Dust Cup Clip**
- K. **Multi - Cyclonic Plastic Filter**
- L. **2-in-1 Nozzle**
- M. **Sofa Brush**

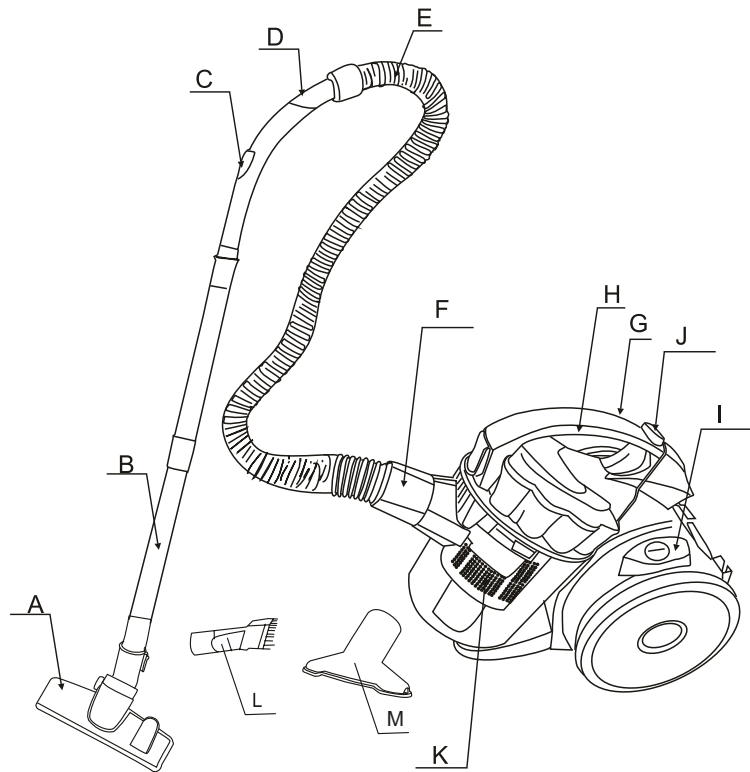

SAFETY INSTRUCTIONS

Please read all instructions carefully before using:

 
1. Do not use outdoors or on wet surfaces.
2. Do not touch the power cord or plug with wet hand.
3. Do not use the appliance to vacuum inflammable substances, like cigarette and hot ashes.
4. Keep the openings free to avoid blockage, like hair, loose clothing that may reduce air flow.
5. Turn off the control before unplugging.
6. Always turn off the appliance after using.
7. Never allow children to use this appliance.
8. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

ABOUT DEVICE


It features exquisite appearance, graceful in color, reasonable in internal structure. This is cyclone vacuum cleaner with foot push switch and automatic wire rolling button on it, and also have many absorbing attachments.

Its absorb power is controlled by electronics and it features low noise and high efficiency. It makes your life comfortable if you choose this machine.


1. After using, don't pull the power cable when you want to stop the power.

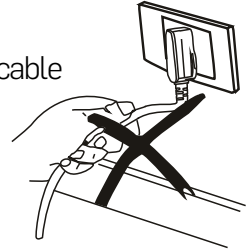

 2. Don't run the appliance over the power cable when operating.

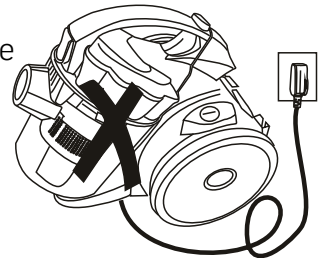

 3. Don't absorb the burning cigarette.

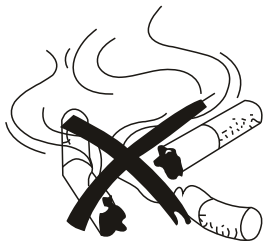


4. Don't absorb water or other liquid.



5. Don't absorb sharp things or too heavy things.




 
5. Don't place it near the heat source.

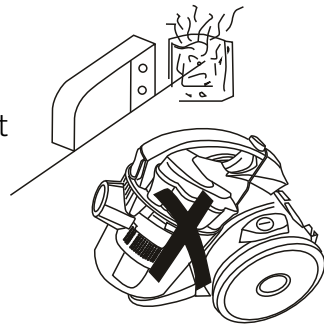


HOW TO USE

1. Preparation

  - Let the end of the hose insert into the air intake socket clockwise 90° until clicking position.
- After using, turn the hose with anti-clockwise 90° and pull the end out.

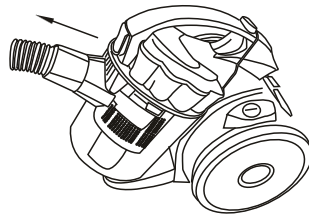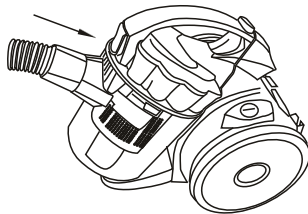

 
- Fit the extension tube to the handle, tube and tube to floor brush as showing in the picture.

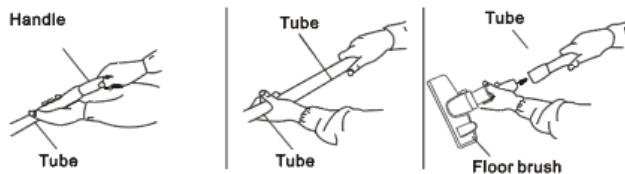

2. Using the machine


Pull out the wire to suitable length, insert the plug into power socket. Press the switch to run the machine. The vacuum cleaner begins to work. The part, which can adjust wind volume, is on the handle.

 ATTENTION: Don't extend the cable beyond the RED mark.

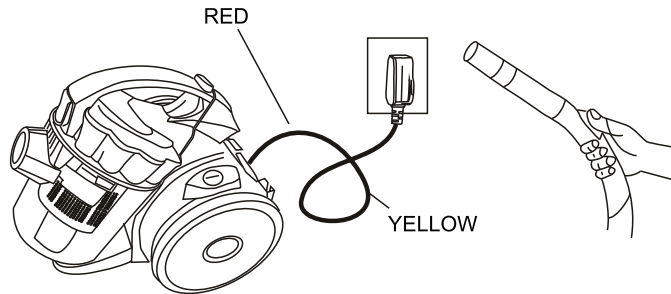


3. Using accessories

 - Floor brush for both hard floor & carpet using.

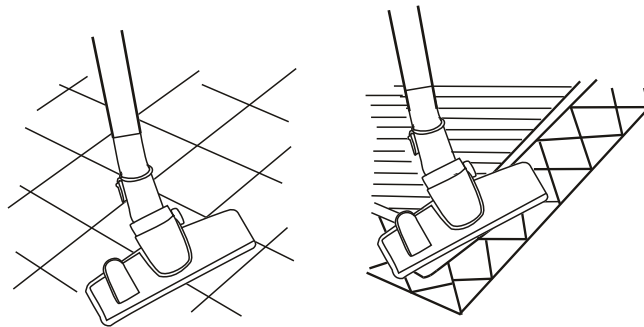

 - The narrow nozzle is for cleaning corners, edges of drawers, curtains, lamps and clothing etc.

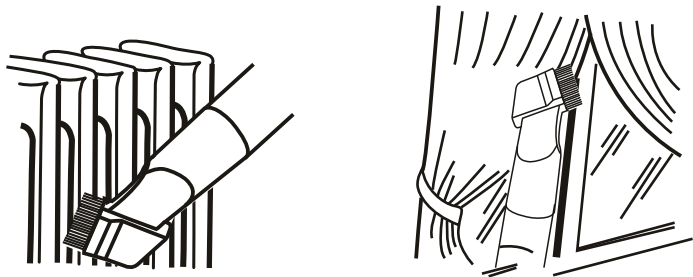


3. After using

- Press On/Off switch to stop the machine, and press the cord-rewinder button to roll back the wire steadily.


ATTENTION: If the power cable can't rewind completely, please pull out the power cable a little bit and press the cord-rewinder button again. You can repeat the rewinding step until the cable is rewind completely.

 - After using, you can put them as showing in the picture.

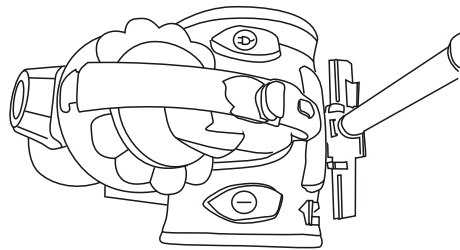


REPLACING THE DUST-CUP

 - When the dust reach to the Max Board Line Level in the dust-cup, it means dust-cup is full. At this moment, dust-cup should be emptied or the multi-cyclonic plastic filter should be washed.

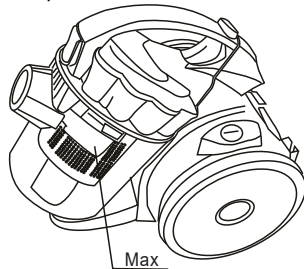


- Open the dust-cap as showing in the picture.

 
Step 1:

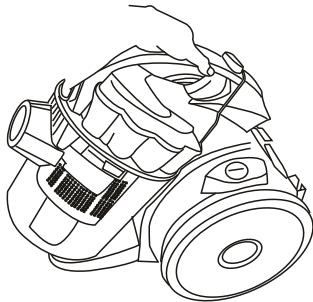

 Step 2:

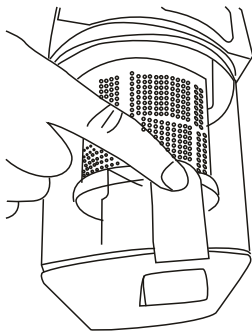


 Step 3:

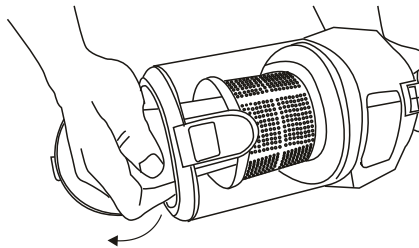

MAINTENANCE

 - The multi-cyclonic plastic filter should often be washed in order to avoid barrier.
- When the multi-cyclonic plastic filter is full of dust, it should be washed.

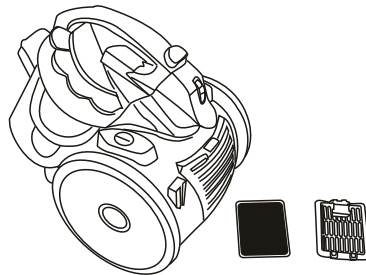

ATTENTION: Don't wash the filter in the washing machine or dry it with electrical heater, please refix it after drying the filter in the air.

- Don't clean the outer-shell of vacuum cleaner in petrol oil-like liquid. Please rub it with water and soft soap liquid.

ATTENTION:

- Don't clean the machine with the cloth full of water. Don't let the water flow into the vacuum cleaner.

- Use only as described in manual. Only use manufacturers recommended attachments.

- This appliance is intended to normal household use.

- This appliance is not intended for using by young children or inform person without supervision. Young children should be supervised to ensure that they do not with the appliance.

If the supply cord of vacuum cleaner is damaged, it must be replaced by the manufacturer or the qualified/authorized person in order to avoid a hazard.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities of lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE APPLIANCE.

Terms and Conditions:

1.This warranty is void if:

- a. The completely filled warranty card is not presented at the time of servicing the product.
- b. The product is not operated according to the instructions given under the user manual.
- c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
- d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
- e. Product label specifying the model number, serial number and production code has been removed and altered.
- f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
- g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
- h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.

2. Repairs or replacements will be carried out by authorized service provider.

3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.

4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.

5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.

6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.

7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.

8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not reply on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Manufactured for & Marketed by :

Lifelong Online Retail Private Limited

For queries and complaints:

please contact: customercare@lifelongindia.com

www.lifelongindiaonline.com

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from them date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 1 Year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log onto to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.