

LifeLong

KITCHEN

MAKING IT POSSIBLE

# 250W Electric Chopper



250W  
Powerful  
Motor



Stainless  
Steel Blades



Sealed Lid  
Cover For  
Easy Storage



Transparent  
Chopping  
Bowl



One-Touch  
Button For  
Quick Chopping

---

**1 YEAR**  
**WARRANTY**

---

Welcome to the Lifelong family

Dear Customer,

Congratulations on purchasing Lifelong Electric Chopper and a warm welcome to the Lifelong family. At Lifelong, we take pride in developing quality products for your home, health and happiness. Through constant innovation in our products, we have been able to develop a wide spectrum of products across Home, Kitchen, Grooming and Wellness categories. We strive to enrich the lives of the modern consumer every day.

Keeping that in mind, we have offered all our products at a fair and honest price.

We hope that the Electric Chopper serves you and your family's needs without any hassles.

Thanks again for becoming a part of the Lifelong family. Enjoy using the product!

Warm Regards,  
Team Lifelong

### IMPORTANT SAFEGUARDS

The use of this electrical appliance requires following safety rules to be followed:

- Always ensure to unplug the machine from the power outlet before putting on or removing the blades, and before cleaning.
- Place/remove the blade on the Stainless Steel pin of chopper bowl carefully to avoid injury to hands.
- Ensure that Stainless Steel blade/Whisking disc has been placed properly before operating the chopper.
- Do not use your Lifelong Chopper without bowl cover in place.
- Supervise your Lifelong Chopper closely while in use.
- Do not operating the Lifelong Chopper while empty.
- Never place any cloth or plastic sheet under the basic unit, as it may get sucked up and block the ventilation holes in the base during operation.
- Never use attachments other than those provided.
- Never touch the moving parts- blades or disc with your hands or any other object while the chopper is in operation to avoid personal injury or any damage to the appliances.
- The bowl may heat up during dry operation due to friction (it has nothing to do with the motor). Let it cool for a few seconds and then remove.
- Never wash or immerse the motor unit in water. Clean it with a soft damp cloth.

- Clean bowl only with a brush and never with any metal object such as knives, spoons, etc.


### **USING YOUR CHOPPER**

- Slide chopping blade inside the bowl on Stainless Steel pin. Put ingredients to be processed in the bowl.
- Place bowl cover on bowl, make sure it fits properly into slot of bowl. Place the motor Unit on the bowl cover.
- Plug the unit & check by pressing the button on the operating Motor Unit, that Stainless steel. Blade/Whisker is properly located into drive spindle. Your Chopper is ready for use.
  
- Press the Operating button the on Motor Unit, in short intervals to see the consistency you need.
- Do not run the unit for long duration as the motor is designed for a maximum run of 60 seconds at one go. Most of the function, like, making puree, chopping, whisking, takes 15-30 sec. max.
- Some foods & vegetables may discolor the plastic. To remove this rub with a cloth dipped in vegetable oil immediately after finishing your job.
- Ensure that all the components are dry before the Chopper.

### **UNPACKING YOUR CHOPPER**

Carefully unpack your chopper, as blades are very sharp.

## PARTS IDENTIFICATION

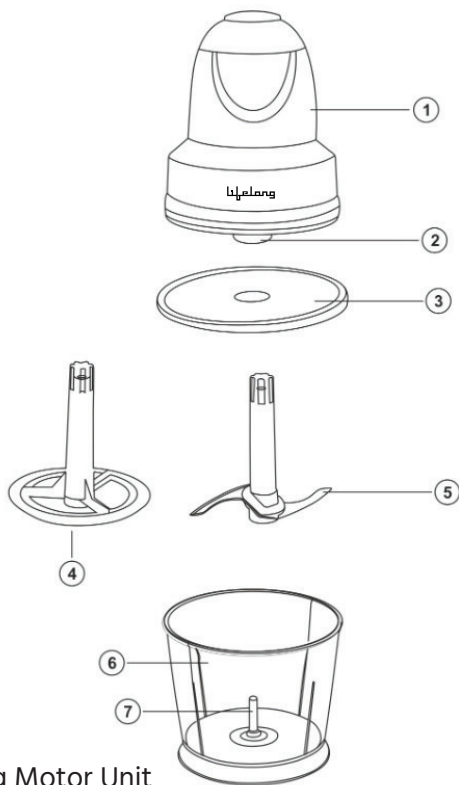

1. Operating Motor Unit
2. Drive Spindle
3. Bowl Cover
4. Whisking Disc
5. Stainless Steel. Blade Moulded
6. Bowl
7. Stainless Steel Pin

## OTHER SAFETY CONSIDERATIONS

- To protect against fire, electric shock and personal injury do not immerse cord, plug or body in water or other liquid.
- Do not operate any appliance with a damaged cord or plug or in case the appliance malfunction.
- Do not use accessories not recommended by the manufacturers as there is the danger of fire, electric shock or personal injury.
- Do not place any part of chopper on or near a hot gas or electric burner or in a heated oven.
- Do not allow children to use this Chopper. Children are vulnerable in the kitchen particularly when unsupervised.
- The power cord should reach the plug points without straining the connections.
- Do not let the power cord hang over the edge of a worktop where a child could reach it.
- Do not let the cord run across an open space e.g between a low socket and table.
- Do not let the cord run across a cooker or toaster or other hot area which might damage the cable.

## TECHNICAL SPECIFICATIONS

|                   |                                       |
|-------------------|---------------------------------------|
| Input             | 250W, 230V,50Hz AC                    |
| Rating            | 1 Minute Maximum Continuous           |
| Speed Control     | PUSH START - SINGLE SPEED             |
| Motor Speed (RPM) | 3600 (approx) - No Load               |
| Weight            | 0.9 Kgs approx                        |
| Capacity of Bowl  | 750 ml. max. (Depends on Ingredients) |

## Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

### Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: \_\_\_\_\_

Model: \_\_\_\_\_

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: [customercare@lifelongindia.com](mailto:customercare@lifelongindia.com)

### Customer Details

Name: \_\_\_\_\_

Address: \_\_\_\_\_

Home Number: \_\_\_\_\_

Office Number: \_\_\_\_\_

E-mail Address: \_\_\_\_\_

### Product Details

Model No.: \_\_\_\_\_

Serial No.: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Invoice Number: \_\_\_\_\_

Online Site: \_\_\_\_\_

Please log onto to [www.lifelongindiaonline.com](http://www.lifelongindiaonline.com) and complete the online warranty form with your personal and product details within 14 days.



## Terms and Conditions:

1. This warranty is void if:
  - a. The completely filled warranty card is not presented at the time of servicing the product.
  - b. The product is not operated according to the instructions given under the user manual.
  - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
  - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
  - e. Product label specifying the model number, serial number and production code has been removed and altered.
  - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
  - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
  - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorized service provider.
4. All expenses incurred in collecting the unit(s) or part(s) thereof from authorized service provider as well as any other expenses and incidentals will be borne by the consumer.
5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranties, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the laws.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Manufactured for & Marketed by :

**Lifelong Online Retail Private Limited**

For queries and complaints:  
please contact: [customercare@lifelongindia.com](mailto:customercare@lifelongindia.com)  
[www.lifelongindiaonline.com](http://www.lifelongindiaonline.com)