ومملعهنا KITCHEN

MAKING IT POSSIBLE

Electric Kettle, 1.8 Litres











Instant Noodles







Dry-Boiling Protection

Light Indicator

Cool Touch Handle Soup and

Level Indicator

GENERAL SAFETY INSTRUCTIONS

- Before commissioning this device please read the instruction manual carefully.
- Please keep these instructions, the carton with the inner packaging.
- The device is intended exclusively for private and not for commercial use.
- Always remove the plug from the socket whenever the device is not in use, when attaching accessory parts, cleaning the device or whenever a disturbance occurs. Switch off the device before hand. Pull on the plug, not on the cable.
- In order to protect children from the dangers of electrical appliances, never leave them unsupervised with the device. Consequently, when selecting the location for your device, do so in such a way that children do not have access to the device. Take care to ensure that the cable does not hang down.
- This appliance can not be used by the persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by the person who is responsible for their safety. Children should be supervised to keep away from this appliance and forbid to play with it.
- Test the device and the cable regularly for damage. If there is a damage of any kind, the device should not be used.
- Do not repair the device yourself, but rather consult an authorized

expert.

- For safety reasons, a broken or damaged mains lead may only be replaced by a qualified person.

Keep the device and cable away from heat, direct sunlight, moisture, sharp edges and such.

- Never use the device unsupervised! Switch off the device whenever you are not using it, evenn if this is only for a moment.
- Use only original accessories.
- Do not use the device outdoors.
- Under no circumstances, the device should not be placed in water or other liquid, or come into contact with such.
- Do not use the device with wet or moist hands.

Should the device become moist or wet, remove the mains power from the socket immediately.

- Do not reach into the water.
- Use the device only for the intended purpose.
- The kettle is only to be used with stand provided.

Warning: If the kettle is overfilled, boiling water may be ejected. If the supply cord is damaged, it must be replaced by qualified

persons in order to avoid a hazard.

- Use only cold water when filling.
- The water level must be between the MAX and MIN marks.
- Switch the machine off before removing it from the base.
- Always ensure that the lid is tightly closed.
- The base and exterior of the machine must not become wet.
- The kettle body used must be match with the kettle base.

FIRST USE OF MACHINE

Before using the machine for the first time water should be boiled in it twice without any addictives.

- 1. Fill the kettle with water. Do not overfill, use the water lever indicator.
- 2. Place the kettle flush on the base.
- 3. Electrical connection.
- Check whether the electrical voltage that you intend to use is the same as that of the machine. Details are to be found on the label on the base.
- Only connect the machine to a property installed 220-240V / 50 Hz safety socket.
- 4. Switch the machine to position "1" or "0N". The control lamp on the water level indicator shows that the water is being boiled.

- 5. After boiling the machine switches off automatically. Disconnect the machine from the electricity supply. Do not press up the lid when pouring.
- 6. This appliance is intended to be used in household and similar applications such as:
- Staff kitchen area in shops, offices and other working environments:
- Farm Houses:
- by clients in hotels, motels and other residential type environments:
- bed and breakfast type environments.

CLEANING

Always remove the plug from the power supply before cleaning the machine.

The exterior of the machine should be cleared, if necessary, with a slightly damp cloth without addictives.

The calcium filter can be removed for cleaning.

Power Supply: 220-240V / 50 Hz, 1500 W

Consumer Warranty Card

Dear Customer.

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

...

them date of purch	ımer products are covered against manufacturing defects from
	hase receipt is necessary for warranty verification. ustomercare@lifelongindia.com
Address: Home Number: _ Office Number: _	ils
Serial No.: ————————————————————————————————————	

Please log onto to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.

Terms and Conditions:

- 1. This warranty is void if:
 - a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - C. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood. accident, negligence or improper handling.
 - d. Product has been damaged due to installation. repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains. scratches, dents on the casing or paintwork of the product
 - Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use
- 2. Repairs or replacements will be carried out by authorized service provider.
- 3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
- 4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as will as any other expenses and incidentals will be borne by the consumer.

- 5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied. warranty and all warrantied conditions or other terms. implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the lass.
- 6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
- 7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
- 8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not reply on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Manufactured for & Marketed by :

Lifelong Online Retail Private Limited

For gueries and complaints: please contact: customercare@lifelongindia.com www.lifelongindiaonline.com