


Lifelong

HOME

MAKING IT POSSIBLE

Lifelong  
**Aqua Max 8.5 Kg**  
Semi Automatic  
Washing Machine

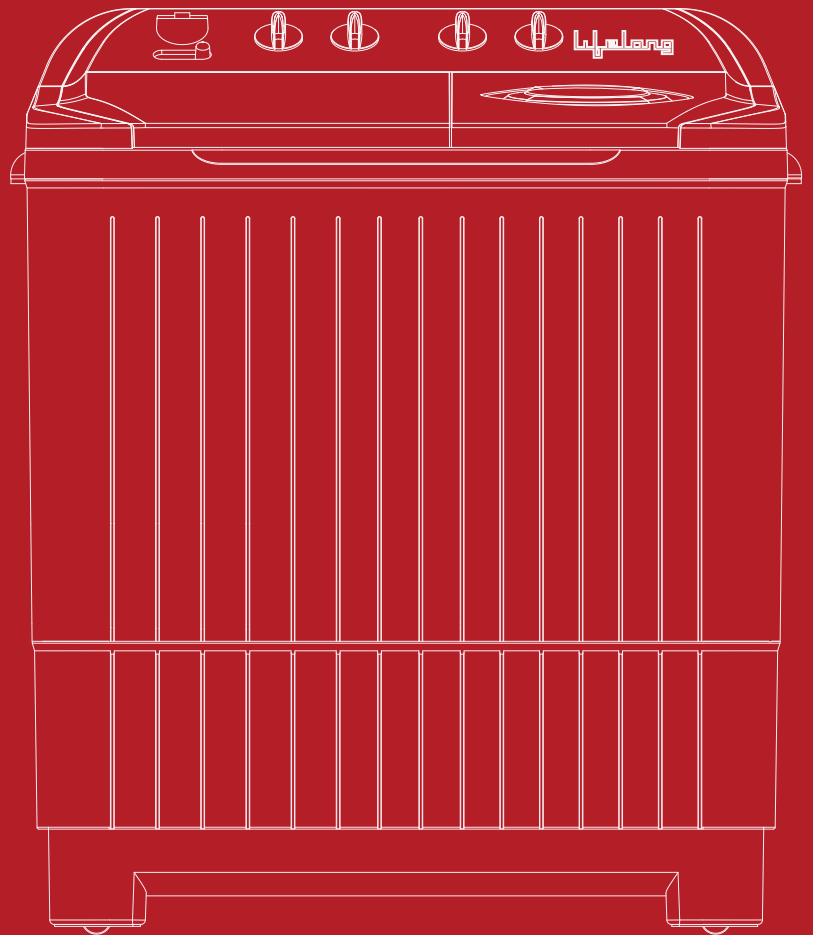

Buzzer



3 Wash  
Programs



 
Large  
Capacity  
Tub



Powerful  
Motor



Anti-  
Rust Body



**CONTENTS**

1. PARTS IDENTIFICATION ..... 1

2. SAFETY MEASURES ..... 2

3. CONTROL PANEL INFORMATION / PACKING LIST ..... 3

4. WASHING PROCEDURES ..... 4

5. RINSING & DRYING ..... 5


6. CLEANING MACHINE ..... 6

7. TROUBLESHOOTING GUIDE ..... 7

8. SPECIFICATIONS / CIRCUIT DIAGRAM ..... 8

9. MAINTENANCE ..... 9

## PARTS IDENTIFICATION

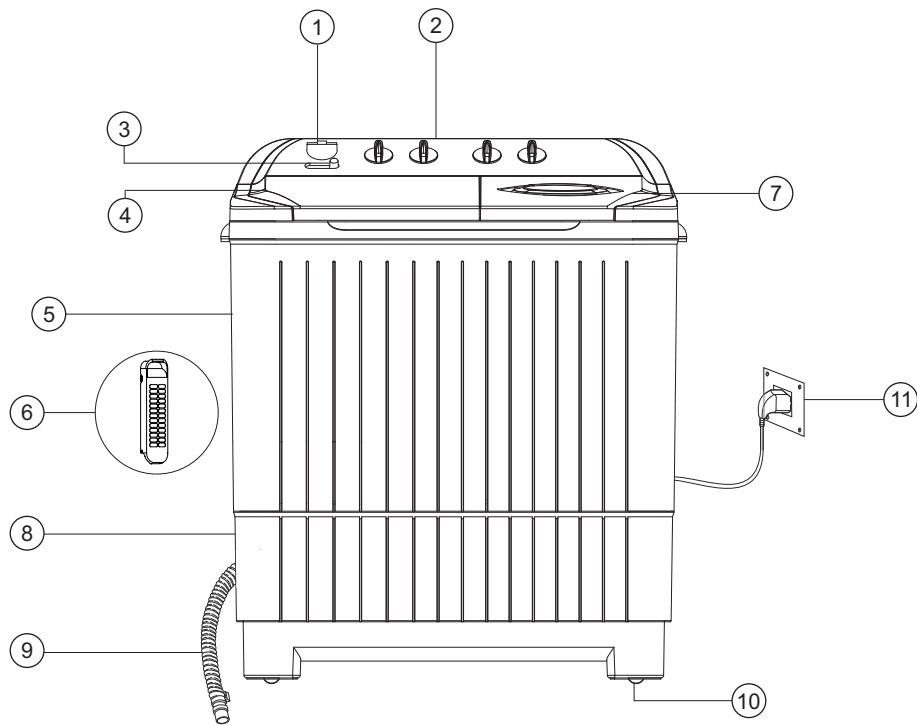

① Water Inlet

② Control Panel

③ Water Selector

④ Wash Lid

⑤ Tub

⑥ Magic Filter

⑦ Spin Lid

⑧ Base

⑨ Drain Pipe

⑩ Castor Wheels

⑪ Power Cord

Note : Graphics and Images shown in manual may differ than actual product, it is for reference only.


## SAFETY MEASURES

Observe the following guidelines for the durability of the washing machine and safety problems.

- Do not expose the washing machine to direct sunlight or rain



- Do not install the washing machine around a damp place.

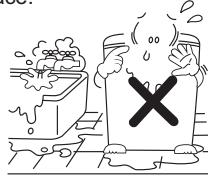


- Do not sprinkle water over the control panel switches.




- Do not plug many cords in one outlet at the same time.



- When plugging out the power cord, do not hold the wire.

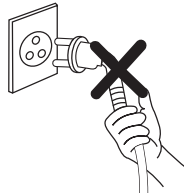

- Keep children away from the washing machine.

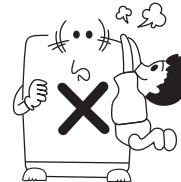


- Keep the Machine away from fire or heat source.



- Do not pour caustic soda & bleach over the washing machine. It causes damage to the rubber parts.



- Do not pour water with a temperature exceeding 50° C into the tub.

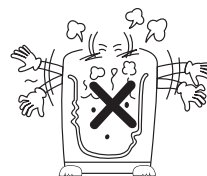

- Make sure of closing the lid, particularly during spinning.




- Do not put your hands into the rotating tub.



- Let water drain away from the drain hose thoroughly.



## CONTROL PANEL INFORMATION

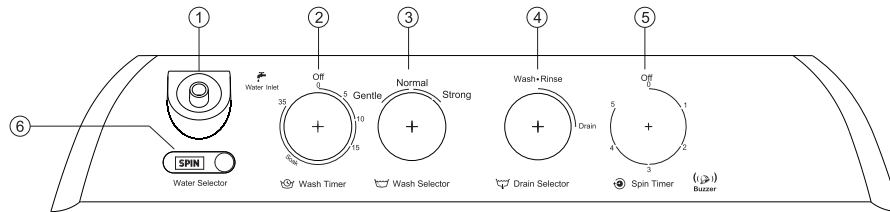

1. WATER INLET
  - This is used to fill water.
2. WASH TIMER
  - This is used to set Wash Timer for washing clothes. Put Clothes in wash tub with water and detergent.
  - Select timer for time period required from 0-35 minutes.
  - For the first 20 minutes Soak / Rinse will work after that clothes will be washed for 15 minutes.
  - A buzzer sound shall indicate the end of wash period.
3. WASH SELECTOR
  - Select Wash option from given programs ( Gentle / Normal / Strong).
4. DRAIN SELECTOR
  - This is used to select Wash / Rinse or drain.
5. SPIN TIMER
  - This is used to set Spin timer for 0-5 minutes.
  - After Washing load clothes into spin tub to spin.
6. WATER SELECTOR
  - This is used to direct water supply into Wash Tub or Spin Tub
  - \*note : do not keep Water Selector in mid position. This may damage electrical parts.


## PACKING LIST

| Name                     | Quantity |
|--------------------------|----------|
| Twin-tub Washing Machine | One unit |
| Spin Dry Safety Cover    | One unit |
| Inlet Pipe               | One unit |
| User Manual              | One unit |
| Drain Pipe               | One unit |
| Drain Pipe Spring        | One unit |


## WASHING PROCEDURES

### A) Washing

- Before start washing, check the following;
  - Connect the water supply hose and open the water tap.
  - Connect the power cord to the power supply outlet.
  - Lay the drain hose down toward a sinkhole.
- Set the WASH SELECTOR KNOB to the desired mode.
  - Set from options Gentle, Normal and Strong.
- Set the DRAIN SELECTOR KNOB to 'WASH/RINSE'.
- Set the WATER SELECTOR KNOB to 'WASH'.
- Load laundry in the wash tub.

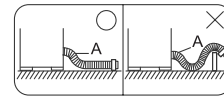

DRAIN HOSE POSITION

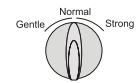


WASH SELECTOR




DRAIN SELECTOR



WATER SELECTOR

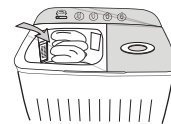

- Fill water in the wash tub and add the detergent.

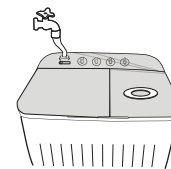


- Set the WASH TIMER.


- Set the Wash Timer 1-35 min.
- (Set the Wash Timer to a point between 15 to 35 mins for soak function).

#### SOAK FUNCTION

If the WASH TIMER is set to a point between "15" to "35", the washing machine start the wash, after the soak (20 mins) is completed.

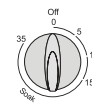

WASH TIMER

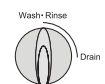


DRAIN SELECTOR

- After washing, set the DRAIN SELECT OR KNOB to 'DRAIN' for drain.

## RINSING & DRYING

### A) Rinsing

1. Set the DRAIN SELECTOR KNOB to WASH/RINSE
2. Supply the proper amount of water as not to overflow the top of the washing tub.
3. Set the WASH TIMER 2~3 minutes.
4. Drain the water. Set the DRAIN SELECTOR KNOB to 'DRAIN'.
5. Repeat this cycle until drain water is clean. (2~3 cycles).
6. Be sure to lay the drain hose down.

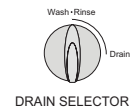




### B) Additional Rinse

1. Load Laundry
  - Load the laundry evenly into the spin basket.
2. Set DRAIN
  - Set the WATER SELECTOR KNOB to SPIN(a) and DRAIN SELECTOR KNOB to 'DRAIN'(b)
3. Supply Water
  - Supply water for about 1 minute.
  - Adjust the water flow to prevent overflow from the wash tub.
4. Safety Cover
  - After stopping water supply, cover the laundry with safety cover and close the inner lid.
5. Close the spin dryer
  - Close the spin dryer lid.
6. Set SPIN TIMER
  - Set the SPIN TIMER for 2~3 minutes.



### C) Drying

1. Transfer the clothes into the spin basket and arrange clothes evenly .
2. Be sure to attach the safety cover and close the inner lid.
3. Close the spin dryer lid.
3. Set the SPIN TIMER
  - Set timer between 1~5 min for drying.

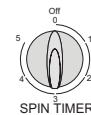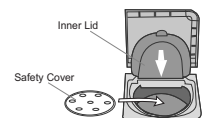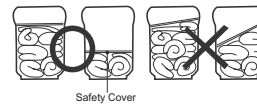


## CLEANING MACHINE

### A) Cleaning MAGIC FILTER

1. Push the upper part of the Magic filter and pull in.




2. Open the cover as shown in figure

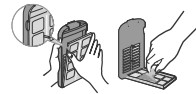

3. Clean the Magic Filter



4. Close the cover and insert the lower 'A' part of the filter in the basket first and push the filter from upper part 'B' with "click" sound.

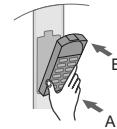

### B) Cleaning the WASH TUB

- Wipe off stains on the cabinet and operation panel with soft cloth.
- Do not use benzene, thinners, cleanser, or wax, nor scrub the washing machine with a brush. Painted surfaces or plastic parts will be damaged.
- When cleaning don't spray water directly to the parts of the washer. It may make its life span shorter. Also and electric shock or fire may take place.

## TROUBLESHOOTING GUIDE

Before you call for a technician or send the machine for repair, please check from this troubleshooting lists.


\*Do not attempt to repair the machine by yourself. Please contact the authorised service center.

| TROUBLE   | CHECKPOINT   |
|---|--|
| The washing machine does not work.                  | <ul style="list-style-type: none"><li>• Is the power supply cord connected to a power outlet?</li><li>• Is the power cut ?</li><li>• Is the pulsator tangled with something?</li></ul>   |
| Unable to drain                                     | <ul style="list-style-type: none"><li>• Has the Drain Hose been lowered?</li><li>• Is the Drain Hose blocked?</li><li>• Is the Drain Hose kinked?</li></ul>  |
| Abnormal sound during wash.                         | <ul style="list-style-type: none"><li>• Are there any loose articles in the Wash Tub?</li></ul>  |
| Incomplete spinning (Severe vibration or unbalance) | <ul style="list-style-type: none"><li>• Are the laundry arranged evenly?</li><li>• Is the machine being placed on a flat and solid ground?</li><li>• Are there any clothes dangling on the Spin Tub?</li><li>• Are there too many laundry in the Spin Tub?</li></ul> <p>- See "C) Drying...." on page 4.</p> |

## SPECIFICATIONS

|                          |                       |
|--------------------------|-----------------------|
| Model                    | LLWM02                |
| Max. Rated Capacity      | 8.5 kg                |
| Power Supply             | 230V / 50Hz           |
| Power Input              | 520W/190W             |
| Power Output             | 180W/70W              |
| Net Dimension (W×D×H) mm | 830(W)X485(D)X1035(H) |
| Net Weight               | 24.0 kg               |
| Water Capacity High      | 77 Ltr                |
| Water Capacity Low       | 60 Ltr                |
| Castor                   | Yes                   |
| Buzzer                   | Yes                   |
| Wash Timer               | 35 min.               |
| Soak                     | Yes                   |
| Spin Timer               | 5 min.                |
| Wash Program             | 3 Programs            |

## CIRCUIT DIAGRAM

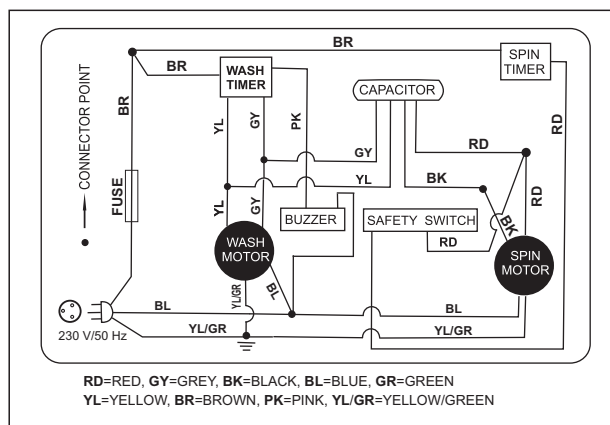


## MAINTENANCE

### \*Note

Please unplug the power supply cord before clean-up.

 1. After you have washed the clothes, keep the door of machine open to let the moisture and dampness dry out. If you have washed very greasy and dirty load, make sure to clean the machine and tub with a damp cloth to remove any slimy build up.
2. There will be lint left behind in the Magic Filter after each use which need to be cleaned frequently to maintain its top performance.
3. Clean the machine with a soft damp cloth.
4. Do not spray water directly onto the machine.
5. Do not use petroleum-based detergent to clean the machine.
6. Overloading the machine may stop your laundry from washing properly, unbalance the machine and reduce spin efficiency.  
Take particular care when washing heavier or bulkier items such as towels or bedding.





Thank you for using our washing machine.  
Please tell us troubles found during using it.  
Send your suggestions for improvement.