


Manufactured for & Marketed by :

**Lifelong Online Retail Private Limited**

For queries and complaints:  
please contact: [customercare@lifelongindia.com](mailto:customercare@lifelongindia.com)  
[www.lifelongindiaonline.com](http://www.lifelongindiaonline.com)

**Lifelong**

## Regalia Hand Mixer

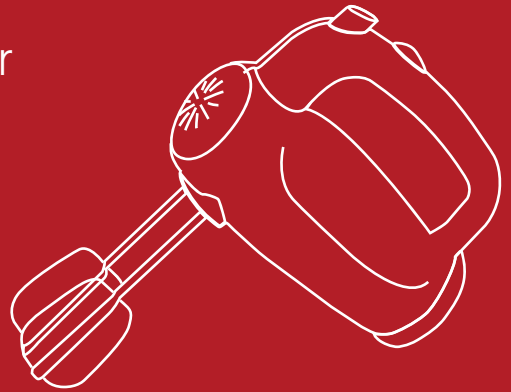

Speed  
Controls



Multiple  
Bearers



Copper  
Motor



Overheating  
Protection



Food Grade  
Plastic Body

**1 YEAR  
WARRANTY**

## INTRODUCTION:

Welcome to the Lifelong family.

Dear Customer,

Congratulations on purchasing Lifelong Hand Mixer and a warm welcome to the Lifelong family.

At Lifelong, we take pride in developing quality products for your home, health and happiness. Through constant innovation in our products, we have been able to develop a wide spectrum of products across Home, Kitchen, Grooming and Wellness categories. We strive to enrich the lives of the modern consumer every day. Keeping that in mind, we have offered all our products at a fair and honest price.

We hope that this Hand Mixer serves you and your family's needs without any hassles.

Thanks again for becoming a part of the Lifelong family. Enjoy using the product!

Warm Regards,

Team Lifelong

## IMPORTANT SAFETY INSTRUCTIONS:

When using an electrical appliance, basic precaution should always be taken, including the following:

1. Unplug, when not in use and before servicing.
2. To reduce the risk of electric shock, do not use near or on wet surfaces.
3. Use the appliance only as described in the manual.
4. Do not use the appliance if cord or plug is damaged or worn out. Replace the damaged cord or plug immediately.
5. Do not try to service the appliance on your own. Send it to an authorized service center only.
6. Keep the cord away from heated surfaces.
7. Do not unplug the appliance by pulling the cord. Always unplug by pulling the plug and not the cord.
8. To avoid electric shocks, do not use the appliance with wet hands.
9. Keep hair, loose clothing, fingers and all parts of body away from moving parts.
10. Turn all controls off before unplugging.
11. This appliance is suitable for indoor use only.
12. Keep away from children.

13. The appliance is not designed to be used by people who are physically or mentally disabled or lack relevant experience and knowledge, unless a person responsible for their safety uses the product for supervision or guidance.


## PRECAUTIONS:

- Do not disassemble, repair or alter the appliance on your own. It may cause appliance failure or breakdown.
- The input voltage must not exceed the rating; it might damage the appliance.
- Unplug before cleaning/moving the appliance.
- Do not use the appliance with damaged power cord or plug.
- If power cord is damaged, replace it with a genuine spare.
- Do not install or operate the appliance near any heat source, e.g., heater.
- If the appliance is not in use for a longer time, unplug it.
- Do not sit on, stand on or shake the appliance.

## PRODUCT FEATURES:

1. High performance blender comes with power of 150W.
2. It comes with 5 variable speed controls that helps in mixing ingredients.
3. In- built overheating protection.
4. It comes with powerful copper motor to ensure longevity.
5. Food grade plastic to maintain hygiene.
6. Equipped with multiple beaters & dough hooks.

## KNOW YOUR PRODUCT:

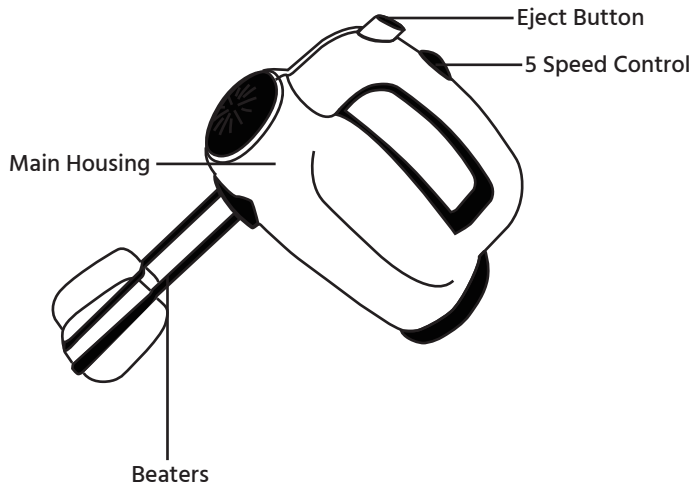

## USING HAND MIXER :

1. Remove any sticker that might prevent from operating the unit.
2. Check the unit for damages. Do not use in case of any damage.
3. Before switching on the appliance, make sure that your home's mains voltage corresponds to the unit's operating voltage.
4. Clean the parts of the Hand Mixer- 150 W before using the appliance for the first time (see 'Cleaning & Maintenance' section).
5. Make sure all parts are completely dry before you start using the appliance.

## HOW TO OPERATE:

1. Fit the Beaters or Dough Hooks into the sockets.
  2. Plug in the appliance.
  3. Hold the Hand Mixer handle. Lower the beaters or hooks into ingredients.
  4. Switch on and select the desired speed. It begins to mix the ingredients in the bowl.
  5. When you have finished mixing, stop the blender by pushing the Speed button to "0" at once.
  6. Wait until the beaters or hooks attached, have stopped rotating then pull out the hand-blender from the food item.
  7. Switch off the mains before you eject the beaters or hooks, or if changing them.
- Once ejected you can clean the beaters/hooks with water, dry them with soft cloth and store together with main body.

## MIXING GUIDE:

SPEED APPLICATION		DESCRIPTION
1	FOLD	This is a good starting speed for bulk and dry ingredients such as flour, butter and potatoes.
2	BLEND	Best speed to blend liquid ingredients for mixing salad dressings.
3	MIX	For mixing cakes, cookies and quick breads.
4	CREAM	For creaming butter and sugar, beating uncooked candy, desserts. etc.
5	WHIP	For beating eggs, making icings, whipping potatoes and cream, etc.

**Note:** Use hooks if you are mixing thick sticky flour. Use beaters if you are beating

## CLEANING & MAINTENANCE:

- Switch off and unplug the appliance before cleaning it.
- Eject the Beaters or Dough Hooks and clean them with a solution of lukewarm water & soap.
- Wipe the main unit with a moist cloth and non-abrasive liquid cleaner.
- Do not immerse the appliance in water or any other liquid.

- Never put any part of the appliance in the dishwasher.
- After cleaning it thoroughly, dry it using a soft cloth.
- Ensure that the appliance is completely dry before storing it Note: Never immerse the motor unit of the blender in water, or rinse it under the tap. Wipe it with a dry cloth.

## TROUBLESHOOTING:

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The appliance does not start	There is a connection problem.	Check if the appliance is connected to the mains and if the plug is inserted firmly into the wall socket.
	The appliance is defective.	Switch off the appliance and unplug it. Go to the nearest authorized service centre for assistance.
The appliance suddenly stops working while running	The appliance has overheated.	Let the appliance cool for 20 minutes before attempting to restart it.
	The appliance is over loaded.	Remove some ingredients, add some water and try again.
	The appliance is defective.	Switch off the appliance and unplug it. Go to the nearest authorized service centre for assistance.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The appliance makes lots of noise.	Beaters/hooks are not fitted.	Reinstall the beaters/hooks correctly.
	Problem with blender's inner drive broken.	Switch off the appliance and unplug it. Go to the nearest authorized service centre for assistance.
Motor does not work properly	Appliance washer defective.	Switch off the appliance and unplug it. Go to the nearest authorized service centre for assistance.
	Beaters/hooks not installed properly.	Reinstall the beaters/hooks correctly.

## Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

### Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: \_\_\_\_\_

Model: \_\_\_\_\_

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: [customercare@lifelongindia.com](mailto:customercare@lifelongindia.com)

### Customer Details

Name: \_\_\_\_\_

Address: \_\_\_\_\_

Home Number: \_\_\_\_\_

Office Number: \_\_\_\_\_

E-mail Address: \_\_\_\_\_

### Product Details

Model No.: \_\_\_\_\_

Serial No.: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Invoice Number: \_\_\_\_\_

Online Site: \_\_\_\_\_

Please log on to [www.lifelongindiaonline.com](http://www.lifelongindiaonline.com) and complete the online warranty form with your personal and product details within 14 days.

### Terms and Conditions:

1. This warranty is void if:
  - a. The completely filled warranty card is not presented at the time of servicing the product.
  - b. The product is not operated according to the instructions given under the user manual.
  - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
  - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
  - e. Product label specifying the model number, serial number and production code has been removed and altered.
  - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
  - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
  - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised service provider.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.
5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not withstanding the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.