ومملعهنا

Tandoor Grill



Manufactured for & Marketed by :

Lifelong Online Retail Private Limited

For queries and complaints: please contact: customercare@lifelongindia.com www.lifelongindiaonline.com







Grills in 5 - 8 min 1 YEAR WARRANTY

INTRODUCTION:

Welcome to the Lifelong family.

Dear Customer,

Congratulations on purchasing Lifelong Tandoor Grill and a warm welcome to the Lifelong family.

At Lifelong, we take pride in developing quality products for your home, health and happiness. Through constant innovation in our products, we have been able to develop a wide spectrum of products across Home, Kitchen, Grooming and Wellness categories. We strive to enrich the lives of the modern consumer every day. Keeping that in mind, we have offered all our products at a fair and honest price.


We hope that the Tandoor Grill serves you and your family's needs without any hassles.

Thanks again for becoming a part of the Lifelong family. Enjoy using the product!

Warm Regards,

Team Lifelong

DESCRIPTION OF PARTS:

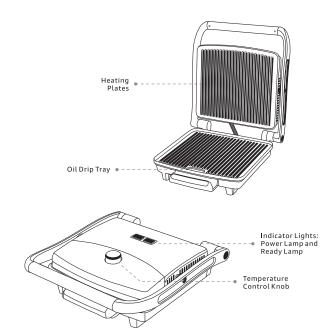

2

USING AND STORING:



Caution hot surfaces: This appliance generates heat and surface can develop high temperature. Only touch the appliance at the intended handles and gripping surfaces. Do not touch the exteriors of the appliance when in use as the metal surface will be very hot during the operation or immediately after use. The appliance must be given time to cool down after use

- Keep this instruction manual in a safe place for future reference.
- Users must read and understand the instructions provided in this booklet before
 operating or cleaning the appliance. Before plugging in, ensure that the voltage
 specified on the rating label of the appliance corresponds with the electricity voltage
 of the power source.
- This appliance is for household use only.
- Persons with reduced physical, sensory or mental capabilities should be properly instructed before being allowed to operate the appliance and should be supervised while they operate the appliance.
- Keep the appliance out of reach from children at all times. Close supervision is necessary when used near children.
- Do not let the power cord hang over the edge of the table/counter or touch any hot surface. If the plug cord is damaged, do not use the appliance.

In case of any repairs, replacement of cord or plug, or adjustments, please consult a technician.

Disconnect the plug from the power source before cleaning, while emptying and when not in use.

If the appliance falls or accidentally becomes immersed in water, disconnect the powersupply and unplug it from the wall outlet immediately. Do not try to reach out ortouch the appliance before disconnecting the power supply and removing the plug from the power source.

When using the appliance, ensure that there is adequate air space above and on all sides for air circulation. Keep the appliance at least 6" (15 cm) away from the wall. Place the appliance on a flat surface while operating. Never leave the appliance unattended.

USING THE APPLIANCE:

NOTE: For the first usage, let the appliance heat without putting any foodstuff on the heating plate for about ten minutes. The appliance may emit smoke or smell, this is harmless and normal for first time usage.

For each use:

- Uncoil the cable completely.
- Check if the heating plates are clean and dust-free. If necessary, wipe them with a damp cloth.
- Forthefirst usage, letthe appliance heat without any food for about ten minutes. There may be slight smoke or smell. This is normal and harmless.
- After connecting the plug into the rated voltage, the heating plate begins
 pre-heating and both the red and green lights will be illuminated at the same time.

Afterthe heating plate has reached the pre-set temperature (usually it will take about 2-4 minutes), thegreen light will go off and the appliance will be ready for cooking.

- During the operating process, the red light will be on as long as the power supply is connected.
- Lift the upper lid of the appliance and place the food on the lower heating plate. Close the appliance and the green light will go on. (During the grilling process the indicator light may go on and off due to automatic temperature control).
- Frozen food should be completely defrosted prior to grilling.
- If too much food is loaded onto the heating plate, the appliance will not close, you can slide the upper tray to try to close it but never use undue force as this could damage the appliance.
- Settheselector Knobaspervour required heating range (Min to Max).
- During grilling, excess fat may flow through the drain holes into the drip tray.
- Afterthe green lightgoesoff again, the food should be grilled till it is cooked to your satisfaction
- Once you have finished cooking, open the lid and take out the food with a wooden spatula.
- Never use a sharp fork or knife to remove the food as this would damage the non-stick coating of cooking surface. Use heat-resistant wood spatula only.
- Pull outthe plug and leave the upper lid open so that the appliance can cooldown.

• Based on the food type and thickness, the cooking average time can be about 5-8 minutes.

CARE AND CLEANING:

Before cleaning the appliance, unplug the cord from the outlet.

Do not put the appliance, cord or plug in water.

Wipe the body with a damp cloth. Never use metal polish.

Wipe the heating plates with a soft damp cloth every time after use. If it is difficult to remove residues, put a little oil and wipe.

Take the drip tray out and clean separately. Make sure it is dry before re-attaching to the appliance.

Do not use any cleaning spray on metal objects as it could damage the non-stick coating.

Be sure to dry all parts thoroughly before you use the appliance again. Do not use sharp objects to clean the appliance as it would damage the non-stick coating.

RATED VOLTAGE	AC 220-240V
RATED FREQUENCY	50 Hz
RATED POWER	1500 W

Consumer Warranty Card

Dear Customer.

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from them date of purchase.

Name of the product:

Model:

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Details

Name:

Customer Care: customercare@lifelongindia.com

Address:	
Home Number:	
Office Number:	
Product Details	
Model No :	
Purchase Date: -	
Invoice Number: -	
Online Site: -	

Please log on to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.

Terms and Conditions:

- 1. This warranty is void if:
 - a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
- Repairs or replacements will be carried out by authorized service provider.
- During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelona and/or its authorised servicer.
- All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as will as any other expenses and incidentals will be borne by the consumer.

- 5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warrantied, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the lass.
- Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the daim asserted (e.g. contract or tor) shall not exceed the original purchase price paid for the product.
- 7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
- No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not reply on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.