

ملینا

KITCHEN

MAKING IT POSSIBLE

Rice Cooker 1.5 Litre With Steamer



Auto Switch-Off



Capacity
1.5 Litre





Automatic
Cooking,
Warming System







Lid Material
stainless steel

1 YEAR
WARRANTY

HOW TO USE

| | |
|--|---|
| <p>1. Measure rice with measuring cup the measuring cup. Then rinse the rice thoroughly using another container.</p>  <p>Bowl</p> | <p>- Do not wash rice in the rice cooker pan because the pan might get damaged.</p> |
| <p>2. Take out internal cooker, put rice and water in it. The height of rice and water cannot exceed the max level. The height of easily expansive food in water cannot water than 3/5th of that of internal cooker. The height of food and water cannot be less than 1/5th of that internal cooker.</p> | <p>- Soak rice in water for approximately 30 minutes.</p> |
| <p>3. Place the pan in the body. Make sure it settles properly directly in contact with the heating plate by turning it slightly from right to left until it seals properly.</p>  | <p>- Wipe the surface of the pan before use. If it is wet, it may cause noise while cooking. It may also damage the unit.</p> |
| <p>4. Close the outer lid.</p> | <p>- Do not open the outer lid when in use.</p> |

| | |
|--|---|
| <p>5. Plug in, and the "Power lamp socket" will light. Then press down switch lightly, it will move to "cook".</p>  | <p>- Do not plug in until you get ready to cook. - If the pan is not in the cooker, cooking will not begin.</p> |
| <p>6. The switch will pop up when the rice is done. And the light will switch from the cook to warm which indicates that the warm function is working.</p>  | <p>- The "warm" function continues until unplugged.</p> |
| <p>7. After the switch pops up. Leave the lid closed for at least 15 minutes to steam rice.</p> | |
| <p>8. Fluff the rice.</p>  | <p>- If the rice seems sticky, it is not fluffed. .</p> |
| <p>9. Unplug after use.</p>  | |

HOW TO CLEAN

Unplug before cleaning.

1. Soak the pan in lukewarm water and wash with a sponge.
2. Wipe the body with a damp cloth. Do not immerse the unit in water.
3. Do not use abrasive cleaners or steel wool. Clean with non-metal brush or sponge.

TO KEEP COOKED RICE WARM AND TASTY

- Wash the rice with water. Please note remove the pan during washing.
- Using "keep warm" function more than 12 hours may cause discoloration or an objectionable order in the rice.
- Do not mix cold rice after cooking.
- Do not leave the utensils in the pan once cooking is done, because that may destroy the taste of rice.
- Paper located between the pan and the heating plate should be removed before use.



Do not cover the lid with the cloth. The lid may deform or change color.


Always keep the pan and the heating plate clean. Any foreign matter between them will cause your cooker to malfunction.



- Do not tilt rice-cooker on its edge or place it upside down with its power supply plug connected, as this may cause damage to the rice cooker or injury to yourself. When tilting or placing rice cooker upside down, make sure to disconnect the power supply plug.
- Do not cover the lid with your hands or place your face directly over the steam coming from the cooker.
- If the supply cord is damaged, we must use either the special-purpose flexible cord or the special-purpose module.

| RAW RICE WEIGHT | RAW RICE VOLUME | POST COOKING RICE VOLUME |
|-----------------|-----------------|--------------------------|
| 250 gm | 0.5 L | 1.4 L |
| 500 gm | 1 L | 2.7 L |
| 600 gm | 1.2 L | 3 L |
| 750 gm | 1.5 L | 3.8 L |
| 900 gm | 1.8 L | 4.4 L |

PARTS IDENTIFICATION

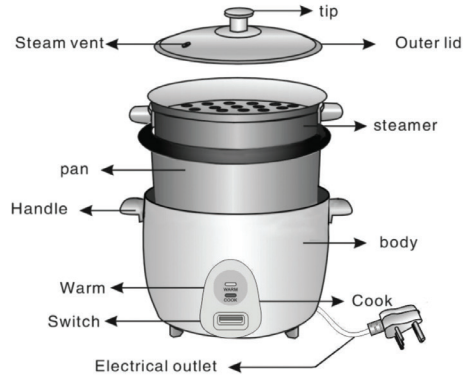


ACCESSORIES



1. The application must not be immersed in water.

2. This application is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction about the use of the appliance by a person responsible for their safety.

3. Children should be supervised to ensure that they do not play with the appliance.

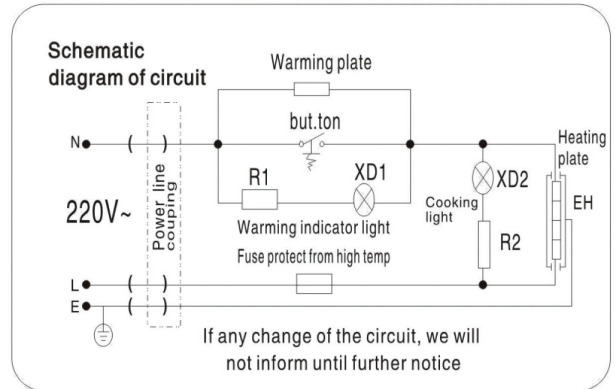

RECEIPE FOR COOKING RICE

Step 1: Open the lid

Step 2: Take the inner pan out.

Step 3: Measure the rice using the measuring cup provided.

Note: Do not exceed the quantities indicated on the inside of the inner pan.

Step 4: Wash the rice thoroughly.

Step 5: You can add ghee/oil and even Cumin seeds (Jeera) according to your preference. Put the pre-washed rice in the inner pan.

Step 6: Add water to the level indicated on the scale inside the inner pan that corresponds to the number of cups of rice used.

Step 7: Then smoothen the rice surface.

Step 8: Put the inner pan in the appliance. Check if the inner pan is in proper contact with the heating element. Note: Make sure that the outside of the inner pan is dry and clean and that there is no foreign residue on the heating element or the magnetic switch.

Step 9: Close the lid of the appliance, and plug in the appliance to the main voltage.

Step 10: Plug-in and the “Power lamp socket” will light. Then press down switch lightly, it will move to “cook”.

Step 11: Once the rice has been cooked, the appliance will automatically switch to 'Keep Warm' mode.

Tip: Open the lid and stir the rice to loosen it for best results. Do this just after the appliance has switched to 'Keep Warm' mode. Then close the lid firmly. Stirring the rice allows the excess steam to escape, and give fluffier rice.

Consumer Warranty Card

Dear Customer,
Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from them date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customer care@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log onto to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.

Terms and Conditions:

1. This warranty is void if:
 - a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as will as any other expenses and incidentals will be borne by the consumer.
5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the laws.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

For queries and complaints:
please contact: customer care@lifelongindia.com
www.lifelongindiaonline.com

Customer care: +91-9711558877