# لنهجلمها

Infinia Plus Hand Blender





For queries and complaints: please contact: customercare@lifelongindia.com www.lifelongindiaonline.com









1 YEAR WARRANTY

## INTRODUCTION

Dear Customer,

Congratulations! We welcome you to the Lifelong family, as you welcome our Lifelong Hand Blender to be a part of your home.

At Lifelong, our products are carefully built for the needs of India, which is why we have crafted a diverse range of innovative products, across a spectrum of categories - Home, Kitchen, Grooming, Fitness, Lifestyle and Smart Home, to better help you. We then deliver them at the best prices, enriching your everyday living.

We are sure you can't wait to start using your new Lifelong Hand Blender.

We know we can't!

Looking forward to building our bond for life, cheers!

Thank you,

Team Lifelong

# **TABLE OF CONTENTS:**


- -About the product
- -Marking on Product
- -How to Operate
- -Device Cleaning
- -Care Instructions
- -Dos & Don'ts

1

 
## **ABOUT THE PRODUCT:**

 
Get a handle on your recipes with this ergonomically designed hand blender that's ultra-lightweight and has a comfortable slip-proof body that helps to blend things up.

## **MARKING ON PRODUCT:**

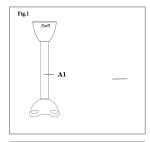







Description

Fig. 1 - A1: Mixing feet

Fig. 2 - B1: Plastic Jar

Fig. 3 and Fig. 4 - C1/C2: Whisk accessory / Chopping accessory

1. Button

2. Motor housing

3. Gear box

4. Whisk

5. Chopper Cup lid

6. Chopping Attachment

7. Blade

## **HOW TO OPERATE:**

**Blender (Fig. 1):** - This accessory is used for making sauces, soups, mayonnaise, milkshakes, and baby food.

• Attach the stick to motor body and turn in the direction of the arrow (Fig. 1).

• Put the food to be prepared in the jar and switch the appliance on.

• For further cleaning, detach and remove the stick by turning in the opposite direction of the arrow (Fig. 1).

#### Whisk accessory (Fig. 3): -

This accessory is used to whip cream, beat egg whites

- Insert the whisk into the gear box unit to the motor unit by turning it in the direction of the arrow (Fig. 3).
- Put the food into a large receptacle and switch the appliance ON. For best results, turn the whisk clockwise.
- Remove the whisk accessory and release the gear box fitting (Fig. 3)
- To free the whisk ⑤ from the gear box fitting ⑥, pull the ring on the whisk.

#### Chopping accessory (Fig. 4): -

This accessory is used to chop vegetables or meat.

- Put the food to be prepared in the chopping container with the blades inside and attach the cover firmly.
- Fit the adapter fitting to the motor unit by turning it in the direction of the arrow. 
  Attach the unit to the cover and switch the appliance ON (Be careful: do not switch the appliance on if the whole unit is not properly fitted and connected together).
- Stop the appliance when the food reaches the desired texture. Detach the unit from the lid, and release the adapter fitting.

## **DEVICE CLEANING:**

- The Blender needs to be cleaned after every USE. Its user-friendly design makes cleaning quick and simple.
- Start with disconnecting the power cord and holding the Blender under a running tap.
- Then wipe it clean and put it back on its wall bracket.
- Use hot water in case of sticky foods.
- We have placed the motor at the top to prevent any burn out. We strictly recommend to keep the cable entry, housing and switch dry.
- Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.

### DOS & DON'TS:

- Do not touch the blades while the machine is plugged in.
- Unplug after use and before changing attachments.
- Do not blend hot oil or fat.
- Do not use a damaged hand blender.
- Do not immerse unit, plug or cord in water, or allow for liquid to come in contact with any of the electrical parts.

- Do not let the cord touch hot surfaces or hang down where a child could grab it.
- Do not use an unauthorized attachment.

## **Consumer Warranty Card**

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

#### **Warranty Service**

them date of pure Name of the prod Model:	sumer products are covered against manufacturing defects from chase.
Warranty coverage	ge: 1 year
	chase receipt is necessary for warranty verification. customercare@lifelongindia.com
Address: Home Number: Office Number:	ails
Serial No.: —— Purchase Date:	S

Please log onto to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.

#### Terms and Conditions:

- 1. This warranty is void if:
  - a. The completely filled warranty card is not presented at the time of servicing the product.
  - The product is not operated according to the instructions given under the user manual.
  - C. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
  - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
  - Product label specifying the model number, serial number and production code has been removed and altered
  - Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
  - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
  - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
- 2. Repairs or replacements will be carried out by authorized service provider.
- During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelona and/or its authorised servicer.
- All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as will as any other expenses and incidentals will be borne by the consumer.

- 5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warrantied, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the lass.
- Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tor) shall not exoeed the original purchase price paid for the product.
- 7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any puritive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
- No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not reply on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

7