

lifelong  
MAKING IT POSSIBLE

# Lifelong Atta Maker



500W  
Powerful Motor



Food grade  
Blade for  
kneading



Internal Circuit  
breaker



Powerful  
copper  
motor



Anti-Skid  
Feet

**1 YEAR  
WARRANTY**

## INTRODUCTION:

Welcome to the Lifelong family,

Dear Customer,

Congratulations on purchasing Lifelong Atta Kneader and a warm welcome to the Lifelong family. At Lifelong, we take pride in developing quality products for your home, health and happiness. Through constant innovation in our products, we have been able to develop a wide spectrum of products across Home, Kitchen, Grooming and Wellness categories. We strive to enrich the lives of the modern consumer every day. Keeping that in mind, we have offered all our products at a fair and honest price.

We hope that the Atta Kneader serves you and your family's needs without any hassles.

Thanks again for becoming a part of the Lifelong family. Enjoy using the product!

Warm Regards,

Team Lifelong

## CAUTION:

If cast of overheat/overload, the appliance will stop automatically. Please press the "RESET" button and use the appliance after 10 minutes.

- Do not run the appliance continuously for more than 40 seconds.
- Running speed has been set to an ideal state so no adjustment required.

- After every use, clean the jar and blade thoroughly, so that the atta does not stick to any of the surface.

- Do not clean the main body with water or wet cloth (use slightly damp cloth).

## BEFORE FIRST USE:

- Remove all packaging material and remove any stickers or labels from the appliance.
- Thoroughly clean all the attachment and jar with hot water, some dishwashing liquid and a non-abrasive sponge.

## INSTRUCTIONS FOR USE:

1. Use the 3 speed regulator as per required use.
2. Reset Button: In case the machine stops, press the reset button and use the machine after 10 minutes and cover with lid.
3. Lock the jar properly and cover with lid before using the machine

## INSTRUCTIONS FOR USE:



## DO'S:

This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge unless they have supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Place the appliance on a horizontal and stable working surface.
- Always disconnect the appliances from the supply if it is left unattended or before assembling, disassembling or cleaning.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes etc.) out of their reach.
- Store the appliances in a clean and dry place.
- Make sure every detachable part is installed properly before connecting to power.
- Keep the quantity of flour as recommended (2 glass flour, 1 glass water at a time).
- Lock the jar properly before running the machine.
- Place the blades before putting the food in the jar

## DON'TS:

- Do not use the appliance when the main cord, plug or other components are damaged. The damaged parts should be replaced by the company or service center authorized by the company.
- Do not pull the cord to take out the plug from the socket. Grip the plug and pull out the socket after duly switching off the power supply.
- Do not operate the appliance without any ingredient.
- Do not place the appliance on a wet surface.
- Do not let the supply cord hang over edge of the table or counter or touch hot surfaces.
- Do not immerse cord, plug, or appliance in water or other liquid. Do not plug in the appliance or operate the control panel with wet hands.

- Do not let the appliance operate unattended.
- Do not process hot food.
- Do not immerse or wash the main body with water or any other liquids.
- Do not heat the product directly, or pull all the plastic parts into the disinfection cabinet, washing machine or hot water above corrosive liquid 60 degree. And don't use steel wool and abrasive cleaner and corrosive liquid to wash the product.
- Do not sterilize the plastic parts so as to avoid thermal deformation and damage.
- Do not use the machine more than the recommended time. (Not more 40 than seconds).
- Do not run the machine without the jar and without jar cover.
- Do not put food before placing the blades in proper machine.

## ATTA KNEADING TIPS:

1. Put 2 measurement glass of flour and 1 measurement glass of water and run the machine for 30-40 seconds for the best dough.
2. Clean the area around rotating shaft after every use, so that the dried dough does not jam the shaft.

## HOW TO ASSEMBLE:

1. Place the main body on a flat surface.
2. Put the poly jar on the main body and lock it by rotating clockwise.
3. Put the Atta kneading, whipping blade on the shaft as per use

In Case of OVERLOAD, the Atta Maker trips. Press this button and use the machine after 10 minutes. Button shown below:



## HOW TO DISASSEMBLE AND CLEAN:

1. Unlock the “poly Jar” from the main body and wash it under running water.
2. For cleaning the attachments, separate it from the main body and clean them under running water.
3. Wipe main body with a soft, damp or dry cloth.
4. Dry all parts thoroughly and keep it in a dry, well-ventilated place beyond the reach of children. Avoid direct sunlight.

## TROUBLESHOOTING:

Problem	Possible Cause	Solution
1. Atta Maker does not run after power 'ON'.	<ul style="list-style-type: none"><li>• Power plug not plugged.</li><li>• Circuit breaker faulty.</li></ul>	<ul style="list-style-type: none"><li>• Try a different plug.</li><li>• Call customer inquiry number.</li><li>• Contact your Dealer</li></ul>
2. Atta Maker suddenly stops during running.	<ul style="list-style-type: none"><li>• Overload (Food put is more than recommended).</li><li>• Overheat (Running time is greater than given duration).</li><li>• Intelligent protection chip is activated.</li></ul>	<ul style="list-style-type: none"><li>• Reduce the food quantity from the jar.</li><li>• Press the 'RESET' button and wait for 10-15 minutes before using it again.</li></ul>

Problem	Possible Cause	Solution
3. Motor is working but shaft is not rotating.	<ul style="list-style-type: none"><li>• Due to overload and wrong usage, transmission gear broken or misaligned.</li></ul>	<ul style="list-style-type: none"><li>• Call customer enquiry number.</li><li>• Contact your Dealer</li></ul>

## Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

### Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: \_\_\_\_\_

Model: \_\_\_\_\_

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: [customercare@lifelongindia.com](mailto:customercare@lifelongindia.com)

### Customer Details

Name: \_\_\_\_\_

Address: \_\_\_\_\_

Home Number: \_\_\_\_\_

Office Number: \_\_\_\_\_

E-mail Address: \_\_\_\_\_

### Product Details

Model No.: \_\_\_\_\_

Serial No.: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Invoice Number: \_\_\_\_\_

Online Site: \_\_\_\_\_

Please log on to [www.lifelongindiaonline.com](http://www.lifelongindiaonline.com) and complete the online warranty form with your personal and product details within 14 days.

### Terms and Conditions:

1. This warranty is void if:
  - a. The completely filled warranty card is not presented at the time of servicing the product.
  - b. The product is not operated according to the instructions given under the user manual.
  - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
  - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
  - e. Product label specifying the model number, serial number and production code has been removed and altered.
  - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
  - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
  - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.
5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not withstanding the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Manufactured for & Marketed by :

**Lifelong Online Retail Private Limited**

For queries and complaints:

please contact: [customercare@lifelongindia.com](mailto:customercare@lifelongindia.com)

[www.lifelongindiaonline.com](http://www.lifelongindiaonline.com)