

FAN HEATER

LLFH02

وسملنا



 
Flare - X

SAFETY
IS : 302-2-30



CM/L-9600023409

USER'S GUIDE



Dear Customer,

We congratulate you on choosing a Lifelong Fan Heater.

Meticulously designed, using only the highest quality materials and components, your Fan Heater have many years of trouble free service.

To enable your Fan Heater to give you many years of perfect trouble free service, we recommend you to follow the instructions of the service manual carefully.

Identifying Your Fan Heater



Using Your Fan Heater

Choose a suitable location for the heater ensuring you have taken account of the safety instructions

NOTE: It is normal that when the heater is turned on for the first time or after not being used for a long period of time that it may emit a slight smell and fumes. These will disappear when the heater has been on a short while.

1. Take out the heater from its box carefully. Please save the box to store the heater when not in use.
2. Plug the unit into a power socket. Do not to use the same electrical socket as another high wattage electrical appliance in order to avoid overloading the circuit.
the heater.
3. Use the heat / fan selector control to choose your mode.
 - The first level is the fan function only
 - The second level is 1kW power
 - The third level is 2kW – full power.
4. The thermostat can be adjusted between 0-40°C
5. Turn the dial to increase or decrease the temperature.

Overheat Protection

This appliance is fitted with a safeguard that will automatically shut the power off should any part of the heater begin to overheat. The heater will automatically come back on when it has cooled down. The heater will work again as normal once it has cooled down. Check for anything surrounding the heater that may have caused it to overheat such as clothing or curtains covering the air inlet of outlet grille.

Cleaning

- Always unplug the heater from the socket and allow it to cool. Clean the outside by wiping with a damp cloth (not wet). Do not use detergents or abrasive materials.
- Do not allow for any water to enter the heater. You can use a vacuum cleaner to remove dust from the inlet and outlet grille.
- Ensure that both the heater and plug are dry before being plugged in again.
the plug.


Storing the Heater

When the heater is not to be used for a long period of time, it should be protected from dust and stored in a clean dry place. The original packaging box can be saved and used to store the heater.

Electrical Connections

The wires in the mains lead supplied with this appliance are coloured in accordance with the following code:

GREEN/YELLOW = EARTH (E) (**CLASS I APPLIANCES ONLY**)
BLUE = NEUTRAL (N)
BROWN = LIVE (L)

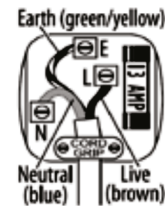

This product is Class II and does not require an earth connection.

As the colours of the wires in the mains lead may not correspond with the colour markings identifying the terminals in your new plug, proceed as follows:

The wire which is coloured GREEN or YELLOW/GREEN must be connected to the terminal which is marked with the letter E or symbol or a coloured GREEN or YELLOW/GREEN.

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK or BLUE.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED or BROWN.

Ensure that the connections are tight and that no loose strands are left out of the terminals.

IF IN DOUBT CONSULT A QUALIFIED ELECTRICIAN – DO NOT ATTEMPT TO CHANGE THE PLUG YOURSELF

If the mains lead gets damaged consult a qualified electrician.

Safety Instructions

Read and follow all of the instructions even if you feel you are familiar with the product, and find a place to keep this manual handy for future reference.

Important: This appliance is not intended for use by persons including children with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

- This product is intended for domestic use only.
- The heater is not designed for use as the main form of heating.
- This product is for indoor use only. Do not use the heater outdoors.
- Ensure that the electricity supply in your home is rated at 220 -240 volts before operating the appliance.
- If the mains lead of this appliance gets damaged then it must be replaced by the manufacturer's service agent or a suitably qualified person using the same rated cable in order to avoid a hazard.
- Children should be supervised to ensure that they do not play with the appliance.
- Always turn off and unplug the appliance before attempting to move.
- Do not store the appliance while it is still hot.
- Always turn off and unplug the appliance when not in use.
- Do not use the heater in the immediate surroundings of a bath, shower or swimming pool.

Do not reach for an appliance that has fallen into water. Switch off at supply and unplug immediately

Never place the heater where it may fall into water, or stand on a damp floor.

Do not cover or obstruct any of the heat outlet grilles or air intake openings of

Do not insert any objects through the heat outlet of air intakes grilles.

Attention: the front grille gets hot during use.

Do not place the heater on carpets with a deep pile.

Do not place the heater directly below a socket outlet.

Ensure that the heater is not positioned close to curtains or furniture as this may create a fire hazard.

Do not use the heater in areas where flammable liquids are stored or flammable fumes may be present.

To protect against fire, electric shock or injury do not immerse the heater, power cord or plug in water or any other liquid.

Do not twist, kink or wrap the cord around the appliance, this may cause the insulation to weaken and split

Do not run the cord under carpeting, rugs or runners. Arrange cord away from traffic so that it will not be tripped over. Keep the cord at safe distance from the inlet and

Avoid the use of an extension cord.

Do not operate with the cord coiled as a build up of heat could be sufficient to become a hazard.

Do not remove plug from power socket by pulling the supply cord. Always grip

Do not remove the plug socket until the appliance is switched off.

Do not use the appliance to dry clothes.

Do not operate appliance with wet hands.

The most common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the grilles.

Use this appliance only as described in the manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.

WARNING: In order to avoid overheating, do not cover the heater.

Specifications

Model No	LLFH02 - FLARE X
Type	Electric Fan Heater
Rated voltage in volts & frequency in Hz.	230V, 50Hz, AC
Rated power input in Watts	1000-2000 W
Star Rating	ISI

Note: The dimension may vary from model to model without affecting the capacity. Due to continues improvement in product, specifications are subject to change without prior notice.

Troubleshooting Guide

Problem	Possible Cause	Solution
The heater does not work.	1. Not properly plugged into the mains wall socket. 2. Not switched on 3. No electricity in the mains wall socket.	1. Plug in firmly. 2. Make sure appliance is switched on. 3. Check fuse or breaker.
The heater is getting too hot.	1. Inadequate air flow 2. Heat setting too high 3. Vents are blocked	1. Make sure there is circulating air in the room 2. Adjust heat settings accordingly 3. Make sure all vents are clear and free from obstruction.
The heater is not heating up.	1. Thermostat not turned high enough 2. The selector control is on too low	1. Adjust the thermostat to a high temperature 2. Turn the selector control to the higher 2kW setting

WARRANTY : 1 Years Warranty

Note : As product up-gradation is a continuous process, design and specifications are subject to change without notice.

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log onto to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.

Manufactured for & Marketed by :
Lifelong Online Retail Private Limited

For queries and complaints:
please contact: customercare@lifelongindia.com
www.lifelongindiaonline.com