

Terms and Conditions:

- This warranty is void if:
 - The completely filled warranty card is not presented at the time of servicing the product.
 - The product is not operated according to the instructions given under the user manual.
 - Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - Product label specifying the model number, serial number and production code has been removed and altered.
 - Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
- Repairs or replacements will be carried out by authorized service provider.
- During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
- All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.

- Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranties, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
- Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
- However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
- No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Manufactured for & Marketed by :
Lifelong Online Retail Private Limited

Made In China

For queries and complaints:
please contact: customercare@lifelongindia.com
www.lifelongindiaonline.com

Lifelong

FACE MASSAGER

LLM126



Perfect Skin face &
Body cleansing



Compact and
Portable



Water Resistant &
2 Rotating Speed



4 different
attachments

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log onto to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.

SAFETY PRECAUTIONS

- The product may only be used with the parts provided by the manufacturer.
- Never handle the appliance if it was dropped into water or any other liquid
- Always make sure your hands are dry before touching the plug or power connections.
- Do not operate the product with a damaged cord or plug, or after it malfunctions, has been dropped or damaged in any manner.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person, in order to avoid a hazard.
- Avoid the use of an extension cord, as this may overheat and create a fire risk.
- Make sure that the voltage indicated on the product corresponds with the mains voltage in your home. Connect the appliance to a single-phase AC supply of the voltage specified on the rating plate. Clicks shall not be held liable for any failures owing to any discrepancy and such failures shall not be covered by the guarantee.
- The appliance is intended for household use only. Commercial use invalidates the warranty and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that for which it is intended.
- Always unplug the product from the electrical outlet when not in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Extreme caution must be exercised.
- Children should be supervised to ensure that they do not play with the appliance. Packaging must never be left within reach of children, since it is potentially dangerous.
- Ensure that no other appliances are in use on the same electrical circuit as your product, as an overload can occur.
- Never leave the appliance unattended.
- Store in the original box in a cool, dry place, out of the reach of children.

ADDITIONAL WARNINGS

1. Use this lifelong Face and Body Brush only for its intended use, as described in this manual.
2. Keep the face and body brush away from heated surfaces.
3. Never operate the product if it is damaged, if it is not working properly, or if it has been dropped into water.
4. Do not use the face and body brush on skin expressing a rash, acne or any other skin ailments.
5. Consult your doctor before use if you suffer from any skin conditions.
6. Use of this product should be pleasant and comfortable. Should there be a result of discomfort, discontinue use.
7. Do not allow batteries to come into the hands of children.

OPERATION

1. Remove the bottom of the handle to open the battery compartment.
2. Insert 4 x AA batteries according to the polarity markings indicated in the battery compartment.
3. Replace the battery compartment cover and ensure it is clipped in firmly.
4. There are four attachments to choose from:
 - Gentle Facial Brush
 - removes impurities & cleanses skin
 - Cosmetic Sponge - apply cleansers & moisturisers
 - Body Buffing Brush - exfoliate and invigorate body
 - Pumice Stone - removes hard skin and softens feet
5. Place the desired attachment on the cleanser machine, apply your favourite facial soaps, cleansers or moisturiser and switch the appliance on.
6. When the product is not in use, remove the batteries and store in a dry place, out of the reach of children.

CLEANING

- Always turn the power off and remove the plug before and after cleaning.
- Clean the outside of the appliance with a soft, damp cloth.
- Dry the cleanser with a soft, dry cloth.
- Do not use abrasive cleaning materials, as this may scratch the surface finish.
- Clean the attachments with a warm, soapy solution.
- Always ensure that the attachments are dry before use.
- Allow the unit and brushes to air dry.

CAUTION: NEVER IMMERSE THE APPLIANCE IN WATER OR ANY OTHER LIQUID.

ENVIRONMENTALLY FRIENDLY DISPOSAL



Do not dispose of the electrical appliance as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical products are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and wellbeing.

GUARANTEE

Electrical and hi-tech products are covered by a 12- (twelve) month guarantee. Clicks reserves the right to test the product to confirm the alleged defect before the product will be replaced or refunded. Please note that this guarantee excludes degradation and/or defects arising as a result of normal wear and tear and/or misuse of the product caused by overloading, negligence, accidental or improper use.

Any changes made to this appliance, cord or sealed plug will invalidate the guarantee, as would any attempted repair to the appliance while under the guarantee period.

FOR HOUSEHOLD USE ONLY

Congratulations on choosing a Lifelong product. Compare our designs, features, quality and prices with any other brand and you'll be pleasantly surprised! For 30 years, Lifelong has been providing South African homes with an extensive range of quality electrical appliances. Exclusive to Clicks and trusted by our customers, Lifelong products are designed to be reliable and offer exceptional value.

Please read this instruction manual before using your Lifelong product and keep it in a safe place for future reference.

If you pass the appliance on to anyone else, please include this manual. We also recommend you keep the packaging until you are satisfied that this product is operating correctly.

You've made an excellent choice and we wish you many happy years of use!

SAFETY PRECAUTIONS

Model	LLM126
Name	Face Massager
Input voltage	Requires 4 x AA 1.5 V batteries
Rated power	3W

PRODUCT OVERVIEW

1. Four interchangeable Head Attachments
 - A. Gentle Facial Brush
 - B. Cosmetic Sponge
 - C. Body Buffing Brush
 - D. Pumice Stone
2. Soft Touch On/Off Switch
3. Battery Compartment

