


Manufactured for & Marketed by :  
**Lifelong Online Retail Private Limited**

For queries and complaints:  
please contact: [customercare@lifelongindia.com](mailto:customercare@lifelongindia.com)  
[www.lifelongindiaonline.com](http://www.lifelongindiaonline.com)

# Lifelong

2 YEAR  
WARRANTY

## Aqua Semi Automatic Washing Machine

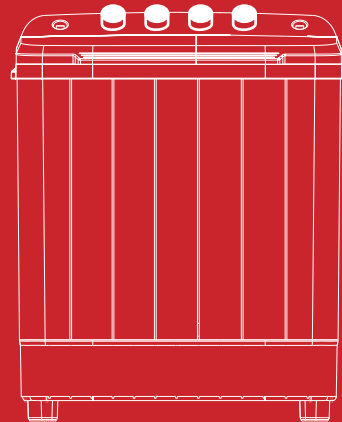

7 Kg Capacity



2 Wash Programs



Powerful Motor



Anti Rust Body



Collar Scrubber

Due to continuous product improvement, specifications are subject to change.  
Images on the manual are only for illustrative purposes and may differ from the actual product.

## INTRODUCTION:

Welcome to the Lifelong family.

Dear Customer,

Congratulations on purchasing Lifelong Aqua Semi Automatic Washing Mahine and a warm welcome to the Lifelong family.

At Lifelong, we take pride in developing quality products for your home, health and happiness. Through constant innovation in our products, we have been able to develop a wide spectrum of products across Home, Kitchen, Grooming and Wellness categories. We strive to enrich the lives of the modern consumer every day. Keeping that in mind, we have offered all our products at a fair and honest price.

We hope that the Aqua Semi Automatic Washing Mahine serves you and your family's needs without any hassles.


Thank you for becoming a part of the Lifelong family. Enjoy using the product!

Warm Regards,  
Team Lifelong

## CONTENTS:

1. Parts Identification
2. Safety Precautions
3. Care and Maintenance
4. Recommended Washing Procedure
5. Reference Guide
6. Troubleshooting Guide
7. Specifications & Wiring Diagram

## PARTS IDENTIFICATION:

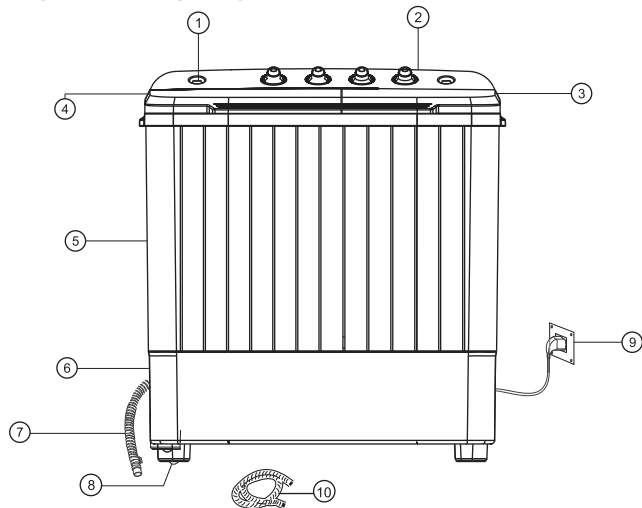

- |                  |                  |                |
|------------------|------------------|----------------|
| 1. Water Inlet   | 5. Tub           | 9. Power Cord  |
| 2. Control Panel | 6. Base          | 10. Inlet Hose |
| 3. Spin Lid      | 7. Drain Pipe    |                |
| 4. Wash Lid      | 8. Castor Wheels |                |

**Note :** Graphics and Images on the manual are only for illustrative purposes and may differ from the actual product.

## SAFETY PRECAUTIONS:

1. Make sure that the washing machine is plugged to a 3 pin/5A electrical outlet with earth terminal.
2. Unplug the power supply cord when not in use.
3. To disconnect the washing machine from electrical mains , pull out the plug. Ensure you do not pull it directly from the cord.
4. Don't allow kids near the washing machine while in use.
5. This washing machine is meant for washing clothes with water as a medium. Do not use petrol or other chemicals. This can result in fire and damage.
6. Do not use water with temperature exceeding 50 degree celcius, as this deforms the plastic parts in the machine. If you desire to use warm water, add hot water to cold water in the wash tub. Do not pour hot water in an empty tub/spin basket directly.
7. Keep the machine away from flames and inflammable material. Do not expose the washing machine to direct sunlight or rain. Also avoid placing it in humid locations.
8. Take precautions not to pierce the control panel.
9. Do not press the button with an awl or a pin.
10. Avoid overloading of wash and spin tub.
11. Do not use wash and spin tub for water storage.

## CARE & MAINTENANCE:

Be sure to remove the power plug from main power supply before cleaning the machine.

## CLEANING THE WASH TUB:

1. After wash, fill fresh water above the level of pulsator without adding clothes.
2. Run the machine for 1-2 minutes, turn the knob to 'drain' position when pulsator is still rotating.
3. When water is completely drained out, turn the knob to 'wash' position.
4. Finally, turn off the machine.

## RECOMMENDED WASHING PROCEDURE:

1. Open the water tap and fill the wash tub about half way.
2. Put in the laundry detergent and allow it to disperse well.
3. Put in the clothes to be washed and add water in accordance with the amount of cloth load.
4. Set the wash timer as desired depending on the fabric type and the degree of soiling.
5. When washing is finished, set the 'Drain Selector' to 'Drain'.

**NOTE: Ensure that the clothes rotate freely during wash, if not, reduce the cloth load. (By removing some clothes from the machine)**

## RINSING:

1. Rinse: Fill the wash tub appropriately depending on the number of clothes being washed. Set wash timer for 15 minutes. Rinse will begin and clothes will rinse for a period of the same period of time.
2. Spin Rinse: Put clothes inside the Spin Tub. Set water supply selected to 'Spin Tub'. Open the water tap and keep it open for 1 to 2 minutes and then close the tap. Spin for a minute. When rinsing is over, set the Drain Selector to 'Drain'. Do not keep the water tap open when the Spin tub is rotating to avoid the machine from malfunctioning.

## SPIN DRYING:

Put clothes inside the Spin Tub. In order to prevent the machine from malfunctioning, distribute them evenly and ensure that the drain hose is lowered. After this, place spin tub cap over the clothes inside the tub to prevent them from flying out. Close the lid of the spin tub. (If the lid is not closed it will not rotate.) Set the 'Spin Timer' from 1 to 5 minutes according to the type of clothes. If the spin tub starts shaking noticeably, open the lid and wait for it to stop spinning. Distribute the clothes evenly and re-start.

## REFERENCE GUIDE:

**Table 1: Detergent Guide**

WASH LOAD	1,2~2,5 kg	2,5~3,8 kg	3,8~5,0 kg	5,0 kg or ABOVE
Water Level	30 L	45 L	60 L	68 L
Amount of Concentrate Detergent	25 gm	30 gm	38 gm	40 gm
Amount of Softener	22 ml	26 ml	29 ml	35 ml

**Table 2: Laundry Guide**

Amount of Laundry	Clothes	Synthetic Fiber	Cotton	Heavy Stained Clothes
	Cycle			
1.2 ~ 2.5 kg	Washing Time	2~5 minutes	7~10 minutes	10-15 Minutes
	Wash Cycle	NORMAL	GENTLE*/NORMAL	GENTLE
2.5 ~ 3.8 kg	Washing Time	7~10 minutes	10~15 minutes	15 minutes
	Wash Cycle	NORMAL	GENTLE*/NORMAL	GENTLE
3.8 kg and above	Washing Time	10~15 minutes	15 minutes	15 minutes
	Wash Cycle	NORMAL	GENTLE*/NORMAL	GENTLE

## NOTES:

- In order to prevent clothes from damaging and to prevent water splash, make sure that there is a balance between wash load and the water volume.

- The quantity of wash load varies depending on fabric type, thickness and size of the clothes.

- Adjust the water level/wash load as required by carefully watching the movement of the clothes in the tub.

## TROUBLESHOOTING GUIDE:

TROUBLES	CHECK POINTS
Motor not working	<ul style="list-style-type: none"> <li>• Check supply source.</li> <li>• Is the power cord firmly plugged in?</li> <li>• Is the timer turned to a suitable point except "OFF"?</li> <li>• Motor has been provided with "TOP" (Thermal overload protector). This will protect the motor from burning due to overheating caused by various variable factors such as overload voltage, frequency variation, etc. In such case motor supply will get off, thus stopping the motor. Wait for approximate ½ hour till motor cools to normal temperature. Restart the M/c to see if motor functions normally.</li> </ul>
Spin dryer basket does not operate	<ul style="list-style-type: none"> <li>• Is there any cloth dropped between the basket and tub?</li> <li>• Is the spin dryer cover closed?</li> <li>• Is the laundry gathered to one side of the spin dryer basket?</li> </ul>
Drain not drawing	<ul style="list-style-type: none"> <li>• Is the lint stuck to the plunger valve?</li> <li>• Is the end of the drain hose guide located at an excessive height?</li> </ul>

## TROUBLESHOOTING TABLE:

Problem	Reason	Solution
<b>The pulsator does not rotate</b>	Power out or switch off Transmission belt burst Pulsator is blocked by something	Switch on plug Assemble the transmission belt Remove the blockage
<b>The pulsator rotates too slowly</b>	Belt becomes loose The flexible screw of motor is loose	Tighten the belt or replace it Tighten the belt and the screw
<b>Abnormal noise and vibration</b>	The clothes in the spin-dry tub are unbalanced Something was stuck between pulsator and wash tub	Place the clothes neatly  Remove it.
<b>Water leaks from wash tub</b>	The hose is not tightened with the wash tub	Tighten it

**\* Attention: Please contact customer support service, in case any additional problems.**

### Usage instructions for semi-automatic washing machine.

#### Step 1:

- Select the wash option (Normal/Gentle) on the selector switch.
- Put clothes in the wash tub with water and detergent.
- Once wash cycle has started, clothes will be washed for 15 min.

#### Step 2:

- Put in the clothes in the spin tub.
- Select spin timer for the time period required (5 minutes).
- This is required to remove excess soap.
- This will result in the first drying process for the clothes.

#### Step 3:

- Transfer clothes to the wash tub.
- Rinsing: Fill in water only and select wash time for 3-4 minutes.
- After this is complete, select the drain mode to drain out water.


#### Step 4:

- Drying: Transfer clothes to spin tub and select spin time to complete the final drying process.

## SPECIFICATION:

Rated Wash Capacity	7.0 Kg
Rated Spin Capacity	4.5 Kg
Voltage	220-240V AC
Frequency	50Hz
Wash Timer	15 Min
Spin Timer	5 Min
Wash Input Power	400W
Spin Input Power	160W
Net Dimension (mm)	740x445x900
Gross Dimension (mm)	765x480x965
Net Weight	18 Kg
Gross Weight	21 Kg

## WIRING DIAGRAM:

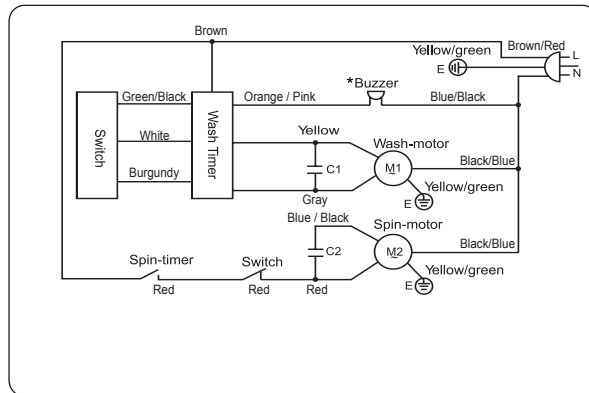

## PACKING LIST:

Name	Quantity
Washing Machine	1
Safety Cover	1
Inlet Pipe	1
User Manual	1
Drain Pipe/ Clamp	1

## Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

### Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: \_\_\_\_\_

Model: \_\_\_\_\_

Warranty coverage: 2 years

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: [customer@lifelongindia.com](mailto:customer@lifelongindia.com)

### Customer Details

Name: \_\_\_\_\_

Address: \_\_\_\_\_

Home Number: \_\_\_\_\_

Office Number: \_\_\_\_\_

E-mail Address: \_\_\_\_\_

### Product Details

Model No.: \_\_\_\_\_

Serial No.: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Invoice Number: \_\_\_\_\_

Online Site: \_\_\_\_\_

Please log on to [www.lifelongindiaonline.com](http://www.lifelongindiaonline.com) and complete the online warranty form with your personal and product details within 14 days.

### Terms and Conditions:

- This warranty is void if:
  - The completely filled warranty card is not presented at the time of servicing the product.
  - The product is not operated according to the instructions given under the user manual.
  - Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
  - Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
  - Product label specifying the model number, serial number and production code has been removed and altered.
  - Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
  - Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
  - Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
- Repairs or replacements will be carried out by authorized service provider.
- During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorized service provider.
- All expenses incurred in collecting the unit(s) or part(s) thereof from authorized service provider as well as any other expenses and incidentals will be borne by the consumer.
- Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
- Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
- However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not withstanding the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
- No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.