

Terms and Conditions

1. This warranty is void if:

- a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.

5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply notwithstanding the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Imported and marketed by:
Lifelong Online Retail Private Limited

For queries and complaints please contact:
customercare@lifelongindia.com
www.lifelongindiaonline.com

lifelong

POP UP TOASTER

#SOMETHINGTOASTY



Easy to use and handle



Compact Design



Removable Crumb Tray




Extra Lift Function

Pop Up Toaster

Operating Instructions

Model: LLPT09

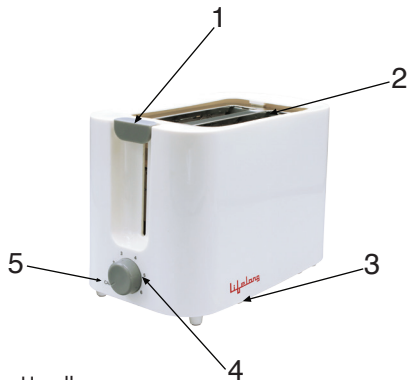

1. Loading Handle
2. Bread Slot
3. Crumb Tray
4. Browning Control
5. Turn Knob to minimum for cancellation

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 1 year

Please note:

Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log onto to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.

General safety Instructions

- Please keep this instructions manual, the guarantee slip, the receipt and if possible the box with inner packaging in a safe place.
- This appliance is intended exclusively for private and not for commercial use.
- Always remove the plug from the socket when the appliance is not in use or when you are attaching accessories, cleaning it or in the event of a malfunction. Switch off the appliance. Do not pull the cable, pull the plug.
- Keep children away from the appliance to keep them safe from electric shocks. Make sure that the appliance is out of the reach of children. Ensure that the cable does not hang down.
- Check the cable and the appliance regularly for damage. Do not switch on the appliance if it is damaged.
- Do not repair the appliance yourself, consult an authorized professional instead.
- Keep the appliance and the cable away from heat, direct sunlight, moisture, sharp edges and such items which could possibly damage the appliance.
- Never leave the appliance unsupervised if it is in use! Always switch off the appliance if you are not using it, even if only for a brief period.
- Only use original parts.
- Never use the appliance outside.
- Never submerge the appliance in water or any other liquid. Do not allow the appliance to come into contact with water or other liquids. Do not use the appliance with wet or moist hands.
- Remove the plug from the socket immediately if it is moist or wet. Do not touch the water!
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.

- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Only use the appliance for its intended purpose
- This appliance can be used by children aged from 8 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instructions concerning use of the appliance in a safe way and they do understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The surfaces are liable to get hot during use
- After you finish using this product, please recycle the product for disposal in accordance with local regulations.
- This appliance is intended to be used in household.

Special Safety Instructions for this Appliance

- Only use the appliance under supervision (very dry bread may catch fire if toasted).
- The metal parts heat up so, there is a risk of burns!
- Do not insert any forks, knives or such conductors in the toasting slot.
- Do not place the appliance anywhere near inflammable objects (e.g. curtains, wood, etc.)!

Guarantee

We provide a guarantee period of 12 months for the appliance we have sold from the date of purchase (receipt). During this period, we will repair any defects in the appliance without charge, provided that these defects are due to material or manufacturing faults. Subject to our own decision, we will repair or replace the appliance. Guarantee services neither extend the guarantee period nor do they mark the start of a new guarantee period! The receipt of purchase is the proof of guarantee. Free exchange or repair is not possible without this receipt. In the event of a guarantee claim, please return the complete appliance in the original packaging together with the receipt to your dealer. Defects in accessories will not lead to a replacement of the entire appliance. Free replacement will be sent instead. Do not send back the appliance in these cases, but only reorder the defect accessory! Broken glass damage will always be subject to charges! Defects in wear parts (e.g. motor carbon, mixing hooks, driving belts, spare remote controls, spare toothbrushes, saw blades and such like) and cleaning, maintenance or the replacement of wear parts are not part of the guarantee services and are therefore subject to charge.

The guarantee will be cancelled in the event of unauthorized tampering.

After Guarantee

Repairs can be carried out by licensed dealers or the repair services after the end of the guarantee period, but are subject to charge.

Full name of company:

Address:

Type of product: Toaster Model: LLPT09

Ratings: 220-240V 50/60Hz 680-800W!

Operation

1. Only connect the appliance to a correctly installed safety plug (220-240V 50/60Hz).
2. Turn the selector switch clockwise to set the toasting level from the lightest stage 1 to the darkest stage 6. If in any doubt, start with the lower setting (the black mark on the selector switch shows you the setting).
3. Insert sliced bread into the toasting slot and push down the lever until it locks.
4. The appliance starts toasting. The appliance switches off immediately once the set degree of toasting has been reached. The toast then pops up automatically.
5. The appliance has heat-insulated casing. However, as metal parts still heat up during operation, please allow cooling down before you put it away.
6. The toaster only allows 2 slices of the toaster to be toasted at a time.
7. The grill is only allowed to adjust to the minimum toast.

Operation

- Before cleaning, remove the plug from the socket and allow the appliance to cool down.
- Use a moderately damp cloth to clean the outside of the appliance.
- Do not use any aggressive or scrubbing detergents.
- Grasp the crumb shaft by the loop and pull it out, remove the bread residue and push the shaft back in.

This appliance conforms to the relevant CB guidelines and has been constructed on the basis of the latest technical safety regulations.

Subject to technical changes!