

Manufactured for & Marketed by :
Lifelong Online Retail Private Limited

For queries and complaints:
please contact: customercare@lifelongindia.com
www.lifelongindiaonline.com

lifelong

Maxo Mixer Grinder



500 Watt
Powerful Motor



3 Speed
Rotary Switch



Automatic
Overload Cut-off



ABS
Plastic Body



3 High Quality
Stainless Steel Jars

**2 YEARS
WARRANTY**

INTRODUCTION:

Welcome to the Lifelong family.

Dear Customer,

Congratulations on purchasing Lifelong Maxo Mixer Grinder and a warm welcome to the Lifelong family.

At Lifelong, we take pride in developing quality products for your home, health and happiness. Through constant innovation in our products, we have been able to develop a wide spectrum of products across Home, Kitchen, Grooming and Wellness categories. We strive to enrich the lives of the modern consumer every day.

Keeping that in mind, we have offered all our products at a fair and honest price.

We hope that the Maxo Mixer Grinder serves you and your family's needs without any hassles.

Thanks again for becoming a part of the Lifelong family. Enjoy using the product!

Warm Regards,

Team Lifelong

PRECAUTIONS BEFORE USE:

- Keep the Maxo Mixer Grinder away from heat and sunlight.
- Clean the jars carefully before use.
- Do not place the machine on a wet surface.
- Never try to touch the moving parts or blades of the mixer grinder while in operation.
- Fix the jar to the base unit by turning it clockwise. Make sure it is firmly locked in position prior to usage.
- Never insert your hand or spatula or spoon, when in use.


CLEANING INSTRUCTIONS:

- Before use pour warm water in the jar, run for a few seconds and throw away the water.
- The cleaning of the mixer grinder and jars is very necessary for maintaining smooth operation of the mixer grinder and proper hygiene.
- After you have used the mixer grinder, use warm water to remove the smell of the material from the jars and then rinse under running water.
- In order to clean the blades thoroughly, remove the blades by using the spatula to loosen the screw by twisting the dome nut on the blade clockwise, while holding the coupler from under the jar.

- When removing the blade please keep the washer in a good condition for fitting again.
- The jars can be cleaned by using regular dishwashing soap.
- After thoroughly rinsing with soap, clean the jars with a dry cloth.
- Never store the jars with closed lids.
- Do not use any detergent soap solutions on the main body.
- Clean the body with a dry cloth before storing for next use.
- Never immerse the motor in the water for cleaning.



PRODUCT PARTS:

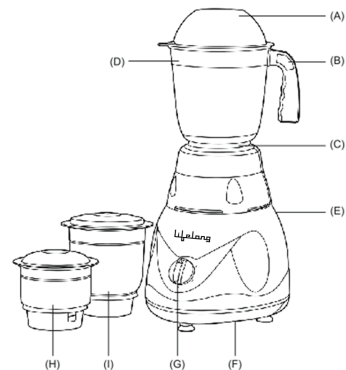

a. Jar lid

b. Jar handle

c. Top socket

d. Liquidiser jar

e. Motor unit

f. Overload protector (at the bottom)

g. 3 Speed control knob with incher

h. Dry grinding jar

i. Chutney jar

HOW TO USE:

LIQUIDIZING AND BLENDING

STEP 1: The Liquidizing and blending jar (refer fig 1) is used for preparation of shakes, juices etc.

STEP 2: Before starting the mixer grinder for the first time or after a long period of time, rotate the motor shaft.

with hand to ensure that it turns freely and smoothly.

STEP 3: Place all the ingredients in the jar and put the lid properly.

STEP 4: Now switch on the grinder for operation

Note:

Do not use this jar for wet grinding.

WET/DRY GRINDING

STEP 1: The wet /dry grinding jar (refer fig 2) is used for grinding items like Idli and dosa batter, coconut chutney, groundnut, red chili powder, sugar, palak etc.

STEP 2: Make sure that the dry grinding jar is absolutely clean and dry before use.

STEP 3: Use small pieces of ingredients for grinding.

STEP 4: Fill the jar with ingredients up to the marked capacity .

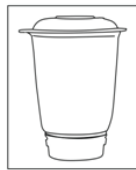


Fig.1

STEP 5: Put the flat lid on top of the jar. Grind at low speed for 15-30 seconds and then move to higher speed.

Note:

Always move gradually from lower speeds to higher speed. During grinding process, the jar might get heated up due to friction.

CHUTNEY MAKING

STEP 1: The chutney jar (refer fig 3) is mainly used for making chutney.

STEP 2: Use small pieces of ingredients for grinding.

Step 3: Put the ingredients in the chutney jar for grinding. Hold the lid tightly so that it won't get heated up.

STEP 4: The ingredients should not be too large. Break ingredients into smaller pieces.

Note:

The lid should be properly pressed.



Fig.3



Fig.2

OVERLOAD PROTECTION:

- The overload protector (OLP) is designed to protect the motor (refer fig 4) from burning.
- In case of an overload, the blade of the jar stops rotating and the motor gets jammed or starts heating up.
- If such a situation occurs the mixer grinder will automatically trip off and hence protect the motor.
- Let the motor cool down for a couple of minutes. The red button of the overload protector switch located at the bottom of the mixer grinder has to be pressed for re-operation.
- If you have to reset the OLP again and again, try reducing the quantity of ingredients in the jar.



overload protector

Consumer Warranty Card

Dear Customer,
Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 2 years

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log on to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.

Terms and Conditions:

- This warranty is void if:
 - The completely filled warranty card is not presented at the time of servicing the product.
 - The product is not operated according to the instructions given under the user manual.
 - Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - Product label specifying the model number, serial number and production code has been removed and altered.
 - Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
- Repairs or replacements will be carried out by authorized service provider.
- During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorized service provider.
- All expenses incurred in collecting the unit (s) or part(s) thereof from authorized service provider as well as any other expenses and incidentals will be borne by the consumer.
- Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
- Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
- However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not withstanding the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
- No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.