


Lifelong

HOME

MAKING IT POSSIBLE

Lifelong Steam Iron

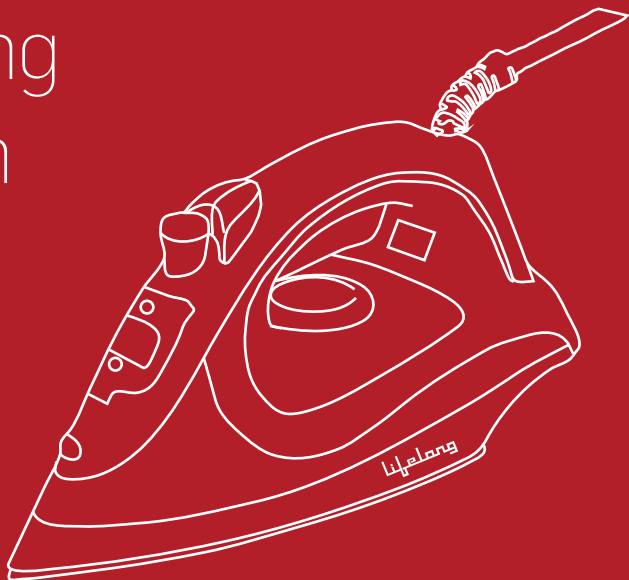

1200W



Steam burst



Self cleaning



Light indicator

1 YEAR
WARRANTY

Welcome to the Lifelong family

Dear Customer,

Congratulations on purchasing Lifelong Steam Iron and a warm welcome to the Lifelong family. At Lifelong, we take pride in developing quality products for your home, health and happiness. Through constant innovation in our products, we have been able to develop a wide spectrum of products across Home, Kitchen, Grooming and Wellness categories. We strive to enrich the lives of the modern consumer every day.


Keeping that in mind, we have offered all our products at a fair and honest price.

We hope that the Steam Iron serves you and your family's needs without any hassles.

Thanks again for becoming a part of the Lifelong family. Enjoy using the product !

Warm Regards,
Team Lifelong

Part's Identifications

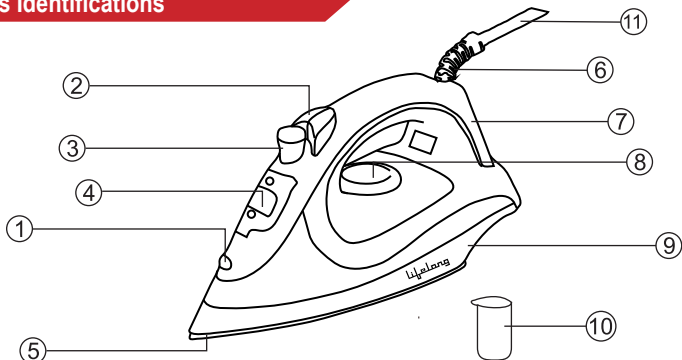

Part No-	Part Name	Part No-	Part Name
1	Power Indicator	7	Back Rest
2	Spray Knob	8	Temperature Control Knob
3	Steam / Self Clean Knob	9	Heat Insulation Cover
4	Water Inlet Cover	10	Water Pouring Cup
5	Sole Plate	11	Power Cord
6	Cord Holder		

Technical Specifications*

Product	Steam Iron
Model	Lifelong Steam Iron
Voltage	230V, 50Hz, AC
Wattage	1200 Watt
Cord Plug	3pin moulded plug with cotton braided cord
Sole Plate Coating	Non Stick Coated

*Due to continuous improvements in product, specifications are subject to change without prior notice.

Important

1. Ensure that the supply voltage is the same as that specified on rating plate.
2. The iron should always be turned off before plugging or unplugging from the mains supply.
3. Never pull the cord to disconnect from the mains supply, instead grasp plug and pull to disconnect.
4. Never use the appliance if it is damaged in anyway.
5. When leaving, even for a short while, always unplug the iron.
6. Close supervision is necessary for any appliances being used by or near children.
7. Do not leave the iron unattended.
8. Burns can occur from touching the hot metal parts, hot water or steam.
9. Use caution when you turn a steam iron upside down, there may be hot water in the water tank.
10. Never immerse the iron in water or any solution.
11. Always place the iron with its back on a firm flat surface while interrupted ironing and after use.
12. Keep the sole plate smooth; avoid hard contact with metal objects.
13. The cord should not be allowed to touch the sole plate when it is hot.
14. Remove the main plug from the mains supply before unfilling the water.
15. Prevent water overflow, do not fill over maximum level.
16. When using the iron for the first time, test on an old piece of fabric to ensure the sole plate and water tank are completely clean.

17. Please do not use hard water as it might lead to corrosion/ scaling in the appliance and subsequently the steam mechanism may stop working.
18. After the ironing is finished, the iron should be emptied and dried before storing.

19. Some parts of the iron have been slightly greased. That is why the iron may produce slight smoke when switched "ON" for the first time.

20. This appliance is not intended for use by persons (Including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
21. Children should be supervised to ensure that they do not play with the appliance.
22. Unplug the appliance from the electric mains when not in use, Never keep it plugged in.
23. The appliances must be used and placed on a flat, stable surface.
24. When placing the appliance on its support make sure the surface on which the support is fitted is stable.
25. Do not use the appliance if it has been dropped if there are visible signs of damage or if it is leaking.

How To Use

1. Keep the iron upright / vertical position.
2. Set the temperature control knob to desired ironing temperature (According to fabric).
Recommended temperature settings for different fabrics are.

Nylon	•
Wool	••
Cotton & Linen	•••

Note: 1. If the fabric consists of various kinds of fabrics, always select the temperature required by the most delicate fabric.
2. Iron the clothes first which requires low temperature than the clothes which require high temperature to iron, because iron gets hot faster than cooling.

Dry Ironing

1. Set the temperature control knob to desired position.
2. Keep the iron on its heel.
3. Insert the main plug into the mains supply.
4. After the indicator light goes off and on again, you may start ironing. The indicator light will go out from time to time during ironing, this is just to indicate the normal working of the thermostat.

Filling of water

1. Ensure that the iron is disconnected from the power supply.
2. Turn the Steam / Self Clean knob to no steam position.
3. Pull the water inlet cover, fill the water (Do not fill more than the "Max level Mark" on the water tank.)
4. Close the water inlet cover.

Steam Ironing

1. Ensure that the iron is disconnected from the power supply.
2. Press the steam knob to no steam position.
3. Fill the water. (Do not exceed max, level mark on the water tank).
4. Insert the main plug into the mains supply.
5. Set the thermostat knob at max (•) for steam ironing. Never use steam function at any other setting of thermostat knob.
6. Wait a little for the indicator light to go out and come on again.
7. Press the steam knob to "ON" position.

If temperature setting is low, water may leak from sole plate. To obtain a good flow of steam burst several times, maintain few seconds gap between each burst to enable the sole plate to recover the temperature, it has lost.

Self Cleaning

Self clean function is used to clean the sole plate after its use of few day

1. Fill water tank as described in "FILLING OF WATER"
2. Plug the iron and set the temperature control knob at maximum (•••), plug out the iron when the pilot light gets off.
3. Press the self clean button for 1 min.
4. Hold the iron horizontally allowing steam to flow through sole plate vents until the water tank is emptied.
5. Plug in the iron in order to dry the water from sole plate.
6. Clean the sole plate with a soft cloth

Note: It is recommended to use this that after every five usage, to prevent the iron from harmful materials building up during steam ironing.

Spray Ironing

1. Fill the water as described in "Filling of water"
2. Press the spray knob. A fine spray of water will come through the spray nozzle.

Cleaning

1. Before cleaning the iron, ensure that it is disconnected from the power supply and has completely cool down.
2. Deposits on the sole plate may be removed with a rough cloth soaked in a vinegar water solution.
3. The sole plate may be wiped with a damp cloth and then cleaned with a dry one.
4. Do not use abrasives on the sole plate.

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log onto to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.

Terms and Conditions:

1. This warranty is void if:
 - a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.
5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the laws.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not reply on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Manufactured for & Marketed by :

Lifelong Online Retail Private Limited

For queries and complaints:
please contact: customer@lifelongindia.com
www.lifelongindiaonline.com