

 
Manufactured for & Marketed by :
Lifelong Online Retail Private Limited

For queries and complaints:
please contact: customercare@lifelongindia.com
www.lifelongindiaonline.com

lifelong

FAN

User Manual

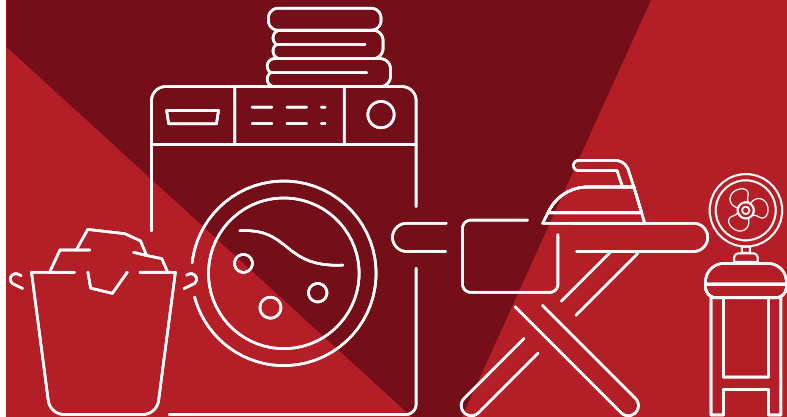

Built for Home. Built for India.

INTRODUCTION:

Dear Customer,

 
Congratulations! We welcome you to the Lifelong family, as you welcome our Lifelong Table/wall/pedestal Fan to be a part of your home.

At Lifelong, our products are carefully built for the needs of India, which is why we have crafted a diverse range of innovative products, across a spectrum of categories - Home, Kitchen, Grooming, Fitness, Lifestyle and Smart Home, to better help you. We then deliver them at the best prices, enriching your everyday living.


We are sure you can't wait to start using your new Lifelong Table/wall/pedestal Fan. We know we can't!

Looking forward to building our bond for life, cheers!


Thank you, Team Lifelong

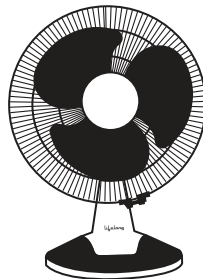


LLTF922A

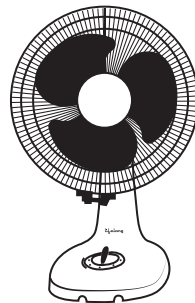 

LLTF922B

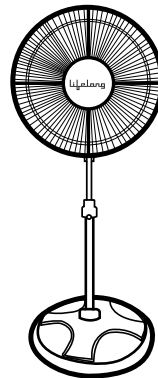 

LLPF922

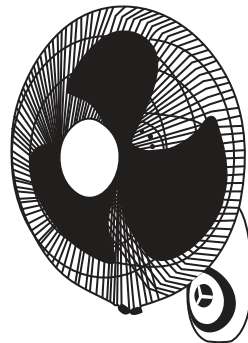 

LLWF922

TABLE OF CONTENTS:

 
1. About the product
2. Product Assembly
3. Operating Instructions
4. Device maintenance
5. Dos & Don'ts
6. Terms and conditions
7. Warranty

ABOUT THE PRODUCT:

Lifelong presents high-quality innovative fans with the latest aerodynamic technology at reasonable prices. The unique table fans are specially designed to give you cool, sharp blasts of air over wider areas to give you the best cooling experience.

PRODUCT ASSEMBLY:

Assembly of the Pedestal Fan:

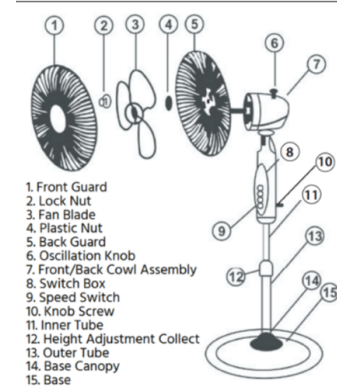

Pedestal Fan

1. Take out the motor with Switch assembly base/ Outer Tube.
2. Locate the outer tube (as shown in the above image) on the outer base (as shown in the above image) and tighten with 4 no. screws and nuts provided.
3. Slide down the base canopy (as shown in the above image) on the outer tube, by unscrewing the height adjustment collet. Screw back the height adjustment collet to position after placing the canopy.
4. Place the motor with switch assembly on the inner tube (as shown in the above image) and tighten it with the knob screw, then adjust the height as per the requirement with the height adjustment collet.
5. Unscrew the lock-nut and the plastic nut from the motor shaft and the front cowl.
6. Fix back the guard and tighten with the front cowl nut.
7. Slide the plastic blade on the motor shaft, and tighten the blade with the lock-nut, but rotating it in an anticlockwise direction.
8. Place the front guard and align the plastic ring with the front and back guard and then tighten the plastic ring screw.
9. The oscillation mechanism can be activated by pushing the oscillatory knob downward and the fan can be put into a stationary position, by gently pulling the oscillatory knob.
10. The speed of the fan can be regulated through a speed control switch fitted on the switch box by pressing the relevant buttons.

11. Modes: 0: stop

1: Low

2: Medium

3: High

Assembly of the Table Fan:

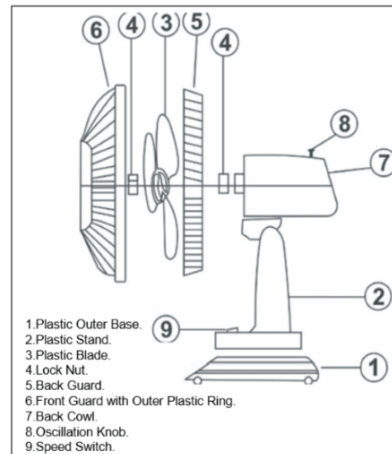


Table Fan

1. Open the packed unit and take out the guard packet
(as shown in the above image) along with the blade & the table fan's outer base.
2. Pick up the motor assembly along with the table fan stand.
3. Place the motor assembly along with the table fan's stand in the outer base ensuring to switch the position on the front. Use 5 screws to fix the motor assembly to the outer base from the bottom.
4. Unscrew the 2 lock-nuts (as shown in the above image) from the motor shaft & from the back cowl.
5. Fix the back guard and tighten the front lock-nut.
6. Slide the plastic blade on the motor shaft, and tighten the blade with the lock-nut by rotating it in the anticlockwise direction.
7. Place the front guard and align the plastic ring with the front and back guard and tighten the plastic ring screw.
8. The oscillation mechanism can be activated by pushing the oscillation knob downward and the fan can be turned to a stationary position by gently pulling the oscillation knob.
9. The speed of the fan can be regulated by the speed control switch fitted on the plastic stand by pressing the relevant buttons.


10. Modes: 0: stop

1: Low

2: Medium

3: High

Assembly of the Wall Fan:

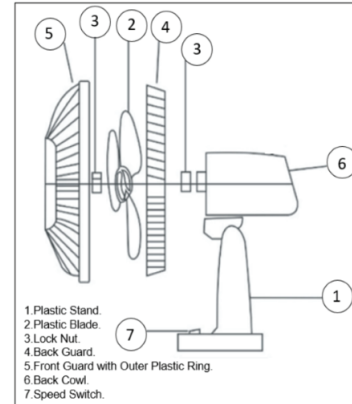

Wall Fan

1. Open the packed unit, and take out the guard packet
(as shown in the above image) along with the blade
2. Pick up the motor assembly along with the wall fan body.
3. Unscrew the 2 lock-nuts (as shown in the above image)
from the motor shaft & from the back cowl.
4. Fix the back guard and tighten the front lock-nut.
5. Slide the plastic blade on the motor shaft, and tighten the blade with the
lock-nut by rotating it in the anticlockwise direction.
6. Place the front guard and align the plastic ring with the front and back
guard and tighten the plastic ring screw.
7. The speed of the fan can be regulated by the speed control switch
fitted on the plastic stand by pressing the relevant buttons.
8. Modes: 0: stop
 - 1: Low
 - 2: Medium
 - 3: High

OPERATING INSTRUCTIONS:

1. To Change the speed of the fan, set the switch knob to the desired position.
2. There are three consecutive positions on the switch knob "1", "2", "3"
denoting the different speeds of the fan.
3. Fan runs at the maximum speed at position 3.
4. To tilt the fan, switch off the fan, hold the stand & tilt the fan either
upward or downwards as required.
5. Fan has an indexed tilt mechanism which does not require any tightening.
6. To access the oscillation mode, press the oscillation knob.
7. To stop the fan from oscillating, pull the oscillation knob upwards.

Automatically operated devices: To reduce the risk of injury, disconnect
from power supply before servicing.

Note: Place the fan on a firm, levelled surface. Insert the plug of the power
cord into any standard 220~240V,50Hz AC outlet.

DEVICE MAINTAINANCE :

Maintenance:

1. Before cleaning, ensure that the power supply is switched off and the plug is pulled out of the power supply socket.
2. To clean the fan, carefully wipe the unit with a soft and clean cloth.
3. DO NOT immerse the fan in water and never allow water to drop into the motor housing.
4. Never use gasoline, benzene or thinner to clean the fan this will damage the surface of the unit.
5. After cleaning, ensure to completely dry the unit with cloth or towel.

Post-season Maintenance

1. Your fan can be stored in the winter season.
2. Before putting the fan in storage, clean thoroughly, cover with a vinyl bag and store in a cool and dry place.
3. We recommend using the original box.

DO'S & DON'TS:

1. Do not bump the guard or blades against anything.

The deformation of the angles of the blades is liable to cause malfunction.

2. When removing or carrying the fan, be sure to take hold of the handle or stand.
3. Do not pull any of the exterior electric wires or tilt the fan when in operation.

Terms and Conditions:

1. This warranty is void if:
 - a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised service.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.

5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Consumer Warranty Card

Dear Customer,
Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log on to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.