 


lifelong

EGG BOILER

User Manual

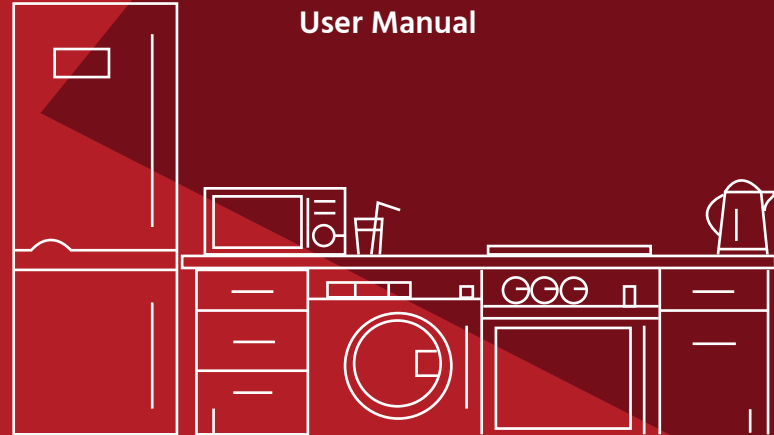

Manufactured for & Marketed by:
Lifelong Online Retail Private Limited

For queries and complaints:
please contact: customercare@lifelongindia.com
www.lifelongindiaonline.com

Built for Taste. Built for India.

INTRODUCTION:

Dear Customer,

Congratulations! We welcome you to the Lifelong family, as you welcome our Lifelong Egg Boiler to be a part of your home.

 
At Lifelong, our products are carefully built for the needs of India, which is why we have crafted a diverse range of innovative products, across a spectrum of categories - Home, Kitchen, Grooming, Fitness, Lifestyle and Smart Home, to better help you. We then deliver them at the best prices, enriching your everyday living.

We are sure you can't wait to start using your new Lifelong Egg Boiler.

We know we can't!

Looking forward to building our bond for life, cheers!

Thank you, Team Lifelong

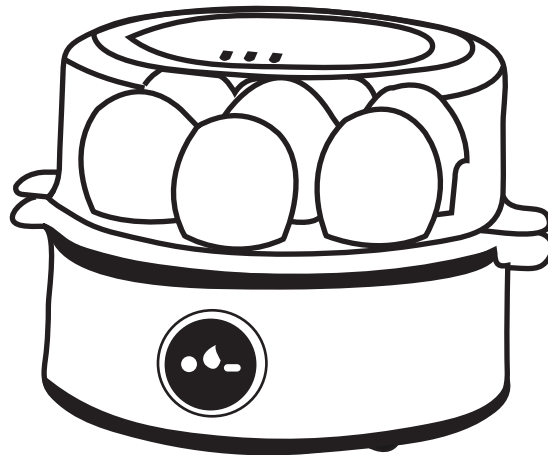

LLEB05


TABLE OF CONTENTS :

1. About the Product
2. Marking of Product
3. Precautions Before Use
4. Operating Instructions
5. Dos and Don'ts
6. Device Maintenance
7. Specifications
8. Troubleshoot Chart
9. Terms and Conditions
10. Warranty

ABOUT THE PRODUCT:

Lifelong Egg Boiler is a multipurpose appliance that helps you to get breakfast ready in a matter of minutes. You can have your eggs exactly how you like them, every morning - boiled (soft, medium, hard) You can also use it to steam vegetables.

 MARKING OF PRODUCT:

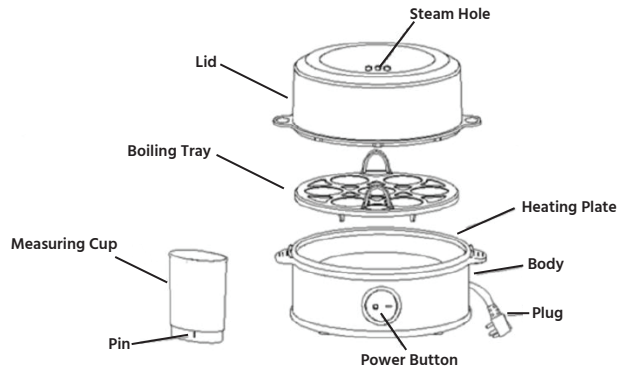

PRECAUTIONS BEFORE USE:

- Unwrap its packages.
- Check whether the voltage indicated on the rating label is consistent with your voltage used.
- Please use a ground power.
- For the first use, please wash or boil it with water twice and pour away the residual water.

OPERATING INSTRUCTIONS:

1. Steam egg: Add appropriate water (Please refer to the table below for specific water volume) with a cup according to your own Favor, put the eggs on the shelf stably and then get the top cover on.

(It is for your reference only and you can make adjustments according to your experience).

Doneness	Water Volume	Time
Medium	20ml	6min
Medium well	30ml	9min
Well done	50ml	12min
Steamed egg	50ml	12min

2. Connect the power, press down the power button and the indicator lights which has shown that the egg boiler is working. Provided the indicator lights once the power is connected, it shows the power is connected and the egg boiler has been working directly and please do not press the power button anymore.
3. The power will be turned off once the water in the egg boiler is dry-boiled and it will indicate the steamed egg is ready when the indicator lights.
4. If necessary, you may pull out the plug to cut off the power during the cooking process.

Capacity of water on different level of the measuring cup			
Scale (Egg Numbers)	Water Volume	Scale (Egg Numbers)	Water Volume
----- 1	66	----- 1	40
----- 2	64	----- 2	37
----- 3	60	----- 3	34
----- 4	56	----- 4	31
----- 5	53	----- 5	28
----- 6 & 7	50	----- 6 & 7	25



Well done



Medium



Medium well

Scale (Egg Numbers)	Water Volume
----- 1	33
----- 2	30
----- 3	27
----- 4	24
----- 5	21
----- 6 & 7	18

DOS AND DON'TS:

1. Do not connect the power when the cover is left off so as to avoid any personal injury caused by the spilt boiling water.
2. Do not use it in your absence.
3. The egg boiler shall be put on a solid platform during use. Do not press too hard so as to avoid any damage of the power switch.
4. The unit shall not be used on the surface or in the vicinity of heat. Do not put those which will be dampened by steam on the top of this unit.
5. Do not add the water or pull out the plug when the water is dry-boiled. Please do not touch the heating plate so as to protect yourself from being scaled.
6. Be cautious about the steam from the vent so as to prevent yourself being scaled.
7. No liquid entry is allowed in the internal egg boiler so as to avoid any danger.

DEVICE MAINTENANCE:

- Please pull out the plug from the socket after use.
- Do not clean it until the power is turned off and the egg boiler is cooled.
- The shelf and cover can be cleaned with a washing detergent or sponge. Do not clean with a hard steel wire so as to avoid any surface damage.
- Do not put the whole unit into the water to wash. The machine surface can be wiped with a wet towel. It is not allowed to be rinsed with water so as to avoid any electric leakage and occurrence of faults.
- Please clean and wipe the unit and put it into its packages if you want to lay it up for a long time. Put it in a ventilated and dry place so as to avoid being dampened to cause any problems on its normal use.

SPECIFICATIONS:

Description	Egg Boiler
Model	LLEB05
Rated Voltage	220-240V ~
Rated Frequency	50 Hz
Rated Power	360 W
Maximum Egg Volume	7

TROUBLESHOOT CHART:

Problem	Possible Cause	Possible Solution
Indicator light does not turn on.	There is a connection problem.	Check if the appliance is connected to the mains and if the plug is inserted firmly into the wall socket.
	The light is defective.	Switch off the appliance and unplug it. Call the Lifelong customer service number for further assistance.
	The switch has not been pressed.	Switch on the appliance.
Eggs are over or under done.	Too much or too little water has added.	Add water in right quantity as indicated in the manual.
The eggs are raw.	The boiling process has not started.	You have failed to press the button. Switch on the appliance.
	The heating element is damaged.	Switch off the appliance and unplug it. Call the Lifelong customer service number for further assistance.

Terms and Conditions:

1. This warranty is void if:

- The completely filled warranty card is not presented at the time of servicing the product.
- The product is not operated according to the instructions given under the user manual.
- Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
- Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
- Product label specifying the model number, serial number and production code has been removed and altered.
- Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
- Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
- Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.

- Repairs or replacements will be carried out by authorized service provider.
- During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
- All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be

- Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
- Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
- However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
- No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log on to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.