Manufactured for & Marketed by : Lifelong Online Retail Private Limited

For queries and complaints: please contact: customercare@lifelongindia.com www.lifelongindiaonline.com

ومملعهنا

Hand Blender

Easy to

Store





Powerful Motor

1 YEAR WARRANTY

INTRODUCTION:

Welcome to the Lifelong family. Dear Customer,

Congratulations on purchasing Lifelong Hand Blender and a warm welcome to the Lifelong family.

At Lifelong, we take pride in developing quality products for your home, health and happiness. Through constant innovation in our products, we have been able to develop a wide spectrum of products across Home, Kitchen, Grooming and Wellness categories. We strive to enrich the lives of the modern consumer every day. Keeping that in mind, we have offered all our products at a fair and honest price.

We hope that the Hand Blender serves you and your family's needs without any hassles.

Thanks again for becoming a part of the Lifelong family. Enjoy using the product!

Warm Regards,

Team Lifelong

KNOW YOUR BLENDER:

Hand Blender is elegant, light, compact and portable with its multipurpose blade. It can make your favourite milk shakes, mango shakes, whipped cream, butter, Egg beating, soups and sauces, chops and purees from vegetables and fruits within minutes.

HOW TO OPERATE:

- This blender is simple to operate. Just hold it and press the switch ON.
- The guard of the blender (portion where the blade attachment is fixed) is crafted from food grade material, resulting in an efficient non-reactive and hygienic medium.
 This Blender offers you convenience.
- Start with holding the blender lightly in one hand (light grip), the other hand remains free to add ingredients or to hold the bowl or just have a rest.
- Switch it "ON" only after immersing it in the bowl to be used.
- Make sure that there is enough food in the bowl without stirring it.

• After use, switch OFF and slowly remove the surplus. It can be used with any suitable bowl and anywhere in the kitchen. Even in the sauce pan in which food is being cooked. **Don't forget to switch "OFF" after every 1 minute use.**

TOMATO PUREE IN TWO MINUTES:

Place the required quantity of water in cooking bowl on fire. Let the water boil. Cut the tomatoes into halves and put it in the bowl. Operate the blender in the bowl. Your tomato puree is ready.

HOW TO CLEAN:

• The Blender needs to be cleaned spic and span after every job. Its user friendly design makes cleaning quick and simple.

- Start with disconnecting the power cord and holding the Blender under a running tap.
- Then wipe it clean and put it back on its wall bracket.
- Use hot water in case of sticky foods.

• We have placed the motor at the top to prevent the burn out. We strictly recommend to keep the cable entry, housing and switch dry.

• Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.

USING THE BLENDER:

 Use deep dishes particularly for small quantities to get the best performance.
 Do not grip it tightly instead move it lightly. While beating cream, move it up and down gently to lighten the mixture without removing the blade from the mixture altogether.

3. Before whipping cream, ensure that the blade and blender are perfectly dry, as moisture is an enemy in the process.

 Cut down hard foods, fruits and vegetables into smaller pieces, before chopping or grating. In association with the hand blender, you can make Mango Shakes, Lassi, Cold Coffee, Mocktails etc., as well. However, to avoid spillage of liquids during operation, processing should be done in a jug or large bowl.

CARE AND MAINTENANCE:

- Adequate care of Blender must be taken to ensure its longer & smoother functioning.
- Always switch OFF power & pull out the plug before rinsing it under the tap.
- Remove solid pieces, if any from the blades.
- Do make it a point to switch OFF briefly after every 1 minute of use to let the motor cool down.
- Further to keep the blender in good running condition, let it run for a while, once every month in a upside down position. This is particularly recommended when the blender is not used for a long time.

A LITTLE CARE GOES A LONG WAY:

- Adequate care of Blender must be taken to ensure its longer & smoother functioning.
- Always switch OFF power & pull out the plug before rinsing it under the tap. Remove solid pieces, if any from the blades.
- Do make it a point to switch OFF briefly after every 1 minute of use to let the motor cool down.

• Further to keep the blender in good running condition, let it run for a while, once every month in a upside down position. This is particularly recommended when the blender is not used for a long time.

a) Always disconnect the blender from the supply if it is left unattended and before assembling, Disassembling or cleaning.

b) Do not allow children to use the blender without supervision.

c) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly gualified person(s) in order to avoid a hazard. Please contact us on our customer care helpline.

TECHNICAL SPECIFICATION:

Power	300 Watts DC Motor
Voltage/Frequency	220-240 V, 50 Hz
Speed	Single Speed Operation

Consumer Warranty Card

Dear Customer

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from them date of purchase. Name of the product:

Model:

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification. Customer Care: customercare@lifelongindia.com

Customer Details

Name:	
Address:	
Home Number:	
E-mail Address:	

Product Details

Model No.:	
Serial No.:	
Online Site:	

Please log on to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.

Terms and Conditions:

- 1. This warranty is void if:
 - a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - C. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
- 2. Repairs or replacements will be carried out by authorized service provider.
- During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
- All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as will as any other expenses and incidentals will be borne by the consumer.

- 5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warrantied, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the lass.
- 6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
- 7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punifive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profils, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
- 8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not reply on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.