

- 1. Use deep dishes particularly for small quantities to get the best performance.
- 2. Do not grip Handy tightly instead move it lightly. While beating cream, move it up and down gently to lighten the mixture without removing the blade from the mixture altogether.
- 3. Before whipping cream, ensure that the blade and blender are perfectly dry, as moisture is an enemy in the process.
- 4. Cut down hard foods, fruits and vegetables into smaller pieces, before chopping or grating.

In association with the handy blender, you can make Mango Shakes, Lassi, Cold Coffee, Mocktails etc. as well. However, to avoid spillage of liquids during operation, processing should be done in a jug or large bowl.

Consumer Warranty Card

Dear Customer,
Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from them date of purchase.
Name of the product: _____
Model: _____
Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.
Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____
Address: _____
Home Number: _____
Office Number: _____
E-mail Address: _____

Product Details

Model No.: _____
Serial No.: _____
Purchase Date: _____
Invoice Number: _____
Online Site: _____

Please log onto to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.

Terms and Conditions:

- 1. This warranty is void if:
 - a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
- 2. Repairs or replacements will be carried out by authorized service provider.
- 3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised service.
- 4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.
- 5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the laws.
- 6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
- 7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
- 8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not reply on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

 

For queries and complaints:
please contact: customercare@lifelongindia.com
www.lifelongindiaonline.com

Customer care: +91-9711558877



MAKING IT POSSIBLE

Lifelong
Hand
Blender

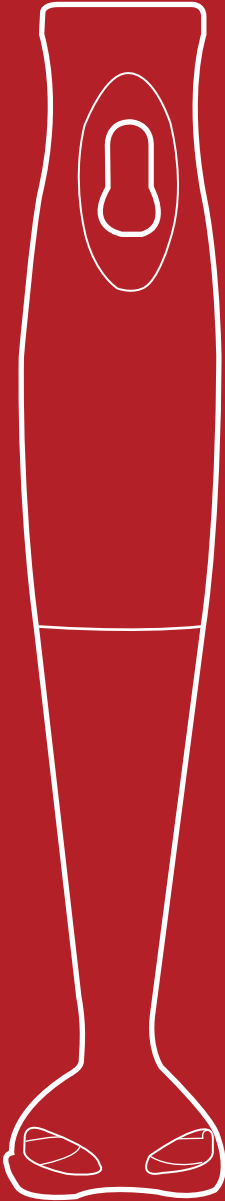

1 YEAR
WARRANTY

CONGRATULATIONS

Dear Customer,

Welcome to the world of Hand Blender with extra powerful motor designed to save your time & labour. Convenient way to process your food and enjoy more delicious food.

You will find that the more you use it the more helpful it will become and more you will enjoy it. Keep your Blender where it is convenient to use at a moment's notice.

It occupies a small amount of space on your kitchen wall and should be readily accessible at all times. In this way you will use it for every day and save your time and labour. One of the things you should do is to select a permanent location for your Blender at a place where it will always be plugged in and ready for instant use at the push of a button.

With Best Wishes...

TECHNICAL SPECIFICATIONS

VOLTAGE	:	230V AC/DC/50Hz
POWER	:	300 WATTS
SPEED	:	18,000 R.P.M.
RATING	:	1 MINUTE

KNOW YOUR BLENDER

Hand Blender is elegant, light, compact and portable with its multipurpose blade. It can make your favourite milk shakes, mango shakes, whipped cream, butter, Egg beating, soups and sauces, chops and purees from vegetables and fruits within minutes.

LEARN TO USE IT- GREAT CONVENIENCE

Gripping of blender is very comfortable and simple to operate. Just hold it and press the switch ON. Even a child can operate it. The guard of the blender (portion where the blade attachment is fixed) is crafted from food grade material, resulting in an efficient non reactive and hygienic medium. This Blender offers you convenience. Start with holding the blender lightly in one hand (light grip), the other hand remains free to add ingredients or to hold the bowl or just have a rest. The grip has been designed in such a way that its weight lies lightly in the palm. Switch it "ON" only after immersing it in the bowl to be used. Make sure that there is enough food in the bowl without stirring it. After use, switch OFF and slowly remove the surplus. Of course, it can be used with any suitable bowl and anywhere in the kitchen. Even in the sauce pan in which food is being cooked in fire.

Don't forget to switch "OFF" after every 1 minute use.

TOMATO PUREE IN TWO MINUTES

Place the required quantity of water in cooking bowl on fire. Let the water boil. Cut the tomatoes into half the size and put it in the bowl. Operate the blender into the bowl. Your tomato puree is ready.

HOW TO CLEAN YOUR HAND BLENDER

The Blender is to be cleaned spot and span after every job. Its user friendly design makes cleaning quick and simple. Start with disconnecting the power cord and holding the Blender under a running tap. Wipe it clean and put it back on its wall bracket. Use hot water in case of sticky foods. We have placed the motor at the top to prevent the burn out. But we would strictly recommend to keep the cable entry, housing and switch dry.

A LITTLE CARE GOES A LONG WAY

Adequate care of Blender must be taken to ensure its longer & smoother functioning. Always switch OFF power & pull out the plug before rinsing it under the tap. Remove solid pieces, if any from the blades. Do make it a point to switch OFF briefly after every 1 minute of use to let the motor cool down. Further to keep the blender in good running condition, let it run for a while, once every month in an upside down position. This is particularly recommended when the blender is not used for a long time.