

lifelong

HOME

MAKING IT POSSIBLE

Lifelong Fully Automatic Top Load Washing Machine



Fuzzy Logic
Control



Memory
Backup



Child
Lock



Auto Balancing
Detection



Stainless Steel
Curve Drum



24 Hr Delay
Start Function



Low Water
Pressure
Technology



2 YEAR
COMPREHENSIVE WARRANTY

Contents








Safety and precautions.....	2
Installation of the washer.....	5
Preparation before washing.....	7
Parts identification of the washer.....	8
Instruction of the washer operation panel.....	9
Main Features.....	13
Cleaning and Maintenance of the washing machine.....	14
Identify usual trouble of washer.....	15
Malfunction display and solutions.....	16
Technical specifications.....	17










Safety and precautions

Observe the following items in order to prevent from injuring yourself, others and the damage of property:

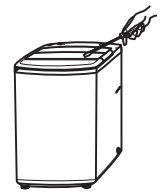	Warning	This indicates serious injury or death to human being may be caused.
	Caution	This will remind you that injury to people and damage to property may occur.

Please observe following contents of graphics.

	This graphics represents(cause attention), and detailed cautions will be displayed inside the graphics. 
	This graphics represents (operation prohibited), and detailed prohibitive items will be displayed inside the graphics. 
	This graphic represents (forcible execution), and detailed forcible execution items will be displayed inside the graphics. 
	This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

 Warning	
<p>Please do not disassembly and assembly the machine without authorization.</p> <p> No dismantling</p> 	<p>Please do not insert your hand and take out clothes inside the spin barrel before it is fully stopped.</p> <p> No touching</p> 
<p>Please do not install the machine in damp and raining environment to avoid electric shocking, catching fire, faults and distortion accidents.</p> <p> No dampness</p> 	<p>Please do not directly rinse the machine with water when cleaning.</p> <p> No rinsing</p> 




Warning

Please do not let children climb the machine or peer into the rotating spin barrel to avoid accidents.



Prohibited

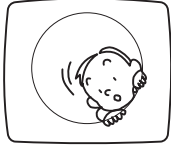

It is prohibited to wash the clothes touching with kerosene, gasoline, alcohol and other flammable materials.




Prohibited



Please do not damage power flexible cord and power plug to avoid electric shocking, short circuit and catching fire.



Prohibited

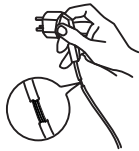


Regularly clean the power plug to remove dust and dirt to avoid contact failure.



Please pull out plug from the socket if the machine is not in use.



Pull out the plug

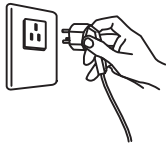


Please well connect the earth line of socket to avoid electric shocking by accidental leakage.


(earthing)



Earthing

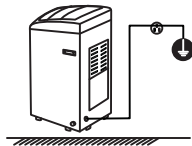

Please insert the power plug tightly.

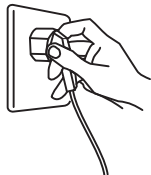

Please do not place on the washer burning candle, mosquito-repellent incense, cigarette and other flammable things, as well as electric stove, air heating fan and other heating sources.



Smoke and fire prohibited




Please use correct power source.



Please do not pull out or insert the plug with wet hands to avoid electric shocking.




Wet hands are prohibited

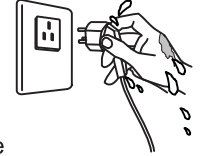

Caution

Please ensure that the water inlet pipe is connected and the tap is opened before washing clothes.

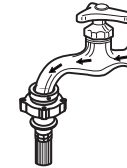

The water temperature shall not exceed 50°C when washing with warm water.



Prohibited



Customers are not allowed to change the power line without permission.




Prohibited



It is strictly prohibited to place children or lay weights on the washer.



Prohibited

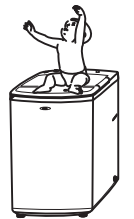

Please do not pull the electric cord when pulling out the plug.



Please do not wash down jacket, raincoat, fishing coat and similar clothes in the washer.




Prohibited





Installation of the washer

Remove package

- Remove package and take out the bottom board of the cabinet on the foam cover.
- Open the lid of washer's door and take out accessories.
- A trial operation or washing on the foamed cushion is strictly forbidden.

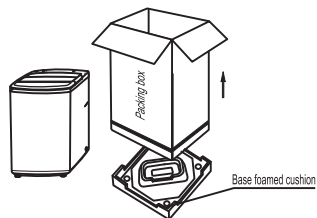


Installation of drain hose

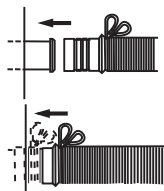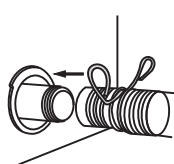

- Completely sleeve the drain hose over the sewer.
- Fix and tighten it with a hoop. (As shown in the figure)

Placement of upper water drain hose

The height of drain hose ("a") should be between 86-100 cm. Diameter of "b" should not be less than 3 cm, and flow capacity not less than 40 L/Min.

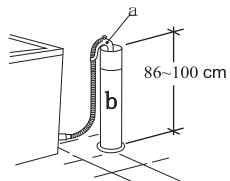

FOR UPPER DRAIN SYSTEM ONLY

CONNECTING THE COLD WATER SUPPLY HOSE


The water supply hose must be connected to the washing machine at one end and to the water faucet at the other. Do not stretch the water supply hose. If the hose is too short and you do not wish to move the water faucet, replace the hose with a longer, high-pressure hose. Select appropriate faucet as shown in the figures below. If none of these faucets are available, use the faucet adapter provided. The end of faucet spout should be longer than 10mm (0.4"), or the connector cannot be fixed properly. Water leakage could develop.

1. Connect the water inlet hose to the faucet by turning the connecting nut.



Be sure a rubber ring is inside the connecting nut.

2. Then connect the other end of water inlet hose to the cold connector in water mixing valve by turning the connecting nut.

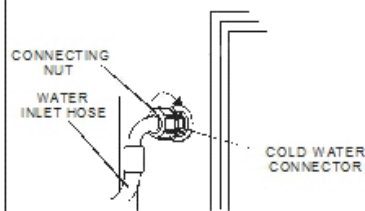


Installation of the washer


SINK FAUCET CONNECTION

For normal kitchen-sink tap only use the inlet hose with cold water inlet. Connect the inlet hose to the male hose thread adapter by turning it clockwise to be fixed tightly. Make sure to insert the rubber ring enclosed. Then connect tightly to your sink.



Note: Some faucets may require you to also use the female hose thread adapter between the male adapter and your sink faucet as shown below. Make sure the rubber ring is inserted and connect to your sink.

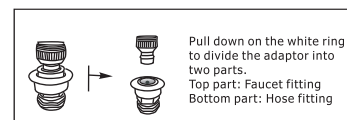

Internal Threads

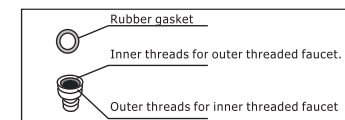

External Threads

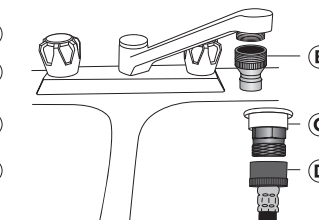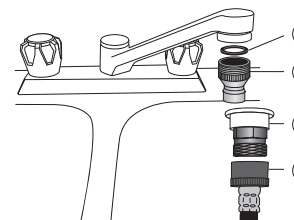


- A Rubber Washer
- B Faucet Connector
- C Quick Connection Adaptor
- D Water Inlet Hose

If water leaks from faucet connection or washer connection, turn off water and tighten fully using a wrench. Be careful not to over tighten and damage water connection. Turn on water supply and make sure no leaks are present.

DISCONNECTING THE WATER SUPPLY

HOSECONNECTINGNUTDismantling the hose directly may cause water to splash due to the possible high water pressure in the hose, even after the faucet has been turned off. Please take off the hose as per following steps, even if the faucet is closed:

- Turn off the faucet.
- Turn on the power and let the machine run for about 5 seconds then turn it off.
- Remove the connecting nuts from the faucet and washing machine.

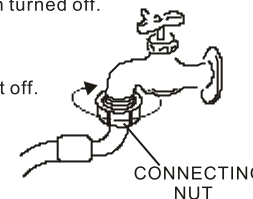


Note: If the washing machine is frequently used, it is not necessary to dismantle the inlet hose to avoid possible damage to the threads.



If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. The instructions for appliances connected to the water mains by detachable hose-sets shall state that the new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused. The openings must not be obstructed by a carpet. This appliance is for indoor use only.

Preparation before washing

1 Adjust the adjustable foot to make the washer be placed stable.

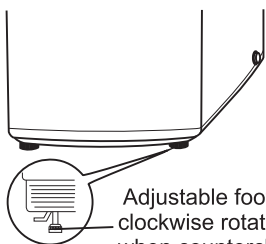


Adjustable foot (extend when clockwise rotating and shorten when counterclockwise rotating)


(Slightly incline the washer first and loosen the adjustable foot knob. Adjust the adjustable foot so as to ensure four corners of washer be steadily contacted with the ground. Then tighten the adjustable foot knob and lock it. If the ground is obviously not flat, correction should be made on the ground surface, otherwise the washer barrel will incline and knock the cabinet)

2 Install the water inlet hose.


For one inlet hose

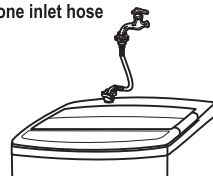

3 Connect with to power source.

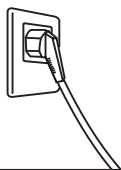


4 Turn on the water supply.

 

5 Put down the drain hose.

Note:
The water
will overflow
when the
height of
the drain
hose under
860mm.

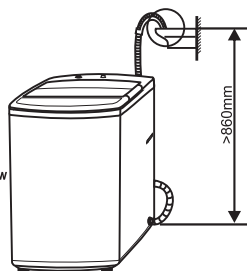


6 Put in clothes and suitable amount of washing powder.

 

 

NOTICE Before washing, please do take out coins, keys and other hard goods, and zip up clothes tightly to prevent them and barrel from damage.



Parts identification of the washer

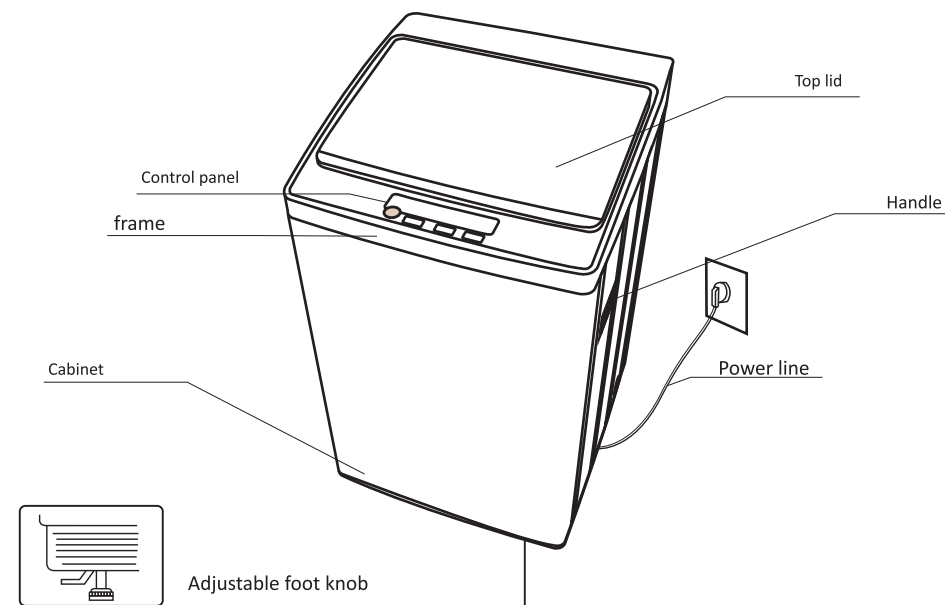


Accessories

			
Drain hose	User manual	Water inlet hose assembly x1 <small>Only for model with double screw thread water inlet pipe</small>	Quick connection adaptor x2

Please refer to the real material as the attachment

Instruction of the washer operation panel

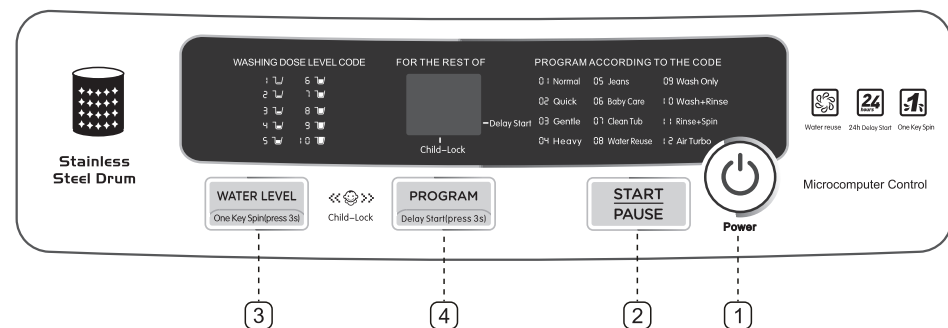

<div>1</div>	Power	<p>Push the "Power" button to switch on the power. Under power-on mode, push it to switch off the power. Push the "power" button to switch on the power. If the switch off the power automatically after 5 minutes.</p>																										
<div>2</div>	Start Pause	<p>After the power is switched on,press it to start the machine . The washing machine running in accordance with the set operation procedures. After starting up, directly click this button, the machine will running according to commonly program. Press the pause key, we can reset the corresponding "progress" and "water level", press this key again, continue the former program or running according to the new set program. During working, push it to pause. During pause,push it to restart and go on working.</p>																										
<div>3</div>	water level/ One Key Spin (press 3s)	<p>The key is a dual function keys for "water level" and "Spin(press 3 secs)". When choose "water level" , there are 10 water gears choose according to the quantity of clothes, the display screen shows the water level NO.: lowest - highest - water cycle</p> <div>1-2-3-4-5-6-7-8-9-10 cycle LowestHighest</div> <p>During the standard program the washing machine will detect the size of the laundry and automatically select the water button and make your selection by pressing the "Water Level" button until desired level is shown (1-10). If there is water inside the tub and the machine cannot detect the laundry load, it will display water level "4". If there is wet clothes in the tub, it may display water level "8", you must select suitable water level by yourself. During operation of the wash, or rinse program, you can adjust the water level by pressing the Water Level button. The water level may vary due to the different moisture level of the laundry items. When choose "Spin" (Press 3 seconds), the display screen will shows spin time after beep sound, and then the clutch will work and start drain for spinning.</p>																										
<div>4</div>	Program/ Delay Start (press 3s)	<p>The key is a dual function for "Program" and "Delay Start(press 3 secs)". The default display screen shows the wash programe NO.: 01 expresses "Standard"</p> <table><tr><td>Wash Programe</td><td>Normal</td><td>Quick</td><td>Gentle</td><td>Heavy</td><td>Jeans</td><td>Baby Care</td><td>Clean Tub</td><td>Water Reuse</td><td>Wash Only</td><td>Wash+Rinse</td><td>Rinse+Spin</td><td>Air Turbo</td></tr><tr><td>Display</td><td>01</td><td>02</td><td>03</td><td>04</td><td>05</td><td>06</td><td>07</td><td>08</td><td>09</td><td>10</td><td>11</td><td>12</td></tr></table>	Wash Programe	Normal	Quick	Gentle	Heavy	Jeans	Baby Care	Clean Tub	Water Reuse	Wash Only	Wash+Rinse	Rinse+Spin	Air Turbo	Display	01	02	03	04	05	06	07	08	09	10	11	12
Wash Programe	Normal	Quick	Gentle	Heavy	Jeans	Baby Care	Clean Tub	Water Reuse	Wash Only	Wash+Rinse	Rinse+Spin	Air Turbo																
Display	01	02	03	04	05	06	07	08	09	10	11	12																

Instruction of the washer operation panel

4 Program/ Delay Start (press 3s)	<p>Child Lock Function This is a device to protect children from being accidentally hurt while playing with the washer. How to start the Child Lock function : Press the "Power" button to go to an initial washing mode. By pressing "Start/Pause" button, you start washing and in case Child Lock function is needed during the laundry. Press and hold both the "Program" and "Water Level" buttons down simultaneously for 3 seconds. (If the Child Lock is activated, the Child Lock dot sign will appear in display). To release the function of Child Lock : To deactivate the Child Lock function, press and hold both the "Program" and "Water Level" buttons simultaneously for 3 seconds again. (If the Child Lock function is deactivated, the Child Lock dot sign will disappear). Note : When the child lock function is ON all LEDs except for that of the selected Water Level blinks. — Auto Restart The power is turned ON automatically after power failure.</p> <p>When choose "Delay Start" (Press 3 seconds) button to select suitable reserve wash program. After switching on the power, the reserve time program is set to off mode automatically. If you need to set the washing procedure to be finished at delay time, please push the "Delay Start" button to set the reserve washing program. During operation, the digital tube will display the remained time (hours). Push down the delay button. The delay indicator light is on, the digital displays the delay time of finishing washing (in hour). The point light flashes to indicate in the reverse mode. When the "Delay Start" function is activated, the indicator light of the program you have set will be off. The "Delay Time" and "Remaining Time" indicator lights will be on. During reserve procedure, push the "Delay Start" button to display the relay mode. To change the running program or cancel the relay setting, you need to switch off the power and make new selection.</p>
--	---

Digital graphic display

Displays the remaining wash time.
Displays the error state if a problem occurs in the washing machine so that you can take action.

Fuzzy

Selects the suitable water level automatically under "Normal" 、 "Wash only" 、 "Wash+Rinse" wash program.


Detergent Distribution

The Detergent Distribution technology delivers more cleanliness. It will work for the water level on 6 or above under "Normal" wash program, pulsator starts work after water go inside, its powerful, concentrated water ensures detergent is distributed evenly, so it washes your laundry more thoroughly.

24 hours delay start

24 hours delay start stores the selected program upto 24 hours based upon our requirement to run the machine. We get the benefits of this feature in our regular water supply timing . Based on the water supply timing, delay start will be set accordingly and machine will run in that time only . If you have to go to work and you want to wash your clothes during your water supply time, this feature will be very helpful.

Instruction of the washer operation panel

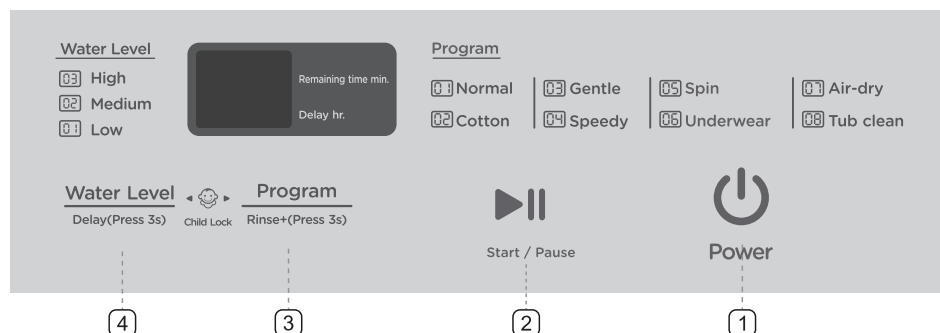

1 Power	<p>Push the "power" button to ON or OFF the machine. When power-on mode, push it to switch off the power, when power-off mode, push it to switch on the power. No operation, Automatic shutdown for 10 minutes.</p>
2 Start/ Pause	<p>After the power is switched on, press it to start the machine. The washing machine running in accordance with the set operation procedures. After starting up, directly click this button, the machine will running Cotton program. Press the pause key, we can reset the corresponding "Program" and "Load size", press this key again, continue the former program or running according to the new set program. During working, push it to pause. During pause, push it to restart and go on working.</p>
3 Program Rinse+ (Press 3s)	<p>This key is a dual-purpose key. This key is shared by Program and Rinse + (press for 3 seconds).</p> <p>Program button:</p> <ul style="list-style-type: none"> -Choose a suitable washing program according to different laundry. -Press the button to select 8 different programs. Each time you press the button, the program will cycle in the following way. <p>Normal → Cotton → Gentle → Speedy → Spin → Underwear → Air-dry → Tub clean</p> <p>↑ ↓</p> <p>"Rinse + (press for 3 seconds)" button:</p> <ul style="list-style-type: none"> -According to your needs, the number of rinsing in the program is increased to improve the rinsing performance. -In the power-on state or the washing machine pause state, long press this key for "3" seconds, the "beep" sound prompts to enter "rinsing +" <p>Program, the display shows the default number of rinses for the current program. Each time the button is pressed, the number of rinses is cycled in the following way.</p> <p>Initial state (default rinse times of the currently selected program) → 3 → 4</p> <p>↑ ↓</p> <p>The Quick / Dehydration / Drum Air Drying / Drum Cleaning Program does not have a "Rinse +" function.</p>

Instruction of the washer operation panel

4 Water Level Delay (Press 3s)	<p>This key is a dual-purpose key, which is shared by "Water Level" and "Reservation (press for 3 seconds)".</p> <p>"Water level" button:</p> <ul style="list-style-type: none"> -According to the needs, the water level can be adjusted manually. Each time the button is pressed, the cycle is as follows. <p>02 → 03 → 01 (Applicable to Normal/Cotton/Gentle/Speedy/Underwear/foam net procedures)</p> <p>↑ ↓</p> <ul style="list-style-type: none"> -Only 03 water level can be selected for barrel cleaning; water level cannot be selected for dehydration and barrel drying procedures. <p>"Reservation (press 3 seconds)" button:</p> <ul style="list-style-type: none"> -When you want to delay the end time of the washing machine, you can use the reservation function. -When the power is on, press and hold this key for "3" seconds. -The display shows the current default appointment. Each time you press the key, it cycles in the following way. <p>Initial state (without reservation) → 2 → 3 ... 22 → 23 → 24</p> <p>↑ ↓</p> <ul style="list-style-type: none"> -There is no "reservation" function in the dehydration / air-drying / barrel cleaning program. -After the appointment starts, you can press this key for 3 seconds to check the remaining time; After the appointment is started, if you want to cancel the appointment, you need to press the "Power" key to restore the washing machine to the standby state.
---------------------------------------	---

Program Settings, Running and Errors Digital light display:

Program Setting: Digital light display program code.
 Load size Setting: Digital light display water level code.
 Delay setting: Digital light display the remained completion time(hours).
 Program run process: Digital light display the remained time(Minutes).
 Error occurs: Digital light display the Error code .

Child Lock Function:

- 1、 Press the power button.
- 2、 Setting Child lock function, choose washing program and water level, Start the washing machine, press and hold both the Program and Load Size button for 3 seconds, make a 'Bi' sound to activate the Child Lock Function, the digital light Alternating display "CL" and "remained time", All button cannot be use.
3. Operations after activating the child lock function.
 Even if the child lock function is activated, every button works until the door opens.
 When you open the door during the child lock is being activated, the alarm sound and an error message appears. In 5 seconds, draining begins automatically. However if you close the door within 5 seconds, water will not be drained. (Displayed error message "E5")
 To add laundry after activating the child lock function, you must deactivate the child lock function. the power button is disabled while the washing machine drains water in child lock mode.
- 4、 To deactivate the child lock function, press and hold both the Program and Load Size button for 3 seconds again. (If the child lock function is deactivated, the digital light display remained time) .

Tub clean Function:

Used for cleaning inner and outer tub.

Operating process:

- 1、 Push the "power" button, Turn on the washing machine.
 - 2、 Push the "Program", Choose 08 tub clean program.
 - 3、 Close the top cover and push "Start/pause" button, Start running tub clean program.
 - 4、 The buzzer sounded three times after the first water intake, Cleaning agent can be added here. Continue push "Start/pause" button, The washing machine continue running tub clean program. Recommend running the Tub clean program once a month.
- Use this program don't put any clothes.

Main Features

Product feature:

For safety reasons, when the machine runs, the cover opens and the machine stops working.

Automatic water supply function:

Improving Cleaning Performance reduce clothing entanglement,


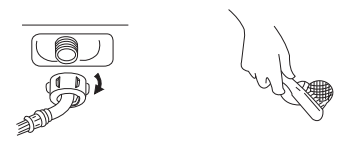
 
After 2 minutes of washing and rinsing process, machine will check water level and automatic replenishment of water.

Automatic Correction Balance:

This machine has a safety induction system, when spinning vibration is too large, it will stop spinning. The washing machine will feed water again to adjust the eccentricity of clothes, and then spinning process again.

This problem is not a fault, please check the machine is installed Firm.

Cleaning and Maintenance of the washing machine

End of program	Maintenance
<ul style="list-style-type: none">• The washing machine will send off the sound of 'dou-dou' at the end of any program operation to remind you to take out the laundry or operate it again.• After the sound, the washing machine returns to its power-off state with no display and all lights off.• Please shut off the tap, pull out the plug when not in use to avoid water leakage or the fire accidents.	<p>Use gentle clothing to wipe off the water and dirt on the surface each time after using the washing machine. Detergent, propellant and other chemicals are not allowed to use so as to avoid any damage to the plastic accessories.</p> 
Clean the water inlet	Clean Of the filter
<p>After long time use, the water inlet mesh bag may be blocked with smudginess, and should be cleaned according to the following steps:</p> <ol style="list-style-type: none">1. Switch on the power, followed by shutting off the tap.2. Let the washer work for 5 seconds so that water flows into the tub through the water inlet hose, then turn off the power.3. Unload the water inlet hose and clean the mesh bag, then restore the water inlet assembly. 	<p>After using the washing machine for a period, please clean it according to the following steps:</p> <ol style="list-style-type: none">1. Take out the lint filter.2. Open the filter and wash it clean in the water.3. Restore it and fix it.  <p>(only for magic filter)</p>

Identify usual trouble of washer

When the washer is in trouble, please contact local service office or the sales service department of our company and the customer should not dismantle the machine without permission.

If the washer can not work normally, or appear abnormality or alarms, please check and correct as follows.

List of faults and inspection

Faults	Inspection Items
No water flows in	<ul style="list-style-type: none"> ● If the power is off or the fuse is burned out. ● If the water supply is cut off or the water pressure is too low. ● If the inlet hose is properly connected and the water tap is opened. ● If the filtering screen of inlet valve is blocked by dirt. ● If the coil of inlet valve is damaged. (The slight electromagnetic sound is normal phenomenon when the inlet valve is switched on) ● If the "Start / Pause" button is pressed after the power switch is pressed.
No washing	<ul style="list-style-type: none"> ● If the power is off or the fuse is burned out. ● If the power supply voltage is too low. ● If the water amount reaches to the required water level. (The washer will not work if the water amount does not reach the required water level) ● If it is set to "Delay" washing mode. (It will only start to work until the reservation time reached)
Abnormal draining	<ul style="list-style-type: none"> ● If the water drain hose is placed very high. ● If the end of water drain hose is sealed in pond. ● If the internal rubber ring of drain valve is blocked by dirt.
Abnormal spin	<ul style="list-style-type: none"> ● If the door lid is closed. ● If all clothing piled largely at one side of barrel or the clothing is excessively placed. ● If the washer is not placed in stable condition or it is placed in inclination state. (The ground is not flat). ● If the motor belt is loosened.

Note: During the de spin process, if washing are piled at one side of the spin barrel, it will cause unbalance of spin barrel resulting in striking. At this moment, the computer inside the washer will feel this unbalance phenomenon and will automatically correct it (fill in water Washing). However, if unbalance situation is not removed after continuous three corrections, which means the computer auto-correction can not resolve the problem. Then the user has to manually and evenly place the clothing inside the barrel to solve the problem.

Malfunction display and solutions

When the washer is in trouble, please contact local service office or the sales service department of our company and the customer should not dismantle the machine without permission.

If the washer can not work normally, and the abnormal indication is shown in the nixie tube window or the machine alarms, please check and correct as follows.

Fault Category	State	Digital indicator	Remove method
Inflow Timeout	Inflow over 20mins	E0	Open the cover for one time
Drainage Timeout	Drainage over 7mins	E1	
Open cover	Open cover when machine runing.	E2	
Dehydration is not balanced	3 times dehydration imbalance	E3	Open the machine cover, artificial place clothing in uniform and then close the computer cover
Water level sensor abnormal	Water level sensor failure, higher than the high water line, below the low water level line, mixing, leaking to reset	E4	Shutdown and adjust the sensor, gas path is blocked or disconnected
Open the cover when "lock"	After start-up the lock, when machine working, cover is opened	E5	Shut the door cover for 5 seconds, after 5 seconds press the "process" and "delay" button more than 1.5 seconds, lock function be cancel.
Overflow protect	If the water level exceeds the overflow protection height, drainage treatment shall be carried out, and buzzing alarm shall be given if the water level exceeds three times.	E9	Shutdown washing machine

Technical specifications

Model	LLATWM09	LLATWM08	LLATWM07
Application water pressure	0.1MPa~0.6MPa	0.1MPa~0.6MPa	0.1MPa~0.6MPa
Rated power supply	230V~/50Hz	230V~/50Hz	230V~/50Hz
Washing and spinning input power(W)	400W/300W	320W/280W	320W/280W
Rated capacity of wash and spinning	7.2kg	6.2kg	5.0kg
Net weight	24kg	20kg	18kg
Gross weight	28kg	23kg	21kg
Net dimensions(mm)	520x540x885mm	490x510x840mm	440x455x790mm
Packaged dimensions(mm)	575x580x935mm	535x550x885mm	500x505x845mm

Terms and Conditions:

- This warranty is void if:
 - The completely filled warranty card is not presented at the time of servicing the product.
 - The product is not operated according to the instructions given under the user manual.
 - Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - Product label specifying the model number, serial number and production code has been removed and altered.
 - Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
- Repairs or replacements will be carried out by authorized service provider.
- During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
- All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.

- Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
- Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
- However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
- No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Manufactured for & Marketed by :
Lifelong Online Retail Private Limited
 Made in China

For queries and complaints:
 please contact: customercare@lifelongindia.com
www.lifelongindiaonline.com

Consumer Warranty Card

Dear Customer,
Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from them date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 2 Year (Comprehensive)

Please note:
Purchase receipt is necessary for warranty verification.
Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log onto to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.