 


# lifelong

## WASHING MACHINE

User Manual

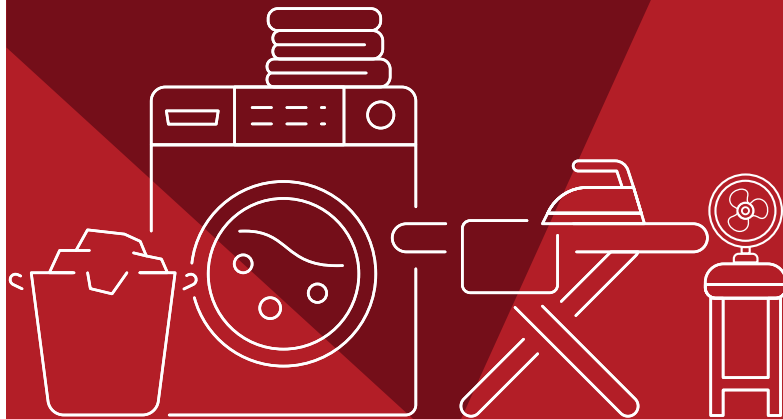

Manufactured for & Marketed by:

**Lifelong Online Retail Private Limited**

For queries and complaints:

please contact: [customercare@lifelongindia.com](mailto:customercare@lifelongindia.com)

[www.lifelongindiaonline.com](http://www.lifelongindiaonline.com)

**Built for Home. Built for India.**

## INTRODUCTION:

Dear Customer,

Congratulations! We welcome you to the Lifelong family, as you welcome our Lifelong Semi-Automatic Washing Machine to be a part of your home.

 
At Lifelong, our products are carefully built for the needs of India, which is why we have crafted a diverse range of innovative products, across a spectrum of categories - Home, Kitchen, Grooming, Fitness, Lifestyle and Smart Home, to better help you. We then deliver them at the best prices, enriching your everyday living.

We are sure you can't wait to start using your new Lifelong Semi-Automatic Washing Machine.


We know we can't!

Looking forward to building our bond for life, cheers!

Thank you, Team Lifelong

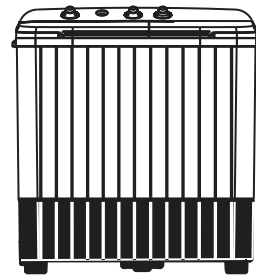

**LLSWM70D/LLSWM75D**

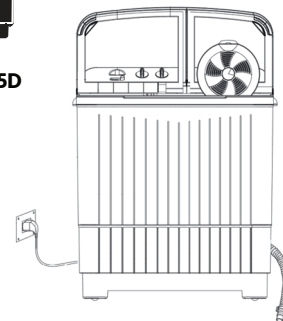 

**LLSWM80D**

## TABLE OF CONTENTS :

 
1. About the Product
2. Marking of Product
3. Dos and Don'ts
4. Control Panel Information
5. How to use
6. Device Cleaning
7. Product Specifications
8. Troubleshooting guide
9. Terms & Conditions
10. Warranty Card

## ABOUT THE PRODUCT:


The Lifelong Semi-Automatic Washing Machine will help you with all your laundry needs.

We are confident you will enjoy the superior performance and reliability.

## MARKING OF PRODUCT:

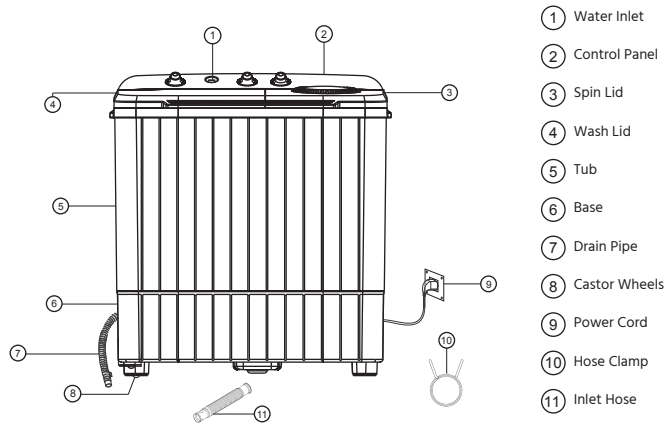

 Note : Graphics and Images shown in manual may differ than actual product, it is for reference only

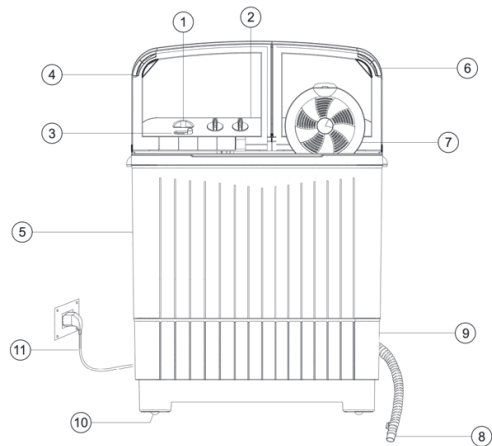

- ① Water Inlet
- ② Control Panel
- ③ Water Selector
- ④ Wash Lid
- ⑤ Tub
- ⑥ Spin Lid

- ⑦ Mid Cover
- ⑧ Drain Pipe
- ⑨ Base
- ⑩ Caster Wheel
- ⑪ Power Cord


Note : Graphics and Images shown in manual may differ than actual product, it is for reference only

## DOS AND DON'TS:


- Please insert the power cord into a rated voltage outlet. Be sure to use a single-phase three pin outlet. Also, the terminal of the outlet must be grounded. If possible, please install an electric leakage protector.
- When the machine is in use, place the power plug in a location where it can be easily inserted and extracted by hand. Be sure to remove the plug if power failure occurs, when moving or cleaning the machine, or when the machine is idle.
- If the power cord is faulty, in order to avoid risk it must only be replaced by our authorized after sale service technicians. Remember to keep the pin of the power plug clean.
- Do not place the machine in a damp place like the bathroom and never wash it with water. Do not place wet laundry on the control panel.
- Do not use water warmer than 50 °C .
- If the washing machine is installed on the ground near carpet, make sure to keep the ventilation hole clear of obstruction.
- Do not share the outlet with other electric appliances. If the power plug is damaged or feels loose when plugged into the outlet, stop using the plug immediately. Rated current of fuse:5A.

- Do not stretch your hands into the working machine. It is dangerous even if the rotation is slow. Take special care of the children. This appliance is not intended for use by people (including children) with reduced physical, sensory, or mental capabilities of, lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not attempt to take apart, repair or alter the machine by yourself.
- Do not put any high temperature or heavy objects on the washing machine.
- Do not wash laundry with volatile or flammable materials (such as thinner, petrol etc.).
- Disabled children or those not under adult supervision should not operate the machine.

## CONTROL PANEL INFORMATION:

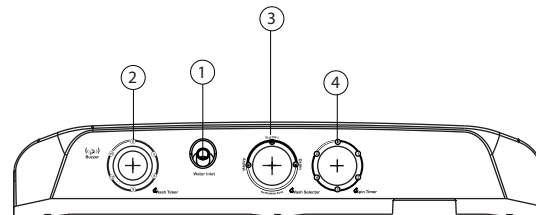

LLSWM70D/LLSWM75D

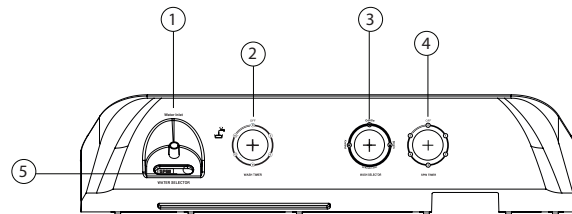

LLSWM80D

1. Water Inlet: Used to fill water
2. Wash Timer:
  - Used to set Wash timer for washing clothes. Put Clothes in wash tub with water and detergent.
  - Select timer for a time period required from 0-15 minutes.
  - A buzzer sound shall indicate the end of wash period.
3. Wash Selector: Select wash options from given programs.
4. Spin Timer:
  - This is used to set spin timer for 0-5 minutes.
  - After washing, load clothes into spin tub to spin.
5. Water Selector:
  - This is used to direct water supply into wash tub or Spin Tub.

## HOW TO USE:

### Pre-wash:

- The maximum capacity during washing and spinning cycles refers to the max weight of standard dry laundry that can be washed or spun at one time.
- The laundry quantity during one washing cycle should be lower than the rated capacity.

- Thickness, size, and the type of cloth will influence actual capacity.
- It is acceptable to put in a reasonable amount of laundry as the laundry will be mixed around during the washing process.
- To avoid splashing, do not select the “Maximum” water level for low loads. Using high suds detergent is not recommended.
- Check to see if the items have special washing requirements
- Do not overload the washer. Stretch and loosen the laundry before putting it into the washer.
- For heavily soiled laundry, try to remove dirt such as mud or dust first and apply detergent in advance. This will help to remove the stains more easily.

### Detergent Use:

- **Method 1** - directly dissolving in the machine:
  1. Add a small quantity of water to the machine.
  2. Add the detergent powder. Run washing machine for 30 seconds to dissolve powder completely.
  3. Place laundry into the washing machine and select a suitable water level.
- **Method 2** - instantly dissolving the detergent powder:
  1. Prepare warm water at 30 °C and a container.
  2. Add the detergent powder while stirring until it dissolves fully.

- Laundry powder is more prone to damage laundry than liquid detergent.

Please exercise caution and do not exceed the maximum quantity.

- Dosages of detergent powder may vary. Please follow the instructions on the detergent

#### **Using Bleach Detergent:**

- Add water to suitable levels. Dilute the bleach with a separate container. Pour it slowly into the washing machine.
- Avoid using whitening agents on laundry with colours and/or patterns as they are prone to lose colour.
- The whitening agent should not come in direct contact with the laundry.
- Refer to the product instructions for information on proper usage and quantity.
- Dissolve powder whitening agents before use.

#### **Recommended washing procedure:**

1. Open the water tap and fill the water tub about half way.
2. Put in the laundry detergent and allow it to disperse well.
3. Put in the clothes to be washed and add water in accordance with the amount of cloth load.
4. Set the WASH TIMER as desired depending on the fabric type and the degree of soilage.
5. When washing is finished, set the drain selector to drain.

Note: Ensure that the clothes rotate freely, if not, reduce the cloth load from the machine.

#### **Rinsing and Dry Rinsing:**

1. Rinsing: Fill the wash tub appropriately for the number of clothing being washed and set wash timer for 15 minutes.
2. Intermediate spin rinse: Put clothes inside the spin tub set the water supply selected to SPIN TUB. Open the water and keep it open for 1-2 minutes and then close the tap. Spin for 1 minute, and when the rinsing is over, set the drain selector to DRAIN. Do not keep the water tap open when the spin tub is rotating, otherwise the machine will malfunction.

#### **Spin Drying:**

1. Distribute laundry into the spin tub evenly and smoothly.
2. Insert the gland into the tub properly. Close the inner and outer cover of the spin tub.
3. Spin Select an appropriate spin time according to the condition of the laundry and start the spinning cycle.
  - During the spinning cycle, if any abnormal sound occurs, it is generally due to the laundry being placed in a slanted fashion. Please stop the machine and re-arrange the laundry accordingly.
  - During the spinning cycle, the machine will pause if the outer cover of the spin tub is opened. Close it to resume the spinning cycle.

## REFERENCE GUIDE:

**Table 1: Detergent Guide**

WASH LOAD	1,2~2,5 kg	2,5~3,8 kg	3,8~5,0 kg	5,0 kg or ABOVE
Water Level	Low	Medium	High	Over Flow
Amount of Detergent	40 gm	50 gm	60 gm	64 gm
Amount of Concentrate Detergent	25 gm	30 gm	38 gm	40 gm
Amount of Softener	22 ml	26 ml	29 ml	35 ml

**Table 2: Laundry Guide**

Amount of Laundry	Clothes System	Synthetic Fiber	Cotton	Heavy Stained Clothes
1.2 ~ 2.5 kg	Washing Time	2~5 minutes	7~10 minutes	10~15 Minutes
	Wash Selector	Gentle	GENTLE*/STRONG	STRONG
2.5 ~ 3.8 kg	Washing Time	7~10 minutes	10~15 minutes	Wash 15 minutes
	Wash Selector	Gentle	GENTLE*/STRONG	STRONG
3.8 kg and above	Washing Time	10~15 minutes	Wash 15 minutes	Wash 15 minutes
	Wash Selector	Gentle	GENTLE*/STRONG	STRONG

## DEVICE CLEANING:

- Wipe the entire unit with a soft dry cloth.
- Use neutral detergent to wipe if the machine is excessively dirty.
- Do not apply water directly when cleaning.
- After washing, disconnect the water inlet hose.
- Do not store water in the machine for long periods of time. Drain the water immediately after each use.
- Pull out the power plug and hang up the power cord.
- Hang up the drain hose. Wipe off water drops on the surface and inside the machine with a clean, soft cloth.
- Open the cover of the wash cycle compartment and the inner/outer covers of the spin cycle compartment for a short period (about one hour), then close them.



## PRODUCT SPECIFICATIONS:

Model	LLSWM70D	LLSWM75D	LLSWM80D
Max. Rated Capacity Wash	7.0 kg	7.5 kg	8.0 kg
Max. Rated Capacity Spin	4.5 kg	4.5 kg	5.0 kg
Power Supply	230V / 50 Hz	230V / 50 Hz	230V / 50 Hz
Buzzer	Yes	Yes	Yes
Soak	No	No	Yes
Wash Timer	15 Min	15 Min	35 Min
Spin Timer	5 Min	5 Min	5 Min
Net Weight (kg)	18 kg	19 kg	19 kg
Gross Weight (kg)	21 kg	22.5 kg	21.5 kg
Net Dimension (mm) W*D*H	750 x 450 x 905	750 x 450 x 960	810 x 480 x 970
Gross Dimension (mm) W*D*H	810 x 495 x 955	810 x 495 x 1005	830 x 520 x 1010

## TROUBLESHOOTING GUIDE:

TROUBLES	CHECK POINTS
Motor not working	<ul style="list-style-type: none"> <li>Check supply source.</li> <li>Is the power cord firmly plugged in?</li> <li>Is the timer turned to a suitable point except "OFF"?</li> <li>Motor has been provided with "TOP" (Thermal overload protector). This will protect the motor from burning due to overheating caused by various variable factors such as overload voltage, frequency variation, etc. In such case motor supply will get off, thus stopping the motor. Wait for approximate ½ hour till motor cools to normal temperature. Restart the M/c to see if motor functions normally</li> </ul>

TROUBLES	CHECK POINTS
Spin dryer basket does not operate	<ul style="list-style-type: none"> <li>Is there any cloth dropped between the basket and tub</li> <li>Is the spin dryer cover closed?</li> <li>Is the laundry gathered to one side of the spin dryer basket?</li> </ul>
Drain not drawing	<ul style="list-style-type: none"> <li>Is the lint stuck to the plunger valve?</li> <li>Is the end of the drain hose guide located at an excessive height?</li> </ul>

## TROUBLESHOOTING TABLE:

Problem	Reason	Solution
The pulsator does not rotate	Power out or switch off Transmission belt burst Pulsator is blocked by something	Switch on plug Assemble the transmission belt Remove the blockage
The pulsator rotates too slowly	Belt becomes loose The flexible screw of motor is loose	Tighten the belt or replace it Tighten the belt and the screw
Abnormal noise and vibration	The clothes in the spin-dry tub are unbalanced Something was stuck between pulsator and wash tub	Place the clothes neatly  Remove it.
Water leaks from wash tub	The hose is not tightened with the wash tub	Tighten it

## Terms and Conditions:

1. This warranty is void if:

- The completely filled warranty card is not presented at the time of servicing the product.
  - The product is not operated according to the instructions given under the user manual.
  - Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
  - Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
  - Product label specifying the model number, serial number and production code has been removed and altered.
  - Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
  - Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
  - Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
- Repairs or replacements will be carried out by authorized service provider.
  - During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorized service provider.
  - All expenses incurred in collecting the unit (s) or part(s) thereof from authorized service provider as well as any other expenses and incidentals will be

- Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
- Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
- However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not withstanding the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
- No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

## Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

### Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: \_\_\_\_\_

Model: \_\_\_\_\_

Warranty coverage: 2 Year on product and 5 Years on motor

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: [customercare@lifelongindia.com](mailto:customercare@lifelongindia.com)

### Customer Details

Name: \_\_\_\_\_

Address: \_\_\_\_\_

Home Number: \_\_\_\_\_

Office Number: \_\_\_\_\_

E-mail Address: \_\_\_\_\_

### Product Details

Model No.: \_\_\_\_\_

Serial No.: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Invoice Number: \_\_\_\_\_

Online Site: \_\_\_\_\_

Please log on to [www.lifelongindiaonline.com](http://www.lifelongindiaonline.com) and complete the online warranty form with your personal and product details within 14 days.