


# lifelong

## ELECTRIC KETTLE

User Manual

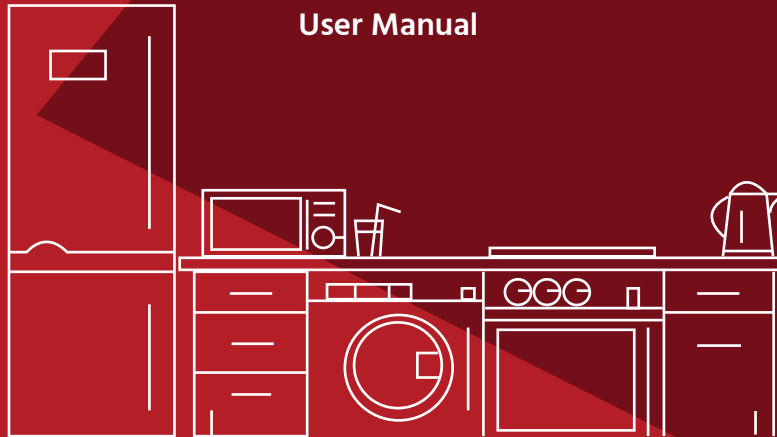

Built for Taste. Built for India.

Manufactured for & Marketed by :  
**Lifelong Online Retail Private Limited**

For queries and complaints:  
please contact: [customercare@lifelongindia.com](mailto:customercare@lifelongindia.com)  
[www.lifelongindiaonline.com](http://www.lifelongindiaonline.com)

## INTRODUCTION:

Welcome to the Lifelong family.

Dear Customer,

Congratulations on purchasing Lifelong Electric Kettle 1.5 Litres and a warm welcome to the Lifelong family.

At Lifelong, we take pride in developing quality products for your home, health and happiness. Through constant innovation in our products, we have been able to develop a wide spectrum of products across Home, Kitchen, Grooming and Wellness categories. We strive to enrich the lives of the modern consumer every day. Keeping that in mind, we have offered all our products at a fair and honest price.

We hope that the Electric Kettle 1.5 Litres serves you and your family's needs without any hassles.

Thanks again for becoming a part of the Lifelong family. Enjoy using the product!

Warm Regards,  
Team Lifelong

## INSTRUCTIONS FOR USE:

1. Before first use, fill the kettle with clean water to maximum capacity and boil.

Discard the water repeat.

2. The kettle should always be unplugged when filling or adding water.

3. Fill the kettle with water to the desired level (marked). Do not overfill or there will be a risk of spillage or spitting. Do not forget to close the lid after filling, otherwise the kettle will not automatically switch off after use.

4. Do not fill with less than MIN indication to prevent the kettle running dry while operating.

5. Do not fill with more than MAX indication.

6. An automatic safety cut-out has been fitted for protection against overheating. It will operate if the kettle is switched ON when containing insufficient water. If the automatic safety cut-out has operated, disconnect from the power outlet and allow the kettle to cool down for 5 to 10 minutes. Then refill with water and switch ON -the kettle will then boil and cut off as normal operation.

7. Place the power base on a dry flat surface.

8. Place the kettle on the power base. The electrical connections will be made automatically once the kettle slides onto the plug base.

9. Plug the cord set into an earthen power socket.
10. The appliance is switched ON by pressing the ON/OFF switch. The pilot light will come on.
11. When the water has boiled, the kettle will switch OFF automatically.
12. Do not remove the kettle from the power base without switching OFF first.
13. To pour water, lift the kettle from the power base and pour.

## IMPORTANT SAFEGUARDS:

When using your kettle, base safety precautions should always be followed, including the following:

1. Read all instructions carefully, even if you are familiar with the appliance.
2. Close supervision is necessary when any appliance is used by or near children.
3. Before connecting the kettle, check if the voltage indicated on the appliance corresponds with the mains voltage in your home. If this is not the case, contact your dealer and do not use the kettle.
4. Switch off and unplug from the outlet before filling, emptying or cleaning, or when not in use.
5. Do not overfill as boiling water may be ejected. The maximum level is marked inside the kettle.

6. Do not operate or place any part of this appliance on or near any hot surface (such as gas or electric burner or in a heated oven).
7. Do not let the cord hang over the edge of a table or counter. Do not let the cord touch hot surfaces.
8. Never yank on the cord as this may damage the cord and eventually cause a risk of electric shock.
9. If the supply cord of this appliance is damaged, please inform manufacturer or get it repaired from an authorised person only.
10. Avoid touching hot kettle surface- use the handle and the knobs.
11. To avoid possible steam damage, turn the spout away from walls or cabinets when operating the kettle.
12. If operated on wood furniture, use a protective pad to prevent damage to delicate finishes.
13. To avoid burns, always ensure the lid is correctly positioned before operating.
14. Burns may occur if the lid is removed while heating.
15. Remove and replace the lid carefully when hot
16. Extreme caution must be exercised when moving the kettle containing hot water. Never lift the kettle by its lid. Always use the body handle.

17. Do not switch your kettle ON if it is empty.
18. To protect from electrical hazard, do not immerse this kettle or cord set in any liquid.
19. Use the kettle only with the supplied base unit. Do not use the base unit for other purposes.
20. To protect against fire, do not operate in the presence of explosive and/or fire or fumes.
21. A kettle should be left connected to a wall socket when the room temperature is likely to fall to outdoor winter temperatures. At sub-zero temperatures, the automatic control thermostat may reset to boil and energize the element
22. Do not use the kettle for any purpose other than heating water. Other liquids or food will contaminate the interior.
23. This product has not been designed for any other uses than those specified in this manual.

## PRODUCT OVERVIEW:



1. Spout
2. On/Off Switch
3. Light
4. Cordless base-360

## DESCALING:

Descale the kettle regularly. With normal use, at least twice a year.

1. Fill the kettle up to MAX with a mixture of one part ordinary vinegar and two parts water. Switch on and wait for the appliance to switch off automatically.
2. Let the mixture remain inside the kettle overnight
3. Throw the mixture away next morning.
4. Fill the kettle with clean water up to MAX and boil again.
5. Throw away this boiled water to remove any remaining scale and vinegar.
6. Rinse the inside of kettle with clean water.

## HOW TO TAKE CARE OF YOUR KETTLE:

Wipe the exterior of the kettle with a soft, damp cloth or sponge. Remove stubborn spots with a cloth moistened with mild liquid detergent. Do not use abrasive scouring pads or powders. Never immerse the kettle in water or other liquids. From time to time depending on the nature water supply, a lime scale deposit is naturally formed and can be found mostly due to the heating element and reduces the heating

capacity. The amount of timescale deposited (and subsequently the need to clean or descale) largely depends on the water hardness in your area and the frequency with which the kettle is used. Timescale is not harmful to your health. But if poured into your beverage it can give a powdery taste to your drink. Therefore, the kettle should be descaled periodically.

## Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

### Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: \_\_\_\_\_

Model: \_\_\_\_\_

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: [customercare@lifelongindia.com](mailto:customercare@lifelongindia.com)

### Customer Details

Name: \_\_\_\_\_

Address: \_\_\_\_\_

Home Number: \_\_\_\_\_

Office Number: \_\_\_\_\_

E-mail Address: \_\_\_\_\_

### Product Details

Model No.: \_\_\_\_\_

Serial No.: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Invoice Number: \_\_\_\_\_

Online Site: \_\_\_\_\_

Please log on to [www.lifelongindiaonline.com](http://www.lifelongindiaonline.com) and complete the online warranty form with your personal and product details within 14 days.

## Terms and Conditions:

1. This warranty is void if:

- a. The completely filled warranty card is not presented at the time of servicing the product.
- b. The product is not operated according to the instructions given under the user manual.
- c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
- d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
- e. Product label specifying the model number, serial number and production code has been removed and altered.
- f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
- g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
- h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.

2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorized service provider.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorized service provider as well as any other expenses and incidentals will be borne by the consumer.

5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not withstanding the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.