


Manufactured for & Marketed by:
Lifelong Online Retail Private Limited

For queries and complaints:
please contact: customercare@lifelongindia.com
www.lifelongindiaonline.com

lifelong

MIXER GRINDER

User Manual

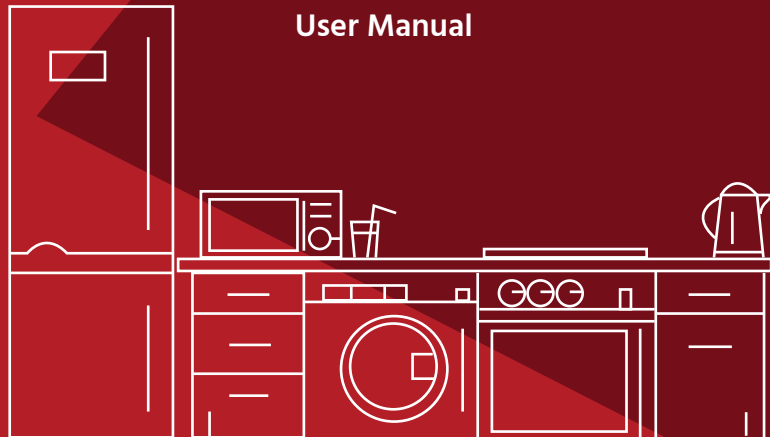

Built for Taste. Built for India.

INTRODUCTION:

Dear Customer,

Congratulations! We welcome you to the Lifelong family, as you welcome our Lifelong Mixer Grinder to be a part of your home.

At Lifelong, our products are carefully built for the needs of India, which is why we have crafted a diverse range of innovative products, across a spectrum of categories - Home, Kitchen, Grooming, Fitness, Lifestyle and Smart Home, to better help you. We then deliver them at the best prices, enriching your everyday living.

We are sure you can't wait to start using your new Lifelong Mixer Grinder.

We know we can't!

Looking forward to building our bond for life, cheers!

Thank you, Team Lifelong



LLMG804


TABLE OF CONTENTS :

1. About the Product
2. Marking of Product
3. Dos and Don'ts
4. How to use
5. Overload protection
6. Device Cleaning
7. Specifications
8. Troubleshoot Guide
9. Terms & Conditions
10. Warranty Card

ABOUT THE PRODUCT:

Take your culinary skills to a different level with the Lifelong Mixer Grinder. It is a durable kitchen appliance that comes with four convenient jars for everyday usage. Made with high-quality materials the jar and the blades are resistant to corrosion. This enables you to blend ingredients of varying textures effortlessly. Its efficient stainless-steel blades help to cut the toughest ingredients and gives the finest paste and smoothest shakes and purees for daily cooking, especially for smooth grinding preparation of chutneys, dips, masalas and pastes, and its strong ABS body gives durability & reliability to the product which will last long in the Kitchen.

MARKING OF PRODUCT:

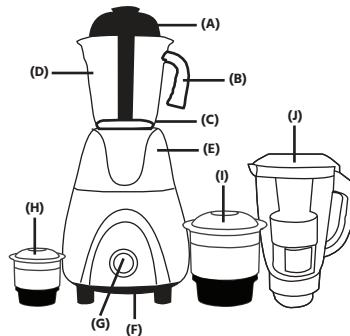

DOS AND DON'TS:

- Keep the Mixer Grinder away from heat and sunlight.
- Clean the jars carefully before use.
- Do not place the machine on a wet surface.
- Never try to touch the moving parts or blades of the mixer grinder while operation.
- Never insert your hand or spatula or spoon, when in use.
- Never operate the mixer grinder without the jar lid.
- The jars can be cleaned by using regular dishwashing soap.
- After thoroughly rinsing with soap, clean the jars with a dry cloth.
- Never store the jars with closed lids.
- Do not use any detergent soap solutions on the main body.
- Clean the body with a dry cloth before storing for next use.
- Never immerse the motor in the water for cleaning.
- Never pull the cord to take out the plug from the socket.
- Always switch off the power supply button before cleaning, emptying or when not in use.
- Do not use the Liquidizer jar for dry/wet grinding, grating, chopping or mincing functions.

HOW TO USE:

FRUIT FILTER JUICER JAR

STEP 1: Insert the fruit filter into the blender jar and rotate it slightly so that it settles down and the grooves get locked with the slugs on the blender jar wall.

STEP 2: Place the lid on the jar and rotate it anti-clockwise to lock.

STEP 3: Place the assembly onto the drive shaft of the juicer mixer grinder and rotate clockwise to lock it into position.

STEP 4: Cut small pieces of fruits to be juiced.

STEP 5: Remove the cap on the lid by rotating anticlockwise. Put the cut pieces into the filter and switch on the juicer mixer grinder.

STEP 6: You can continue adding more fruit pieces from the centre opening in the lid as they are juiced.

STEP 7: The juice is sieved out through the filter and the pulp/seeds get accumulated inside the filter and pour out the contents from the jar by tilting.

LIQUIDIZING AND BLENDING

STEP 1: The Liquidizing and blending jar is used for preparation of shakes, juices etc.

STEP 2: Before starting the mixer grinder for the first time or after a long period of time, rotate the motor shaft with hand to ensure that it turns freely and smoothly.

STEP 3: Place all the ingredients in the jar and close the lid properly.

STEP 4: Now switch on the grinder for operation.

Note: Do not use this jar for wet grinding.

WET/DRY GRINDING

STEP 1: The wet /dry grinding jar is used for grinding items like Idli and Dosa batter, coconut chutney, groundnut, red chili powder, sugar, vegetables, etc.

STEP 2: Make sure that the dry grinding jar is absolutely clean and dry before use.

STEP 3: Use small pieces of ingredients for grinding.

STEP 4: Fill the jar with ingredients up to the marked capacity.

STEP 5: Put the flat lid on top of the Jar. Grind at low speed for 15-30 seconds and then move to higher speed.

Note: Always move gradually from lower speeds to the higher speed. During the grinding process, as the jar might pop up due to friction. Do not panic. This happens gradually.

CHUTNEY MAKING

STEP 1: The chutney jar is mainly used for making chutney.

STEP 2: Use small pieces of ingredients for grinding.

Step 3: Put the ingredients in the chutney jar for grinding. Hold the lid tightly so that it doesn't pop up.

STEP 4: The ingredients should not be too large. Break ingredients into smaller pieces.

Note: The lid should be properly pressed.

OVERLOAD PROTECTION:

- The overload protector is designed to protect the motor from burning.
- In case of an overload, the blade of the jar stops rotating and the motor gets jammed or starts heating up.
- If such a situation occurs the mixer grinder will automatically trip off and hence protect the motor.
- Let the motor cool down for a couple of minutes. The red button of the overload protector switch located at the bottom of the mixer grinder has to be pressed for re-operation.
- If you have to reset the overload protector again and again, try reducing the quantity of ingredients in the jar.

DEVICE CLEANING:

- Before use pour warm water in the jar, run for a few seconds and throw away the water.
- The cleaning of the mixer grinder and jars are very necessary for maintaining smooth operation of the mixer grinder and proper hygiene.
- After you have used the mixer grinder, use warm water to remove the smell of the material from the jars and then rinse under running water.
- In order to clean the blades thoroughly, remove the blades by using the spatula to loosen the screw by twisting the dome nut on the blade clockwise, while holding the coupler from under the jar.

SPECIFICATIONS:

S. No.	Specification	LLMG804
1	Wattage	750 W
2	Warranty	2 years
3	Power Supply	220-240 V, 50 Hz
4	Speed Control Switch	Yes
5	Overload Protection (OLP)	Yes
6	No. of Jars	4
7	Body Material	ABS
8	Jar Material	Stainless Steel
9	Blade Material	Stainless Steel
10	RPM	18000~20000

TROUBLESHOOT GUIDE:

S.No	Problem	Cause	Action	Remark
1	The Mixer grinder does not start.	No power supply tripped due to overload.	Ensure that the power supply is off. Remove excess load & reset the OLP located at the bottom of the mixer grinder.	If it still does not work, please contact Lifelong customer care center.
2	The result/ performance is not satisfactory.	Size of the ingredients do not fit in the jar.	Fill the chutney jar to the level of the blades & the other 2 jars up to 2/3rd of the capacity level Indicated. Cut/brake down the ingredients to be ground into appropriate size.	
3	Mixer grinder generates abnormal noise.	Jar is not locked properly. Blade assembly loose. Coupler loose.	Lock the jar properly. Tighten nut of blade assembly properly. Tighten coupler.	

Terms and Conditions:

1. This warranty is void if:
 - a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as will as any other expenses and incidentals will be

5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranties, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 2 years

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log on to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.