


lifelong

MULTIFUNCTIONAL FOOD PROCESSOR

User Manual

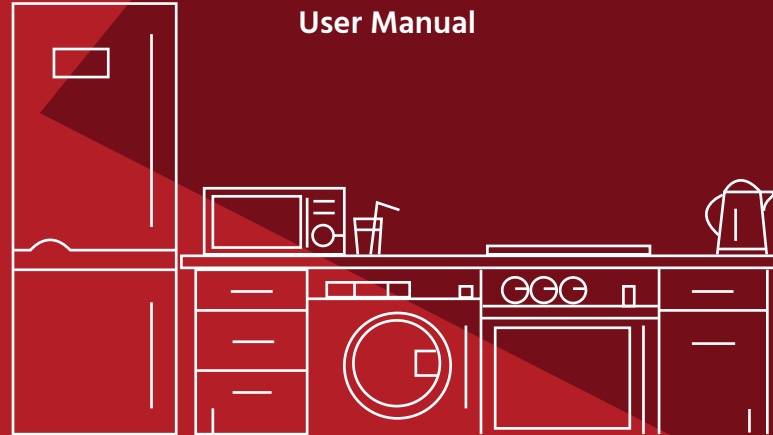

Manufactured for & Marketed by :
Lifelong Online Retail Private Limited

For queries and complaints:
please contact: customercare@lifelongindia.com
www.lifelongindiaonline.com

Built for Taste. Built for India.

INTRODUCTION:

Dear Customer,

Congratulations! We welcome you to the Lifelong family, as you welcome our Lifelong Multifunctional Food Processor to be a part of your home.

At Lifelong, our products are carefully built for the needs of India, which is why we have crafted a diverse range of innovative products, across a spectrum of categories - Home, Kitchen, Grooming, Fitness, Lifestyle and Smart Home, to better help you. We then deliver them at the best prices, enriching your everyday living.

We are sure you can't wait to start using your new Lifelong Multifunctional Food Processor.

We know we can't!

Looking forward to building our bond for life, cheers!

Thank you, Team Lifelong



LLFPR01


TABLE OF CONTENTS:

1. About the Product
2. Marking of Product
3. Precautions Before Use
4. Operating Instructions
5. Device Cleaning
6. Troubleshoot
7. Terms and conditions
8. Warranty

ABOUT THE PRODUCT:

If you enjoy cooking, then you know the joy of sitting down with those you love to share a meal together. Something that's not always easy to do with our increasingly busy lifestyles. Lifelong Food Processor takes you to a whole new level of food preparation with maximum ease and minimal effort.

MARKING OF PRODUCT:

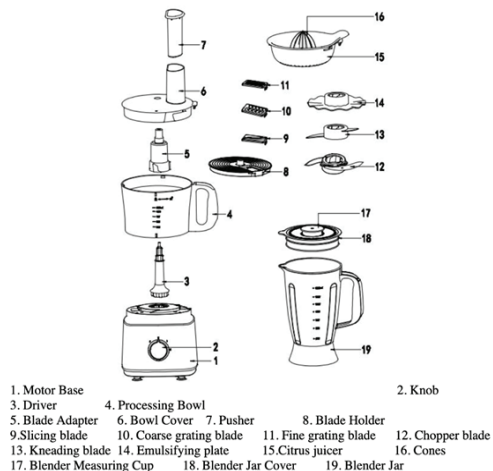

PRECAUTIONS BEFORE USE:

1. Carefully read all instructions before operating and save for future reference.
2. This appliance is for normal household use only.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Young children must be supervised to ensure that they do not play with the appliance.
5. This appliance includes a safety switch which prevents operation unless the accessories are securely installed.
6. This appliance incorporates a protective device against high temperatures. If the temperature becomes too high, the unit will turn off automatically and will resume operation when the motor has cooled sufficiently (after about 15 minutes).
7. Do NOT operate the appliance for more than a minute at a stretch.
8. If an operation is not finished within 1 minute, turn off the machine and let it cool for 10 minutes before the next round of operation. If more than 5 rounds of operation are required, cool the machine for 90 minutes to room temperature before the next 5 rounds. This can lengthen the life span of the machine.
9. Please wait till all the components stop running before unplugging the power cord and taking off the processing bowl.

10. Ensure the capacities shown in the Specifications section are not exceeded.
11. The appliances are not intended to be operated by means of an external timer or separate remote-control system.

OPERATING INSTRUCTIONS:

Before the First Use:

After unpacking, disassemble unit before using first time. Refer to "HOW TO DISASSEMBLE" for directions. Wash all parts except motor base in warm, soapy water. Rinse and dry immediately. DO NOT IMMERSE MOTOR BASE IN WATER. ASSEMBLY.

Chopper Assembly

1. Position Driver on motor base.
2. Position processing bowl into the Driver and turn clockwise to seat firmly on motor base.
3. Place blade adaptor onto the Driver.
4. Place chopper onto the blade adaptor.
5. Turn the chopper to the right position.
6. Place cover on bowl, turn clockwise until cover interlocks on bowl.
7. Place pusher into feeding chute.

Notes (Chopper):

- Always keep the chopper inside the bowl before feeding food.
- Use pulse function for several times to avoid cutting too fine.
- Do not run for too long while cutting hard cheese or chocolate. Otherwise, these materials will overheat and begin to melt.
- Standard chopping period: 30-60sec.

Kneading blade Assembly

1. Position Driver on motor base.
2. Position processing bowl into the Driver and turn clockwise to seat firmly on motor base.
3. Place blade adaptor onto the Driver.
4. Place kneading blade onto the blade adaptor.
5. Turn the kneading blade to the right position.
6. Place cover on bowl, turn clockwise until cover interlocks on bowl.
7. Place pusher into feeding chute.

Notes (Kneading Blade):

- Always attach kneading disc in the bowl before feeding food.
- Standard kneading period: 30-180 sec.

Emulsifying plate Assembly

1. Position Driver on motor base.
2. Position processing bowl into the Driver and turn clockwise to seat firmly on motor base.
3. Place blade adaptor on to the Driver.
4. Place Emulsifying plate onto the blade adaptor.
5. Turn the Emulsifying plate to the right position.
6. Place cover on bowl, turn clockwise until cover locks on bowl.
7. Place pusher into feeding chute.

Notes (Emulsifying Disc):


Emulsifying Disc can be used to mix cream and egg, to make mayonnaise and pudding rapidly. Do not use Emulsifying Disc to knead flour. Slicing blade, Coarse grating blade, Fine grating blade Assembly

1. Position Driver on motor base.
2. Position processing bowl into the Driver and turn clockwise to seat firmly on motor base.
3. Install desired blade onto the blade holder.
4. Place blade holder onto the Driver.
5. Place cover on bowl
6. Turn cover clockwise until cover interlocks on bowl.
7. Put food into the feeding chute.
8. Use pusher to push the food down for processing.

Notes:

- Choose desired disc according to the processed food and desired shape of food.
- Push softly when feeding food.
- Pre-cutting food into smaller pieces according to the diameter of feeding tube.
- Feed gradually for better effect. When cutting soft food, choose lower speed to avoid the food turning soupy. If large quantity food needs to be cut, please cut it for several batches. 1200 ml for one batch.

Citrus Assembly:

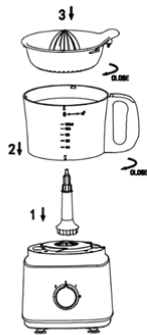

Blender Assembly



Notice: Please install the citrus juicer attachment as above picture.

1. Make sure the blade base is fixed tightly.

2. Put food into the jar.

3. Install the measuring cup and cover it properly.

4. Put blender jar onto motor base vertically, and then rotate the jar clockwise to fix it.

Tips and Warning

Choose PULSE function for premixing is recommended before operation. 800 ML for one batch. Make sure the blade base is installed properly before operation. Measuring cup can be used to add ingredients during operation.

HOW TO DISASSEMBLE

1. Remove pusher. Turn cover counter clockwise, lift and remove.

2. Lift blade holder from driver.

3. Lift blade and remove from blade holder.

4. Turn bowl counter clockwise to unlock from motor base. Lift and remove.

Cleaning:

Wash all parts except the motor base in warm, soapy water. The disc can be disassembled to wash with water but be careful during disassembly. **DO NOT IMMERSE MOTOR BASE IN WATER.**

Troubleshoot:

Problem	Solution
Machine does not work.	Ensure correct assembly. Make sure power plug is plugged in properly. Check if the mains have tripped, or if there is a power outage.
Machine stops running suddenly.	Processing bowl may loosen during vigorous processing. Please re-install the bowl cover.
Motor is running, while components do not run.	Make sure the Driver is installed correctly.

Terms and Conditions:

1. This warranty is void if:
 - a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as will as any other expenses and incidentals will be borne by the consumer.
5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from them date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 2 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongonline.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log on to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.