 


lifelong

SLOW JUICER

User Manual

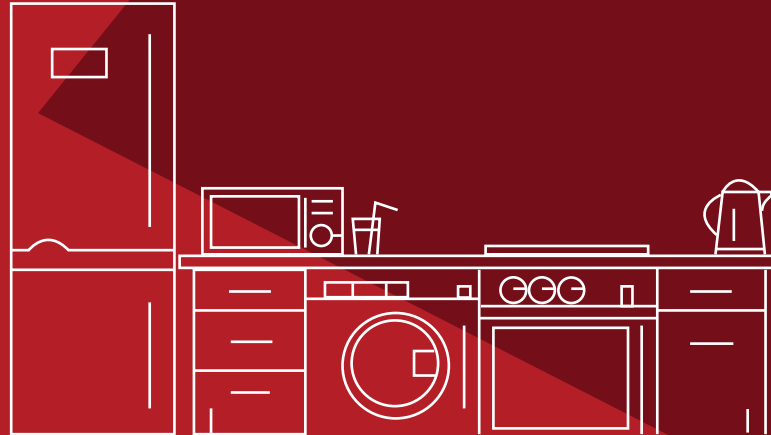

Manufactured for & Marketed by :
Lifelong Online Retail Private Limited

For queries and complaints:
please contact: customercare@lifelongindia.com
www.lifelongindiaonline.com

Built for Taste. Built for India.

INTRODUCTION:

Dear Customer,

Congratulations! We welcome you to the Lifelong family, as you welcome our Lifelong Slow Juicer to be a part of your home.

 
At Lifelong, our products are carefully built for the needs of India, which is why we have crafted a diverse range of innovative products, across a spectrum of categories - Home, Kitchen, Grooming, Fitness, Lifestyle and Smart Home, to better help you. We then deliver them at the best prices, enriching your everyday living.

We are sure you can't wait to start using your new Lifelong Slow Juicer.

We know we can't!

Looking forward to building our bond for life, cheers!

Thank you, Team Lifelong

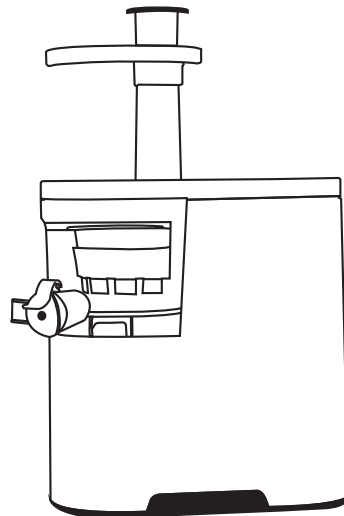

LLSJ01


TABLE OF CONTENTS:

- 1. About the Product
- 2. Marking of Product
- 3. Precautions Before Use
- 4. Assembly Instructions
- 5. Operating Instructions
- 6. Device Cleaning
- 7. Technical Specifications
- 8. Troubleshooting
- 9. Terms & Conditions
- 10. Warranty Card

ABOUT THE PRODUCT:

The Lifelong Slow Juicer’s Slow squeeze juicing technology enables maximum juice extraction and ensures maximum nutrient preservation. This product is characterised by the novel design, high juice yield, pomace separation, shock absorption, and low noises, which is conveniently used in the kitchen. Squeezed juicing is a pure natural technology that completely reserves the natural taste, and nutrient of foods, with lasting squeezing like stone mills and gentle operation as using hands when making green juice and fruit juice.

 MARKING OF PRODUCT:

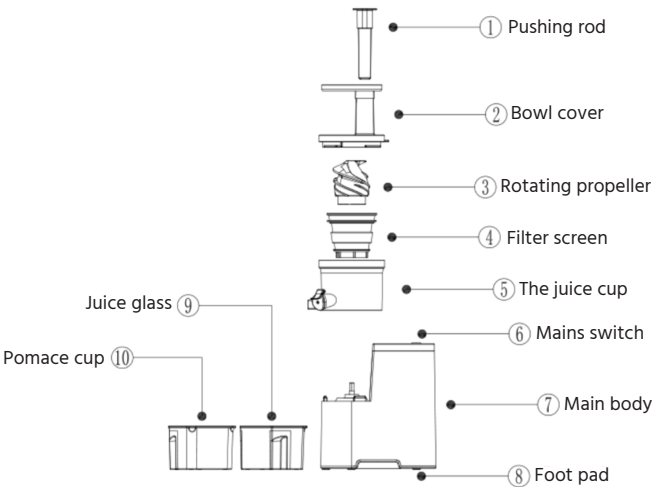

MAIN COMPONENTS

1. Push rod
2. Feed tube
3. Rotating propeller
4. Filter
5. Outer cup
6. Switch
7. Body
8. Base
9. Product juice cup
10. Slag cup

PRECAUTIONS BEFORE USE:

1. Read all instructions before using.
2. To protect against risk of electrical shock, do not put main body (motor) in water or any liquid.
3. Children should be supervised to ensure that they do not play with the appliance.
4. Do not operate any appliance with damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
5. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. Unplug from outlet when not in use, before assembling or taking off parts and before cleaning.
7. Avoid contact of moving parts.

8. Do not use attachments not recommended or sold by the manufacturer may as it may lead to fire, electric shock or injury.
9. Always ensure your switch the juicer to the off position and the motor has stopped completely before disassembling.
10. Do not your fingers or foreign into the juicer while it is in operation. If food becomes lodged in the inlet use the plunger to push it down or use the reverse button on the machine to dislodge it. If this is not possible turn the juicer off and for the motor to completely stop before disassembling the juicer to remove food.
11. Do not use outdoors.
12. Do not use appliance for other than intended purpose.
13. Lift appliance with the handle only.
14. Do not put any parts into the dishwasher.

ASSEMBLY INSTRUCTIONS:

Important: Prior to Assembling the juicer, please check this point: At the base of the bowl there is a rubber stopper. When in place the stopper ensures all the juice only exits via the juice outlet. Before Juicing always ensure that the rubber stopper is firmly in place.

1. Assemble the bowl on the base.
 - A. Make sure the bowl is all the way into the shaft of the base.
2. Insert the strainer into the spinning brush. Align the red dot on the strainer with the red dot on the bowl and insert strainer +spinning brush into the bowl. When the dots are correctly aligned the strainer +spinning brush will lock in place.
3. Insert the squeezing screw into the strainer and turn until it drops into position.
4. Assemble the hopper onto the bowl.

- A. Align the small arrow on the hopper with the red dot on the bowl.
- B. Twist the hopper so that the plastic tab with the arrow on it points to the closed sign on the base.

Note: The small arrow from part 4.A will no longer be aligned with the red dot once the hopper is locked to the close position.

OPERATING INSTRUCTIONS: IMPORTANT:

- Do not operate the juicer with wet hands as it may cause an electric shock.
 - Do not operate the juicer prior to inputting juicing materials.
 - Do not operate for more than 30 minutes at one time.
1. Plug in the juicer.
 2. Place a container below the juicer outlet and a container below the pulp outlet.
 3. The juicer power button (located at the upside of the handle) has 3 positions.
 - A. ON-This starts the motor and juicing process.
 - B. OFF-Is the central position of the button. It switches off the appliance.
 - C. REV-Is reverse. Only use this function when something is stuck in the juicer and it needs to be unclogged.
 4. Insert the material you wish to juice into the hopper.
 - Ensure pieces are not larger than 4cm for optimal juicer extraction.
 - Remove any large pips or seeds.
 - Always pre-wash food before juicing.
 - Do not overstuff the hopper or force food in. Insert food slowly to allow juicer time to work. The pusher is only to be used if food becomes stuck.

5. Switch the power button to "ON".
 - Insert food slowly to allow juicer time to work.
 - Do not overstuff the hopper or force food in. The pusher is only to be used if food becomes stuck.
6. When you are finished switch the power button to 'OFF'.

A. IF THE MACHINE BECOMES CLOGGED AND INOPERABLE.

1. Turn the machine off and press the reverse button for a few seconds then try operating again.
Note: The reverse button works with a 'pulse' motion.
2. If the reverse button does not work turn off the machine and switch off at the power point. Disassemble the unit to dislodge any material then reassemble as per the instructions and try again.

DEVICE CLEANING:

1. Switch off the unit.
2. Twist the bowl and hopper as one piece to the right so that the arrow on the hopper moves away from the close position. Lift off.
3. Disassemble the parts in the order show by the diagram.
4. Use the brush to clean all these parts thoroughly in warm soapy water then dry thoroughly.
5. Use a damp cloth to wipe down the base of the unit.

TECHNICAL SPECIFICATIONS:

1. Switch off the unit.
2. Twist the bowl and hopper as one piece to the right so that the arrow on the hopper moves away from the close position. Lift off.
3. Disassemble the parts in the order show by the diagram.
4. Use the brush to clean all these parts thoroughly in warm soapy water then dry thoroughly.
5. Use a damp cloth to wipe down the base of the unit.

Input voltage: 220-240V~

Frequency: 50/60Hz

Power: 150W

Speed: 60 ± 5RPM

Max. Operation time: <30min

TROUBLESHOOTING:

Problem	Possible Causes	What To Do
Start fault	1. Make sure the power plug is inserted in place	1. Check the power plug and make sure it is in place
	2. The lid of juicer is in wrong place	2. Check the lid if it is installed in a right way
Interrupt in the process	1. The food is over loaded for one time or too hard to mix	1. Do not put in too much food for one time, make sure the food is smooth to the machine.

	2. The juicer is working over times	2. Use time is less than 30 minutes
Abnormal noise	1. Check the juicer if it is placed smoothly	1. Put the machine on a steady ground
	2. The food is inappropriate for the machine	2. Do not put in too much food for one time, make sure the food is smooth to the machine
The lid of juicer fails in installation or cannot be opened	1. The lid of juicer fails in installation	1. Make sure the spiral propeller is in right place
	2. The lid is stuck	2. Check the residue, press the button to get the residue to input port.

Terms and Conditions:

1. This warranty is void if:
 - a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.

5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongonline.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log on to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.