


وسمیلنا

Oven Toaster Griller

#OvenToastGrill

User Guide

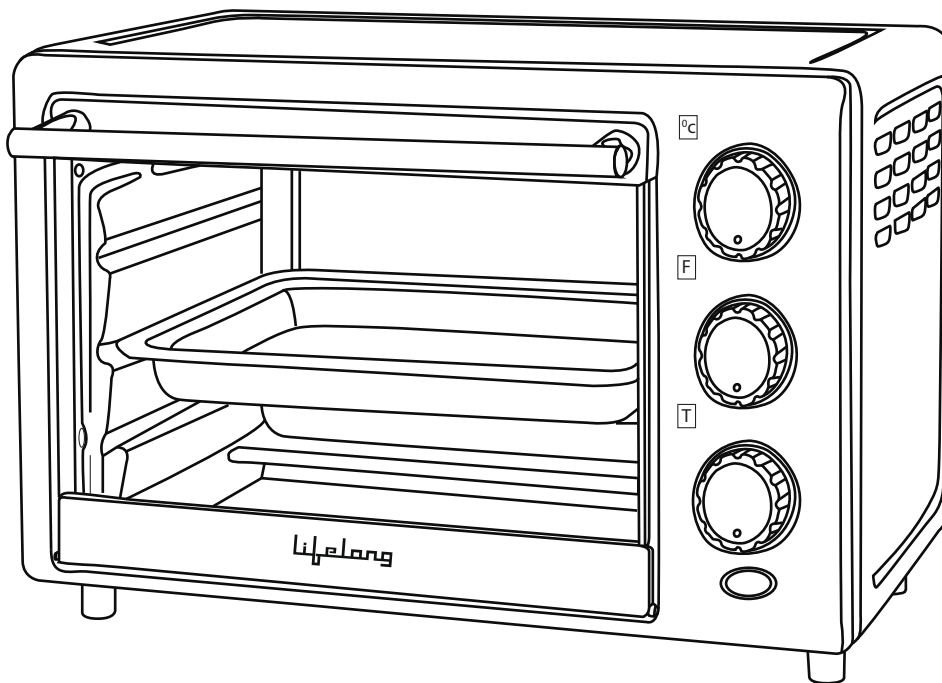


Before using this oven, please read this instruction manual completely.



IMPORTANT SAFEGUARD:

When using electrical appliances, basic precautions should always be followed, including the following: **Read all instructions before using this appliance.**


CAUTION!

1. Do not touch hot surfaces, use handles or knobs.
 2. Close supervision is necessary when any appliances are used by or near children.
 3. The temperature of accessible surface may be high when the appliance is operating.
 4.  Hot surface
 5. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 6. Children should be supervised to ensure that they do not play with the appliance.
 7. If supply cord is damaged, it must be replaced by the manufacturer. It's service agent or similarly qualified person in order to avoid a hazard.
 8. Repairs danger: electrical appliances must only repaired by authorized specialists, because damages can occur by non-authorized repairs. In the case of a repair, contact your retailer or manufacture.
 9. Appliances are not intended to be operated by means of an external timer or separate remote-control system.
 10. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
 11. When operating the oven, the rear surface should be as close to the wall as possible. For other surface, keep at least four inches of space away from the wall to allow for adequate air circulation.
 12. Do not operate appliances with damaged cord or plug or after the appliances malfunctions, or has been damaged in any manner. Return appliances to the nearest Authorized Service Center for examination, repair, or adjustment.
 13. To protect against electric shock, do not immerse cord, plug, or any parts of the oven in water or other liquid.
 14. Do not let cord hang over edge of table or counter, or touch hot surfaces.
 15. The use of accessory attachments not recommended may cause hazard or injury.
 16. Do not place on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
 17. Unplug from outlet when not in use and before cleaning. Allow cooling before putting on or taking off parts, and before cleaning.
 18. To disconnect, turn the control to OFF, then remove the plug, always hold the plug, but never pull the cord.
 19. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
 20. Do not cover any part of the oven with metal foil.
 21. Do not clean with metal scouring pads pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
 22. Never leave the appliances unattended while broiling or toasting.
-

IMPORTANT SAFEGUARD:

23. Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
24. A fire may cause if the oven is covered or touching inflammable material, including curtains draperies, walls and like, when on operation. Do not store any item on the oven during operation.
25. Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
26. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
27. Do not store any materials, other than recommended accessories, in this oven when hot oven.
28. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
29. Do not use outdoors.
30. Do not use appliance for other than intended use.

NAME OF PARTS:

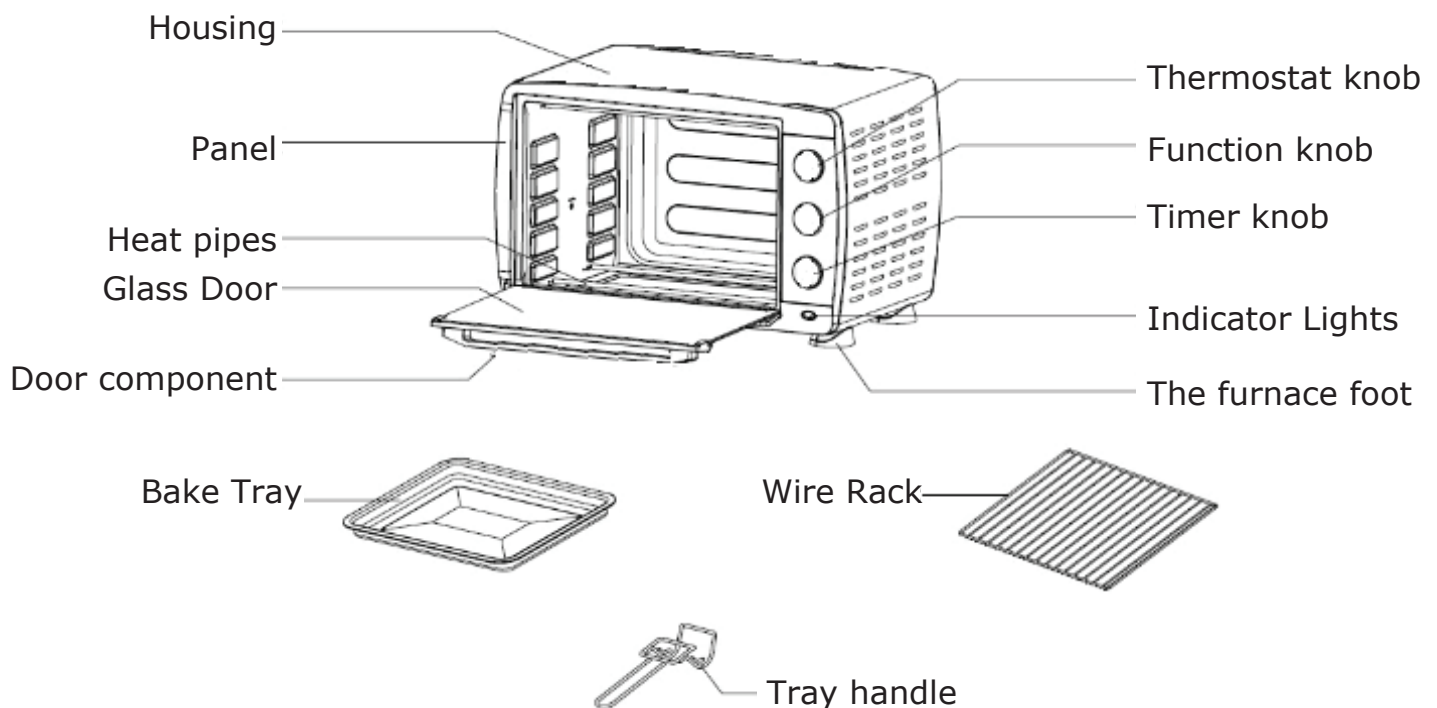

OPERATING INSTRUCTIONS:

1. Put the oven on a plain plate. Then plug in the power supply.
2. Prepare the food which is going to be baked in a tray, and regulate the temperature, time and power level, then plug in to preheat the oven. Put the tray with handle into the oven at the fixed temperature.
3. Spread the tray with eatable oil before putting preparation in it to provide again stickiness.
4. One tray once time ensure the food to be baked well distributed.
5. In the course of baking, watch the food from glass door. To the chunk of food, It is better to turn it over once or twice. Open the door when need turning or moving. But the door must be shut immediately.
6. Push all the "OFF" button after baking pull off the plug. Take out of the food carefully.

HELPFUL HINTS:

Do not worry about the smoke for the first operating, as it is normally for the first heating, and will disappear within 20 minutes. In general, it is not necessary to pre-heat the oven, But you may better results if you heat the oven before cooking some delicate meals, such as rare medium meat and cakes.

TIMER OPERRATION :

Turn the timer to choose timer for cooking

HOW TO BAKE:

1. Place the removable rack into the desired position.
2. Place the bake pan on the wire rack. Shut off the oven door.
3. Turn the timer dial to the desired cooking time. .
4. Turn the thermostat dial for the desired temperature.
5. When finished baking, turn the time dial till position "Off",to switch off the oven

HOW TO BROIL:

1. Insert the removable wire rack with food and the all-purpose pan.
2. Keep the door half-open.
3. Turn the thermostat dial to the desired broiling time.
4. When finish broiling, turn the timer dial till position "Off" to switch off the oven.

HOW TO TOAST:

1. Set the temperature control to 230
 2. Place food to be toasted on the Bake Rack.
 3. Turn the Time Control to desired darkness. Bell will ring to signal the end of the Toast cycle.
 4. When finish cooking, turn the timer dial till position "Off" to switch off the oven.
-

MAINTENANCE AND CLEANING :

1. Disconnect the oven by taking out the plug from the outlet.
2. Always clean the parts of the oven after using every- time, Keep the oven open to let it dry.
3. Ensure that all acidic materials (lemon or oil) are cleaned immediately.
4. The grill shells can be cleaned with detergent and water. Preferably use dry cleaning powders to clean inner & outer sides of the oven

TERMS AND CONDITIONS:

1. This warranty is void if:
 - a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/ non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.
5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regard less of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damage for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Manufactured for & Marketed by :
Lifelong Online Retail Private Limited

For queries and complaints:
please contact: customercare@lifelongindia.com
www.lifelongindiaonline.com

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from them date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 1 year

Please note:

Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log onto to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.



Oven Toaster Griller

#OvenToastGrill

Manufactured for & Marketed by :
5th Floor, Unit No. 508 DLF South Court
Saket District Center, Saket, New Delhi- 110017
Lifelong Online Retail Private Limited

For complains and suggestion
✉ customercare@lifelongindia.com
☎ Tel No. 0124 654 3344
🌐 www.lifelongindiaonline.com