 


lifelong

ELECTRIC RICE COOKER

User Manual

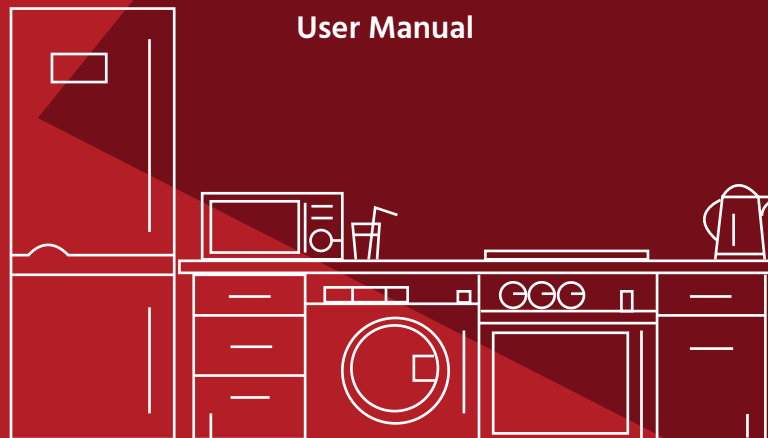

Built for Taste. Built for India.

Manufactured for & Marketed by :
Lifelong Online Retail Private Limited

For queries and complaints:
please contact: customercare@lifelongonline.com
www.lifelongindiaonline.com

INTRODUCTION:

Dear Customer,

Congratulations! We welcome you to the Lifelong family, as you welcome the Lifelong Electric Rice Cooker to be a part of your home.

We started Lifelong Online with a simple dream of being a part of every Indian household, which is why we have produced a varied assortment of innovative products across a spectrum of categories - Home, Kitchen, Grooming, Fitness, Lifestyle, and Smart Home - to better assist you.

 
We hope you enjoy using our Electric Rice Cooker as much as we enjoyed designing it for you.

Delivering promises that last lifelong.

Thank you for choosing us,

Lifelong

Built For India

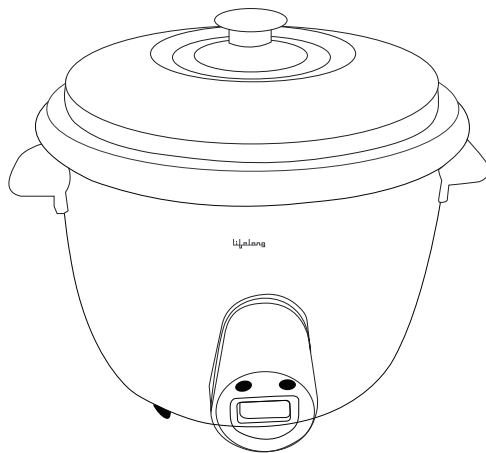

LLRC02


TABLE OF CONTENTS:

1. About the product
2. Marking of Product
3. Precautions Before Use
4. Operating Instructions
5. Cleaning and maintenance
6. Terms and conditions
7. Warranty

ABOUT THE PRODUCT:

The top-of-the-class Lifelong Electric Rice Cooker is specially designed to help you prepare perfectly cooked meals every day, with great convenience, and more efficiency than traditional cooking methods.

 
MARKING OF PRODUCT:

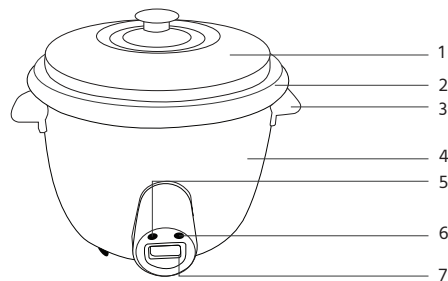


- | | |
|------------------------|-------------------|
| 1. Cover | 5. Cook Indicator |
| 2. Stainless Steel Pan | 6. Warm Indicator |
| 3. Handle | 7. Cook Button |
| 4. Outer Shell | |

PRECAUTIONS BEFORE USE:

 - The Electric Rice Cooker should not be plugged into a multi-socket sharing with other appliances in simultaneous use.

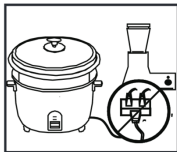

 - Do not place the Electric Rice Cooker near stoves, flames or other sources of heat or inflammable materials. Do not keep the Electric Rice Cooker bowl on LPG stove in case of power failure.

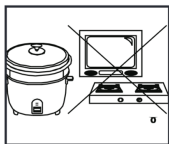

- Do not wash the main body with water or immerse it in water. Its electrical insulation may get damaged.
- Do not scrape the cooking pan or throw it as it may cause dents. Deformation causes bad contact of cooking pan with heating plate. This may lead to malfunctioning of Electric Rice Cooker.
- Never switch on the cooker when the cooking pan is not placed in the main body.
- The steam vent on the outer lid will emit hot steam during cooking. Never touch it by hand.

- Do not cover the steam vent on the outer lid when the cooking is in progress.
- Do not touch the cooking pan with bare hands as it will be hot and may cause scalding injury. Use gloves to hold and lift the pan.
- Never touch the heater by hand immediately after cooking. You may get burnt.
- Never shift to “warm” mode by yourself. Allow the cooker to go to “warm” position on its own. The exception is in the case of dishes other than rice.
- Check from time to time if the electric sockets, cord etc., are in good condition. Do not operate the Electric Rice Cooker with damaged plug and cord. The power cord should not get twisted / knotted or stretched.
- When plugging out from the socket, hold the plug firmly and then pull it out. Do not hold the wire while pulling out of the socket.
- Ensure that there are no water/dust/ food particles between the cooking pan and the heating element/thermostat. Due to the presence of such particles, cooking results may be affected, and heating components may get damaged as well.
- Unplug the Electric Rice Cooker when not in use.
- Do not allow children to operate the Electric Rice Cooker.
- Do not use the attachments that are not recommended by the company.
- This appliance is designed for household use only. Do not use it other than for intended use as described in this manual.
- It is recommended to operate the Electric Rice Cooker with the socket that is properly earthed.

- In case of any problems or repairs, please contact the Lifelong Service Centre/ Authorised Service Centres. Do not try to repair the Electric Rice Cooker yourself

OPERATING INSTRUCTIONS:

- Measure desired amount of rice with the measuring cup provided and pour it in a container for washing. Do not use the cooking pan provided with the Electric Rice Cooker for washing as the cooking pan would be damaged or the bottom would be deformed. This may lead to the malfunctioning of the Electric Rice Cooker.
- You can soak the rice in water for 30 minutes. This improves the quality of cooked rice.
- Place the Trivet* at the bottom of the cooking pan. Add rice into the cooking pan on top of the trivet and add water according to the table given below. Never pour water and rice together in the cooking bowl as there is a possibility that the rice will go below the trivet plate and will become brown. Please remember the above proportion is only our indication. However, depending on the individual preference and the quality and age of rice used, the water quantity will vary. You will become familiar with how much water to add after a few operations.

Item	Rice texture	Water in cups (For 1 cup of rice)
Fried Rice	Slightly undercooked	1½ - 1¾
Pulav / Biryani	Firm	2
Plain White Rice	Medium	2½ - 3
Khichdi, Pongal, etc.,	Soft	3 - 4

- Do not let the rice pile on one side. Make sure it spreads evenly on the bottom to avoid half-done rice.
- Wipe off any food particles/dust on the outer surface, thermostat and heater. Otherwise, the appliance may get damaged.
- Place the cooking pan into the main body of the Electric Rice Cooker. Gently turn the cooking pan left and right in the main body for proper seating. Make sure that the pan is positioned correctly otherwise the heater may get damaged.
- Place the lid on the cooking pan.
- Plug the power cord to the socket / power outlet on the wall. The “warm” indicator will light up.
- Press the “Cook” button down immediately to start cooking. You will see the “Cook” indicator lights up.
- The button cannot be pressed down without placing the cooking pan. Please do not place the empty cooking pan in the cooker.
- When the rice is cooked, the “Cook” indicator will go out and “Warm” indicator will light up automatically.
- Please allow the rice cooker to remain in “Warm” mode

for at least 15 minutes after this. This allows the cooking to be completed. It is recommended to always use the trivet for cooking rice. Also, if the rice is cooked without placing the trivet,



the rice will become slightly brown at the bottom. It is normal.

- If you want to eat after some time, please open the Electric Rice Cooker after 15 minutes of “Warm” mode and distribute the rice evenly with the scoop. Place the lid on the cooking pan.

- Continuous “Warm” over 6 hours may cause the rice to smell bad.

- Unplug the power cord when not using the Electric Rice Cooker.

Please Note:

- When cooking soups, curries and other liquid foods, the Electric Rice Cooker will not automatically shift to “Warm” mode. Check if the food is cooked and push the switch to “Warm”.

- For foods that tend to crust easily, smear a little oil on the cooking pan before adding the other ingredients.

- Use of hard water will increase cooking time.

To reheat cooked rice:

- This can be done by sprinkling a little water over the rice, distributing it evenly in the cooking pan and then operating the cooker in “Cook” mode.

Make Dishes other than rice:

- 1) The cooking time for dishes other than rice must be monitored by you.

- 2) The cooker must be turned manually to “warm” mode when some quantity of water remains in the cooking pan.

Important: Do not allow the Electric Rice Cooker to get dry heated. To prepare Idly or Soup:

Idly – Just add two cups of water to the cooking pan. Switch on the Electric Rice Cooker and put it in “Cook” mode. Wait till the water starts steaming. Then place the idly stand along with the batter. Close the lid. Steam for 15 minutes. Remove the stand and ease out idlys after cooling. Check from time to time that the water level is maintained.

Soup – Put the vegetables with required quantity of water. Close lid and switch on to “Cook” mode. When the vegetables become soft, remove and cool. Blend in a mixer grinder or hand blender. Strain the liquid and transfer the puree to the cooking pan. Season with salt and pepper.

CLEANING AND MAINTENANCE:

- Fill the cooking pan with some water and a mild cleansing agent. Let it soak for 10-15 minutes. Clean with a sponge. Rinse and dry.

- Clean the lid of the Electric Rice Cooker with a soft cloth or sponge, dipped in water or a mild cleansing agent. Never use sandpaper, brush or any other rough abrasives to clean the cooking pan as it may cause damage.

- Never immerse the body of the Electric Rice Cooker in water as the water may enter the electrical parts leading to electric shock and malfunctioning of Electric Rice Cooker.

- The body of the Electric Rice Cooker should be wiped clean only with a dry cloth.

- The heating plate can be wiped with dry cloth to remove any spill overs of.

This is required for emitting the steam out while cooking. Make sure that the vent holes are not blocked.

Terms and Conditions:

1. This warranty is void if:
 - a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised service provider.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.

5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customer@lifelongonline.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log on to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.