


lifelong

GAS STOVE

User Manual

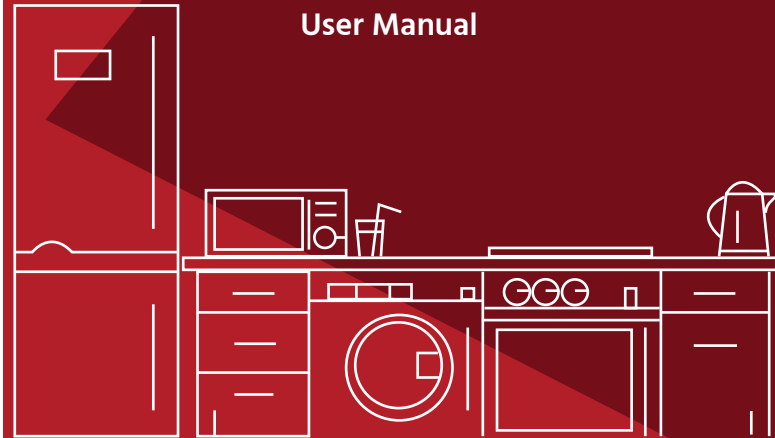

Manufactured for & Marketed by :
Lifelong Online Retail Private Limited

For queries and complaints:
please contact: customercare@lifelongonline.com
www.lifelongindiaonline.com

Built for Taste. Built for India.

INTRODUCTION:

Dear Customer,

Congratulations! We welcome you to the Lifelong family, as you welcome the Lifelong Gas Stove to be a part of your home.

We started Lifelong Online with a simple dream of being a part of every Indian household, which is why we have produced a varied assortment of innovative products across a spectrum of categories - Home, Kitchen, Grooming, Fitness, Lifestyle, and Smart Home - to better assist you.


We hope you enjoy using our Gas Stove as much as we enjoyed designing it for you.

Delivering promises that last lifelong.

Thank you for choosing us,

Lifelong

Built For India

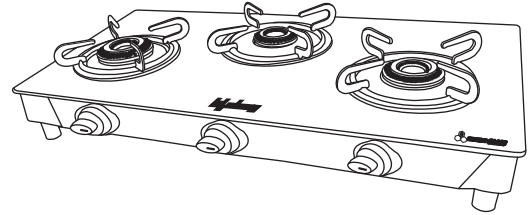

LLGS18/ LLGS23

TABLE OF CONTENTS:

1. Instruction for use
2. Important care and maintenance instructions
3. Gas leak
3. Specifications
4. Trouble shooting chart
5. Terms and conditions
6. Warranty

INSTRUCTION FOR USE:

- The LP Gas Stove is simple & safe to use. Begin by placing the gas stove on a horizontal working table.
- Connect the gas stove to the gas cylinder by fitting the free end of the rubber tube to the inlet connection nozzle. The rubber tube should be laid in such a manner so as to avoid sharp bends.
- While lightning the burner, first open the gas-regulating valve on the cylinder. Bring a lighted match stick close to the burner which is to be lit. Then, push the relevant knob and turn it in the clock / anti clock.. (as per model specification) direction to the "ON" position.
- While putting off the burner, first close the regulating valve that is provided with the gas cylinder, and then turn the stove knob to "OFF" position.
- The gas cylinder should not be tilted horizontally while in use.
- Take care to avoid spillage while cooking as this may result in extinguishing of flame and clogging of burner holes.
- Before removing a dish from the burner, turn off the appropriate knob. As a safety precaution, keep the main regulating valve of the cylinder closed when you are not using your gas stove.

IMPORTANT CARE AND MAINTENANCE INSTRUCTIONS

- **Use liquefied Petroleum Gas at 2.942 Kn/M2 (30 Gf/Cm2).**
- **Ensure there are no inflammable substances kept near the cook top.**
- Use the cook top for cooking purpose only.
- For the hose / tube, use a quality rubber hose only, suitable for use with an LPG stove.

Do not use a plastic vinyl hose as it may be inflammable. The rubber hose should not touch any part of the cook top or be kept underneath it

- Switch off the fans in the kitchen when the cook top is in use.
- Make sure the rooms / kitchen where the cook top is placed in are well ventilated. It is not advisable to use the cook top for long periods in a small room or in a closed space without proper ventilation.

- While in use & immediately after use, do not touch the pan supports as they get very hot
- For better & longer service, keep your cook top clean at all times. The pan support & tray (according to model) can be removed for cleaning purposes.
- Never attempt to dismantle or repair the cook top on your own, In case of any difficulty or problem contact your gas dealer or contact our customer care executive to have it addressed.

GAS LEAK

- If a gas leak is felt through a gas smell or otherwise, immediately close the main gas valve of the cylinder & any of the burners if they are already in 'ON' position on the cook top.
- Open up all windows and call your gas supply agent / gas dealer customer care center immediately.
- Do not switch 'OW or "OFF" any electric point or light a match stick or use a lighter when a gas leak is detected / suspected.

SPECIFICATIONS:

Product Type		Glass Cooktop
No. of Burners	Large Burner	2
	Small Burner	1
Burner Size (mm)	Large Burner	79
	Small Burner	69
Burner Rating (G/Hr.)	Large Burner	189x2
	Small Burner	143x1
Burner Rating (Kcal/Hr.)	Large Burner	2064x2
	Small Burner	1554x1
Ignition Type		Manual

Note:

Product is compatible with LPG only.

Brand does not provide LPG to PNG conversion.

TROUBLE SHOOTING CHART:

PROBLEM	POSSIBLE REASON	ACTION
Cook top does not ignite	Main gas valve closed	Open main gas valve
	Rubber hose bent/blocked	Straighten the hose, or remove the blockage or change hose
	No gas supply	Replace the gas source
	Air mixed in the tube	Repeat to ignite to remove the air in the hose
Gas leakage/ smell	Leakage from gas hose	Refit or replace the gas hose
	Gas knob not closed properly	Shut OFF gas knob properly
	Burner not lit after putting ON gas knob	Re-ignite the burner
	Leakage from gas cylinder regulator	Inform your gas dealer
If flame is abnormal	Flame ports are blocked	Clean the flame ports
	Burner top fitting	Fit burner in right position
	Knob position not correct	Knob should be at ON position
	Supply of Gas	Replace gas cylinder/ regulator

The warranty is fully applicable against any defect arising out of defective material or faulty workmanship for a period of two year from the date of purchase.

The warranty will not be applicable in the following cases :

1. If the product is not used according to the directions given in the warranty card.
2. If defects are caused by damage in transit, mishandling, tampering, misuse or unauthorized repair.
3. If any modification/alteration of any nature is carried out on the product or if the serial number is deleted, defaced or altered.
4. If the repair is canied out by any person other than the one duly authorised by the company.
5. The decision of the company regarding the nature of fault/defect for exercising of this warranty shall be final and binding.
6. Glass breakage if it is not covered under warranty standard.

For availing this warranty, Kindly retain your copy of the warranty card duly signed and stamped by your dealer.

Terms and Conditions:

1. This warranty is void if:
 - a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.

5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from them date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongonline.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log on to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.