


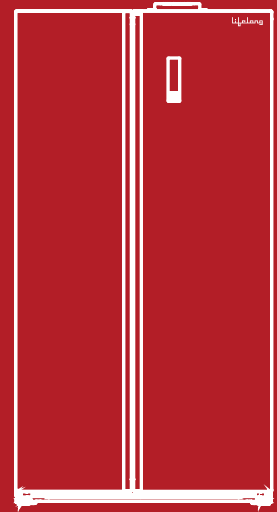

1 YEAR COMPREHENSIVE WARRANTY
10 YEAR COMPRESSOR WARRANTY

SIDE BY SIDE REFRIGERATOR (LLSBSR460)



Manufactured for & Marketed by :
Lifelong Online Retail Private Limited
For queries and complaints:
please contact: customercare@lifelongindia.com
www.lifelongindiaonline.com



Digital Display /
Intelligent Control



Quick Cool /
Freeze Feature



Holiday Mode
Function



Precise
Temperature
Control



Super Silent
Operation



Inverter
Compressor

INTRODUCTION:

Welcome to the Lifelong family.

Dear Customer,
Congratulations on purchasing Lifelong Side by Side Refrigerator and a warm welcome to the Lifelong family.

At Lifelong, we take pride in developing quality products for your home, health and happiness. Through constant innovation in our products, we have been able to develop a wide spectrum of products across Home, Kitchen, Grooming and Wellness categories.

We strive to enrich the lives of a modern consumer every day.
Keeping that in mind, we have offered all our products at a fair and honest price.

We hope that the Side by Side Refrigerator serves you and your family's needs without any hassles.

Thanks again for becoming a part of the Lifelong family. Enjoy using the product!

Warm Regards,
Team Lifelong

ABOUT THE PRODUCT:

LIFELONG Side by Side Refrigerator allows you to maximize your storing space with respect to the dimensions of a standard refrigerator. The all around cooling system, ensures that food in the refrigerator is cooled, evenly in both fridge and freezer compartments. The Inverter Compressor saves energy. The counter depth design is seamless to blend well with your interiors, giving it a modern look.


SAFETY PRECAUTION:

Please follow the safety instructions listed below :

- The power supply for the unit should be exactly the same as described on the specification sheet, and use the standard tri-pin socket.




- The unit should be operated in the absence of flammable or explosive fumes. It is prohibited to put the flammable, acid or volatile goods in cabinet.

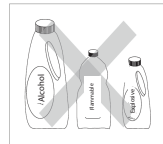

- Please unplug the unit first when you replace the light bulb or repair the refrigerator.
- Please unplug the unit immediately if you find any abnormal smell or smoke, and contact our customer service.
- Hanging or sitting on the door is very dangerous, it may overturn the unit and subvert the goods in (or on) the refrigerator.



OVERVIEW:

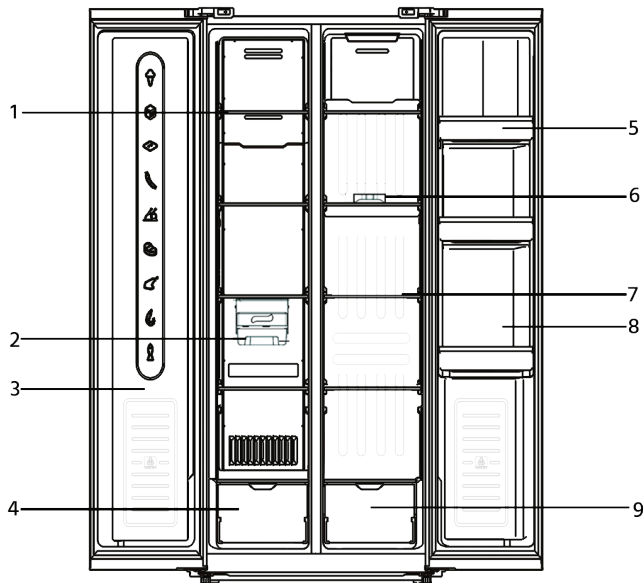

Important notice:

1.The product appearance and specifications may be varied without notice to raise the product quality.

2.The product appearance and specifications may be varied with that of the related energy efficiency test or the related safety test,etc.


Freezer Room

1. Glass Shelf
2. Twist Ice Tray
3. Freezer Door
4. Flip Open Glass Compartment for Freezer

Fridge Room

5. Fridge Door Racker
6. Egg Tray
7. Glass Shelf
8. Fridge Door
9. Flip Open Glass Compartment for Refrigerator

PLACEMENT:

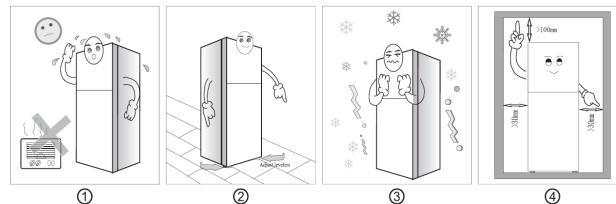

1. The unit should be placed in a ventilated and dry environment. Do not put the unit in direct sunlight, and keep it as far as possible from heat sources.
2. The unit should be placed on flat and steady ground. Keep the unit level by adjusting the front leg levelers.
3. Do not put the unit in cold area.
4. There should be enough empty space around the unit as shown, to allow proper ventilation. (fig 4) We suggest you to maintain a minimum distance of 10 cm from the wall behind.

TIPS FOR MAINTENANCE:

1. Temperature could be affected by factors such as the location of the refrigerator, ambient temperature and the frequency of opening the door.
2. The food that needs to be frozen should not be placed in direct contact with food in storage and, if required please reduce the quantity of frozen food.
3. In order to achieve optimal ice-freezing, the ice-tray(s) should be kept at a nominal distance from the items stored in the refrigerator.
4. The effervescent drinks should not be stored in food freezer compartments or cabinets or in low-temperature compartments or cabinets.
5. Take necessary precautions to prevent an undue rise in the temperature because of the packing of frozen foods (avoid wrapping the frozen food in several layers of packing).
6. Make sure the refrigerator is located away from any heat source (including ovens) and direct sunlight.
7. Before storing hot food, cool them to room temperature.
8. In order to maintain optimum cooling, keep the door closed, reduce the opening frequency and keep the opening time to a minimum.
9. When defrosting frozen food, you can put them into the fridge department, which will assist in refrigeration, helping to reduce the energy used.
10. Make sure the temperature sensor is not covered or blocked by food, keep a good distance between food and temperature sensor.


OPERATION CHECK:

Refrigerator may not work properly if being left at a temperature above or below the indicated range for a long period.


Climate class	Ambient temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T*	+16°C to +43°C

* applicable to LLSBSR460 only.


Make sure the unit has been placed properly and all instructions have been followed.

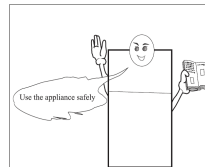

After switching ON the refrigerator, adjust the temperature. Initially if cabinet is left closed for several minutes, you might feel cabinet to be warm from sides. This is a common phenomenon, so do not worry.

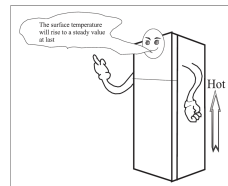

30 minutes later, open the freezer compartment door, if you feel the cool air, that means the unit is working properly. After a period of time the thermostat will switch off & on automatically and set the compartments at the desired temperature.

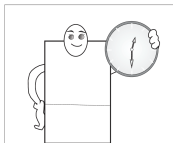

CONTROL PANEL:

Use your appliance according to the following control regulations, your appliance has the corresponding functions as the control panels shows in the pictures below.

OPERATION DESCRIPTION

Long press "unlock" button for 3 seconds, then you press other buttons for operating. Touch the "room" button, the current room will flash, and then press the "room" button again, you can choose between the fridge and freezer compartment. If there is no operation for more than 5 sec, the default will be confirmed. Touch the "Temperature" button, the temperature of compartment will increase or decrease as per temperature cycle. Short press "function" button to select the different modes.

FRIDGE TEMPERATURE SETTING

Press the "room" button, select the fridge compartment, indicator flashes; Each time after pressing "temperature" key, the temperature rises with cycle as 2 → 3 → ... → 8 → OFF → 2 → 3 → ... → 8 → OFF, no operation for 5 sec, display flash stops and the settings take effect. OFF means stop cooling.

FREEZER TEMPERATURE SETTING

Press the "room" button, select the freezer compartment, indicator flashes; Press "temperature" key, the temperature rises with cycle as -25 → -16 → -15 → -25 → -16 → -15. No operation for 5 sec, display flash stops and the settings take effect.

MODE DESCRIPTION:

MODE SETTING

Press the "function" button, the current mode will flash; you can choose between smart, quick cooling, quick freeze, holiday and other modes by pressing the "function" button; If there is no operation for more than 5sec, the default will be confirmed.

SMART MODE

The refrigerator will adjust the temperature automatically according to the ambient temperature and the temperature inside the refrigerator.

QUICK COOLING MODE

In this mode, the temperature of fridge compartment will reach the set desired temperature quickly, which will help in keeping the food fresh. Please choose this mode if you want to cool food or drinks quickly in the refrigerator (fridge compartment).

QUICK (SUPER) FREEZE MODE

In this mode, the food will be frozen in a short time. Note: This mode has a duration of 6 hours and a duration of 48 hours. After entering the quick freeze function, normally it defaults to a 6 hour quick freeze mode. If you need to enter the 48 hour quick-freezing function you need to do the following: When the quick freeze function has been activated, continue to hold the "function" key and "temperature" button for 5 seconds, frozen temperature display area displays the current freezing time (unit: hours), the remaining icons are not displayed; then press the "temperature" key to set the quick-freezing time 48 → 6 → 48 ... → 6 cycles; After 5sec of no operation it will lock automatically, press the "unlock" button for 3 seconds, the settings take effect, and return to the normal state. Frozen mode takes effect immediately after you have finished setting, and it automatically exits and returns to normal control mode when the quick freeze time is finished.

HOLIDAY MODE


When you and your family intend to go on holiday, and no one at home, you can choose this mode. The fridge and freezer compartment will auto-match the appropriate temperature in this mode.

LOCK MODE

Press for 3 seconds to lock the "control panel". And lock key light will be switched on indicating it is ON. The other functions get disabled once the lock feature is enabled.
To unlock press again for 3 seconds

USING THE CONTROL PANEL

1. Chamber selection setting key
2. Refrigeration / freezing temperature display lamp icon
3. Refrigeration / freezing chamber temperature setting key
4. Super freeze function indicator lamp
5. Quick cooling function indicator lamp
6. Lock / Unlock key
7. Smart Function selection setting key
8. Holiday function setting key

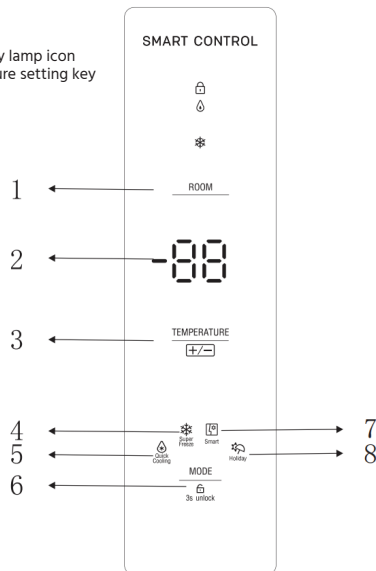

1. Chamber selection setting key

Touch "Room" key gently, and the current room indicator lamp will turn on and flicker at the frequency of 1Hz. Press "Room" key for one more time, the indicator lamp will change circularly between refrigeration chamber and freezing chamber. If there is no key-pressed within 5s, the setting will be chosen as default.

2. Refrigeration/ freezing temperature display lamp icon

Display the temperature set up for the refrigeration/ freezing chamber, and display in a circular way at the frequency of 1Hz.

3. Refrigeration/ freezing chamber temperature setting key

Press "room" key to select "Refrigeration" and the refrigeration temperature display area will display originally set temperature, and flicker at the frequency of 1Hz; press "Temperature" key for one more time, the setting will change in a circular way as per 2-> 3->...-> 8-> OFF-> 2-> 3->...-> 8-> OFF; if there is no key operation within 5s or the "Room" key is pressed once more to enter into the setting room, the indicator lamp will stop flickering, and the setting will take effect.

4. Super freeze function indicator lamp

After the quick (super) freeze function indicator lamp turns on, the refrigerator will enter the quick freeze mode. The quick (super) freeze mode make the food stored frozen within a short time.

5. Quick cooling function indicator lamp

After the quick cool function indicator lamp turns on, the refrigerator will enter the quick cool mode. In this mode, the temperature of fridge compartment will reach a set desired temperature quickly, which will help to keep the food fresh and cools the food quickly.

6. Unlock key

Press the "unlock" for 3 seconds to unlock the display.

7. Smart Function selection setting key


Press the "Smart" key for a short time to make the refrigerator enter the Smart mode for operation.

8. Holiday function setting key

Press the "Holiday" key and the refrigerator will enter the holiday mode. The fridge and freezer compartment will automatch the appropriate temperature in this mode.


TIPS FOR STORING FOOD IN FRIDGE:

The temperature in the fridge compartment is between 2-8 Degree, although this lower temperature can limit the bacteria propagation, it is not suitable storing food for a long period.

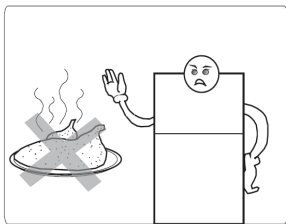


TIPS FOR STORING FRESH FOOD IN FRIDGE

Cooked food should be cooled down to room temperature before putting into the refrigerator. It is better to put the food in a sealed bag before placing into the refrigerator. In order to keep vegetables fresh in the crisper, any water should be removed first, otherwise the vegetables may get spoil.


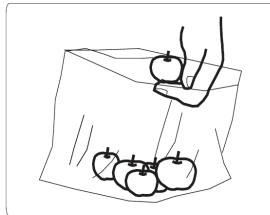


TIPS FOR STORING FROZEN FOOD:

The temperature of the freezer is -25°Degree and it is suitable for storing food for a longer period. After buying frozen food, please put it into the freezer compartment as soon as possible.

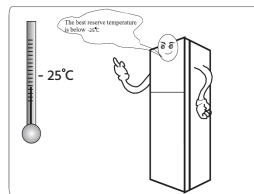

Any hot food must be cooled down to room temperature before it is put into the freezer. Please don't put glass containers filled with liquid into the freezer compartment as the glass may break. It is better to presort the food before putting them into the freezer. Put the same kinds of food together to help minimize the time to freeze. Minimize the opening of door to help save energy. The food should not be kept too close to the outlet or inlet of the airflow, as it may affect the air circulation.

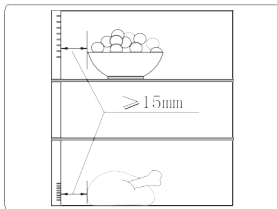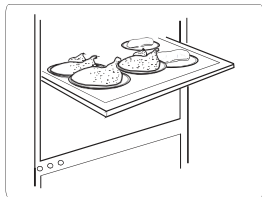


MAINTENANCE:

CLEANING


Always unplug the unit before cleaning. The unit should be cleaned frequently both inside and outside using water and a little neutral detergent. Never use boiling water, harsh cleaning agents, acid, alkali or benzene etc.

Get it serviced by authorized personnel or authorized service center and use only genuine spare parts.

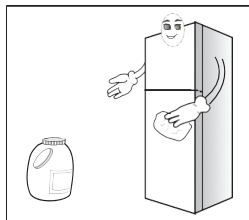


WATER PAN CLEANING

The water pan is located in the back of cabinet. It's function is to collect and evaporate the defrost water. Usually it doesn't need special care, but if you find some overflow or odd smell, it may need to be checked and cleaned. Pull out the power cord first. Lift the water pan up a little, and then pull it straight out carefully. (Caution: make sure the discharge pipe is not too hot). After cleaning, refix the water pan into the original position. Make sure that the pipe is on the top of the water pan before you push it into the original.

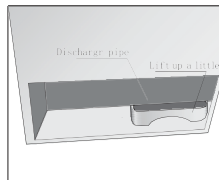

LEAVING THE UNIT SWITCHED OFF

If the unit needs to be switched off for a long time, the plug should be pulled out. Unit should be cleaned properly before re-starting. Ensure that the doors are partly closed (leave a suitable gap), and place the unit in a well-ventilated area to avoid any odor.

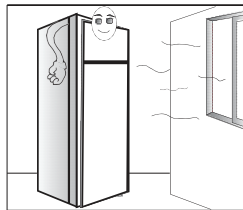

REPLACING THE LED LIGHT

Warning: The LED light must not be replaced by the user. If the LED light is damaged, contact the customer care for assistance. To replace the LED light, the below steps can be followed:

1. Unplug your appliance.
2. Remove light cover by pushing up and out.
3. Hold the LED cover with one hand while pressing the connector latch.

TROUBLESHOOTING:

If you experience a problem with your appliance or are concerned that the appliance is not functioning correctly, you can carry out some easy checks before calling for service.

Warning! Don't try to repair the appliance yourself. If the problem persists after you have made the checks mentioned below, contact our customer care immediately.

Problems	Possible cause & Solution
Appliance is not working correctly	Check whether the power cord is plugged into the power outlet properly.
	Check the fuse or circuit of your power supply, replace if necessary.
	The ambient temperature is too low. Try setting the chamber temperature to a colder level to solve this problem.
	It is normal that the freezer is not operating during the automatic defrost cycle, or for a short time after the appliance is switched on to protect the compressor.
Odours from the compartments	The interiors may need to be cleaned.
	Leftover food, food containers or wrapping maybe a cause for odour.
Noise from the appliance	<p>The sounds below are quite normal:</p> <ul style="list-style-type: none">• Compressor running noises.• Air movement noise from the small fan motor in the freezer compartment or other compartments.• Gurgling sound similar to water boiling.• Popping noise during automatic defrosting.• Clicking noise before the compressor starts.

Problems	Possible cause & Solution
	Other unusual noises are due to the reasons below and may need you to check and take action: The cabinet is not levelled. The back of appliance touches the wall. Bottles or containers inside have fallen.
The motor runs continuously	It is normal to frequently hear the sound of the motor, it will need to run more when in following circumstances: <ul style="list-style-type: none"> • Temperature setting is set colder than necessary. • Large quantity of warm food has recently been stored within the appliance. • The temperature outside the appliance is too high. • Doors are kept open too long or too often. • After installing the appliance or it has been switched off for a long time.
A layer of frost occurs in the compartment	Check that the air outlets are not blocked by food and ensure food is placed at a sufficient distance from air outlets to allow sufficient ventilation. Ensure that door is fully closed. To remove the frost, please refer to cleaning and care headings.
Temperature inside is too warm	You may have left the doors open too long or too frequently; or the doors are kept open by some obstacle; or the appliance is located with insufficient clearance at the sides, back or top.
Temperature inside is too cold	Adjust the temperature by following the "Display controls" heading.
Doors can't be closed easily	Check whether the top of the refrigerator is tilted back by 10-15mm to allow the doors to self close, or if something inside is preventing the doors from closing.

Problems	Possible cause & Solution
Water drips on the floor	The water pan (located at the rear bottom of the cabinet) may not be properly leveled, or the draining spout (located underneath the top of the compressor depot) may not be properly positioned to direct water into this pan, or the water spout is blocked. You may need to pull the refrigerator away from the wall to check the pan and spout. Contact customer care for further help.
The light is not working	<ul style="list-style-type: none"> • The LED light may be damaged. Refer to replace LED lights in the manual. • The control system has disabled the lights due to the door being kept open for too long. Try closing and reopening the door to reactivate the lights.

FAULT DISPLAY:

Fault display shows as following under Fault mode:

ERROR CODE	ERROR TYPE
UC	Communication failure
RS	Sensor failure (refrigerating chamber)
ES	Failure of ambient temperature sensor
FS	Sensor failure (freezing chamber)
Fd	Defrosting sensor failure
FF	Fan failure
FH	Defrosting failure

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 1 Year (Comprehensive), 10 Year (Compressor)

Please note:

Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log onto to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.

Terms and Conditions:

1. This warranty is void if:

- a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised service provider.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.

5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.