

Manufactured for & Marketed by :
Lifelong Online Retail Private Limited

For queries and complaints:
please contact: customercare@lifelongonline.com
www.lifelongindiaonline.com



Built for Baby. Built for India.

INTRODUCTION:

Dear Customer,


We welcome you to the Lifelong family, as you welcome our Lifelong Cuppy Bottle Warmer cum Sterilizer in your home.

At Lifelong, our products are carefully built for India, which is why we have crafted a diverse range of innovative products, across a spectrum of categories - Home, Kitchen, Grooming, Fitness, Lifestyle and Smart Home, to help you better. We then deliver them at the best prices, enriching your everyday living.


We are sure you can't wait to use your new Lifelong Cuppy Bottle Warmer cum Sterilizer. We know we can't!

Looking forward to building our bond for life, cheers!

Thank you, Team Lifelong

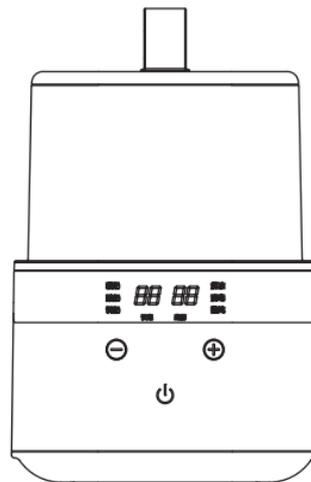

LLCBW01

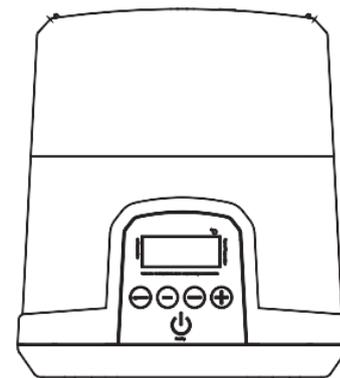

LLCBW02


TABLE OF CONTENTS:

1. About the Product
2. Marking of Product
3. Using the Product
4. Safety Precautions
5. Terms & Conditions
6. Warranty Card


ABOUT THE PRODUCT:

A bottle warmer is an easy-to-use device made for warming baby bottles and safely and uniformly defrosting frozen breast milk bags or baby food. Baby bottle warmers come in a variety of designs, but they all generally function by using steam or a warm water bath. Lifelong Cuppy Bottle Warmer is one such product.

- PTC high efficiency heating element
- Anti-dry burning thermostat
- Hot water conduction
- Imported food-grade plastic
- Large capacity, wide caliber
- 4 bottles at one time
- Multi-functional: warming, adjusting milk, defrosting, supplementing food, and purging

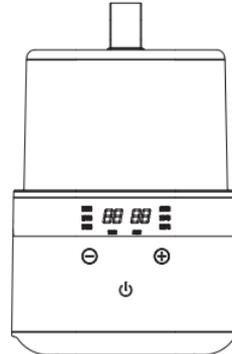

MARKING OF PRODUCT :

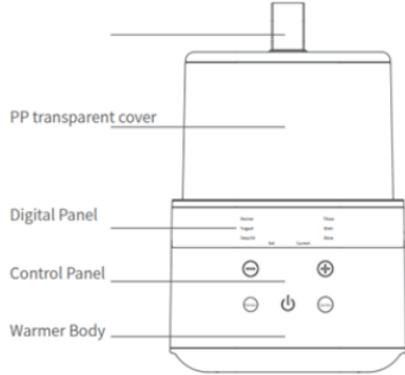

USING THE PRODUCT :

- The product uses a constant temperature adjustment design; if the temperature rises above the rated temperature, it will automatically stop heating; if the temperature falls below the rated temperature, it will reheat until the rated temperature is reached, at which point it will enter a heat preservation state.
- To decrease the buildup of scale on the heating plate, it is advised to use boiled or filtered water rather than tap water for heating. Scale buildup over time will reduce how often the milk warmer may be used.

- It is advised not to keep milk or food at constant temperature for longer than two hours. If the formula needs to stay warm for a long time, it is suggested that you first fill the bottle with warm, boiled water before placing it in the milk warmer for constant temperature heating. When ready to serve, mix in the milk powder.
- Avoid heating milk, beverages, or soup directly in the milk warmer.
- Avoid soaking the milk warmer in water or spraying it with water; instead, wipe the product down with a clean, moist cotton cloth.
- Leave product disassembly to the designated repairer or supplier instead of doing it yourself.

Heating Milk/Set Temp/Warmer

- Turn on the power, do not fill the milk warmer above the maximum water level; instead, add the proper amount of water.
- Put a milk bottle inside the milk warmer, press the "switch" button, and the machine will begin warming milk by default. The temperature display will read 40°C and blink three times before reaching the warm stage. If you want to change the temperature, use the + and - keys to do so.

Note:

- To prevent water from spilling outside the machine when warming the milk, don't fill the container with too much water.
- For refrigerated milk, the bottle must be placed in the container for at least 20 minutes after using the milk warming function for it to achieve the proper temperature.
- It is advised not to heat food for longer than eight hours to preserve the milk's quality. Use your hand to feel the bottle's appropriate temperature before taking it to drink it or giving it to your child.

Yogurt/Warm Milk

- Turn on the power, do not fill the milk warmer above the maximum water level; instead, add the proper amount of water.
- Put the yogurt ingredients in the milk warmer after you've adjusted the bottle, choose the "yogurt" function, and then adjust the yogurt's acidity by pressing the "+ -" button. The yogurt function has a 42°C temperature display, an 8-hour default time, and blinking warming indicators.

Milk Powder/Hot Milk/Temp Control

- Turn on the power, do not fill the milk warmer above the maximum water level; instead, add the proper amount of water.
- Put the water bottle in the milk warmer, select the "milk" function, the machine enters the milk function, the temperature should display 45°C, blinking 3 in the warming state, and to adjust the temperature, Press +, - key.

Thaw/Defrost

- Turn on the power, do not fill the milk warmer above the maximum water level; instead, add the proper amount of water.
- Put the frozen bottle in the milk warmer, choose the "defrost" option, and the machine will go into thaw mode with a temperature display of 58 °C and three blinking lights. It will begin to defrost after 30 minutes have passed since the machine switched automatically to warming mode.

Baby Food/Set Temp/Set

- Turn on the power, add the appropriate amount of water to the warmer using the measuring cup.

- Select the "stew food" feature to switch the machine into the complementary food mode. If you wish to change the temperature, place hot food into the steaming rack on the cover.

Note:

- It's important to remember to add the proper amount of water when supplementing.
- To prevent burns, pay attention to high temperatures when removing.
- Consume food within two hours of preparation to ensure food quality.

Sterilizer

- Turn on the power, use a measuring cup to add 100-200ml of water to the warmer.
- When the sterilizing bottle is put into the steaming rack and covered, the machine enters the "disinfection" function. When the disinfection is finished, the machine automatically switches to standby mode.

Note:

- The water level in the container should not be higher than the position of the steaming basket when sterilizing.
- Never put the bottle directly into the container; instead put it onto the steamer basket.
- To prevent burns, use extra caution when removing the steamer basket, bottle, and lid.

Stew/Warm Food

- Turn on the power in stew, don't go above the maximum water level for fine stew while adding water to the stew kettle.

- Insert the stew pot into the machine's steam rack, close the lid, and choose the fine stew function. The machine enters the fine stew function, and if you want to alter the stewing time, use the "+" "-" key to do so. When the stewing is finished, the machine automatically switches to the heat preservation state.

SAFETY PRECAUTIONS

- As boiling water may spout out during boiling, never fill the milk warmer with water above the maximum water level line.
- To prevent burns, do not touch the top cover while it is heating.
- To prevent falling or scorching, the top cover should not be used to lift the goods.
- Avoid putting the product in areas where babies and small children can get it.
- To prevent the product from being harmed, it is completely forbidden to clean a product's base in water.
- Please turn off the power before dry burning the product if there is no water in it.
- Moving the item when the water is boiling is not advised.
- Noodles, milk, or any other food item should not be heated in the product.
- This device must be used under the supervision of someone who is familiar with the safe operation of the appliance and is aware of the risks when it is being used by someone who is physically incapable, sensory, or cognitively challenged, or who lacks the necessary experience and knowledge.
- Make that the voltage specified on the product matches the supplied voltage before attaching it to the power source.
- Make sure the product's power plug is firmly plugged in and that the outlet is grounded.

- Do not use the product if the plug, cord, or product itself is damaged, and avoid letting the power cord or plug come into touch with hot surfaces or jagged edges.
- Before cleaning, turn off the power supply and allow the device to cool.
- Carbonated drinks shouldn't be kept here.
- This product meets with national safety regulations. If there is any residual material odour, it is normal. Before using the product, please wash it according to the right cleaning instructions, which will significantly lessen or completely get rid of the odour.
- Unplug the power supply when not in use and clean and dry it before putting it away.

Advice: The recommended range for food temperature for infants is 37°C to 42°C. This is because breast milk, at a temperature of about 40°C, is just right for a baby's taste and stomach, and too-cold or too-hot food will hurt the baby's delicate stomach and make it more likely that gastrointestinal disorders will develop later in life. On every package of infant milk powder, it shall be noted: It is advised to temper the milk with 40°C warm water. In contrast to traditional heating methods and microwave heating, this milk warmer uses the constant temperature of warm water heat conduction, heating more uniformly and rapidly, and is better able to determine the ideal temperature for heating. Preserve the nutritional value of breastmilk, formula, and other crucial foods for kids. You shouldn't heat food.

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 6 months

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongonline.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log on to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.

Terms and Conditions:

1. This warranty is void if:

a. The completely filled warranty card is not presented at the time of servicing the product.

b. The product is not operated according to the instructions given under the user manual.

c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.

d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.

e. Product label specifying the model number, serial number and production code has been removed and altered.

f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.

g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.

h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.

2. Repairs or replacements will be carried out by authorized service provider.

3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.

4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.

5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.

6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.

7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.

8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.