


# وسمیلنا

## SmartTrack Treadmill LLTM45



MAX SPEED 6KM

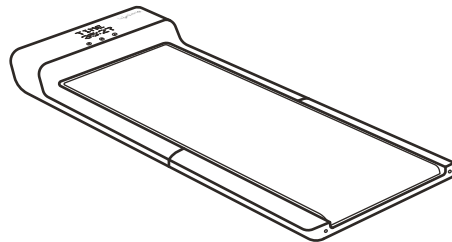

ADAPTIVE SPEED CONTROL



WHEELS FOR EASY MOBILITY



UNIQUE FOLDABLE TREADMILL



SUITABLE FOR JOGGERS AND ELDERLY





## Terms and Conditions:

1. This warranty is void if:
  - a. The completely filled warranty card is not presented at the time of servicing the product.
  - b. The product is not operated according to the instructions given under the user manual.
  - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
  - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
  - e. Product label specifying the model number, serial number and production code has been removed and altered.
  - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
  - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
  - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised service provider.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.

5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Manufactured for & Marketed by :  
**Lifelong Online Retail Private Limited**

Made in China  
For queries and complaints:  
please contact: [customercare@lifelongindia.com](mailto:customercare@lifelongindia.com)  
[www.lifelongindiaonline.com](http://www.lifelongindiaonline.com)

## SmartTrack Treadmill LLTM45


### HOW TO USE

Thank you for choosing SmartTrack Treadmill, which possess the following features

Performance & indicators	Detailed parameters
Expansion dimensions	1432×547×129mm/ 56.5" x 21.5" x 5"
Folding dimensions	822×547×129mm/ 32.5" x 21.5" x 5"
The area of Walking belt	1200×415mm/ 47" x 16.5"
Gross weight	31kg /68 lbs
Net weight	28kg /62 lb
Maximum load	100kg /220 lbs
Applicable height	Unlimited
Minimum speed	0.5 km/hr 0.5 mi/hr
Maximum speed	6 km/hr 3.75 mi/hr
Power Input	746W
Rated voltage	220-240V~
Mode	Standby mode / Fixed mode /Automatic mode

## PRODUCT AND ACCESSORIES

Carefully check whether the contents of the package are complete and intact. If there is any missing or damaged parts, please contact the seller.

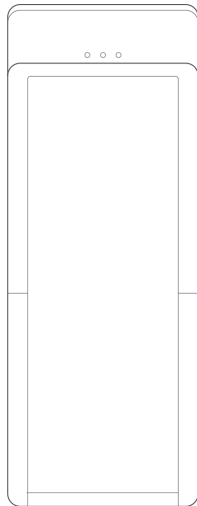

Main Product

### Parts



Power Cable



Remote Controller

### Other accessories



Lanyard



Wrench



Silicone Oil

## Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

### Warranty Service

All Lifelong consumer products are covered against manufacturing defects from them date of purchase.

Name of the product: \_\_\_\_\_

Model: \_\_\_\_\_

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: [customercare@lifelongindia.com](mailto:customercare@lifelongindia.com)

### Customer Details

Name: \_\_\_\_\_

Address: \_\_\_\_\_

Home Number: \_\_\_\_\_

Office Number: \_\_\_\_\_

E-mail Address: \_\_\_\_\_

### Product Details

Model No.: \_\_\_\_\_

Serial No.: \_\_\_\_\_


Purchase Date: \_\_\_\_\_

Invoice Number: \_\_\_\_\_

Online Site: \_\_\_\_\_

Please log onto to [www.lifelongindiaonline.com](http://www.lifelongindiaonline.com) and complete the online warranty form with your personal and product details within 14 days.

## FUNCTION SCHEMATIC DIAGRAM

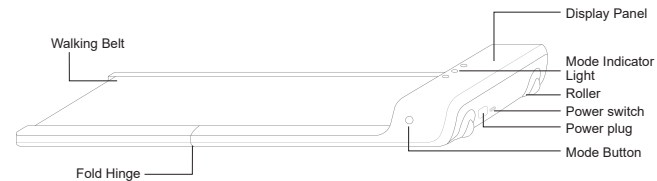

## FUNCTION SCHEMATIC DIAGRAM

Introduction of the function of the indicator panel

TIME	SPD	DIST	STEP
35:27	3.4	234	1234
Display Time	Display Speed	Show Distance	Show Steps



Standby Mode



Manual Mode




Automatic Mode



Fault Warning Light

## WALKINGPAD REMOTE CONTROL

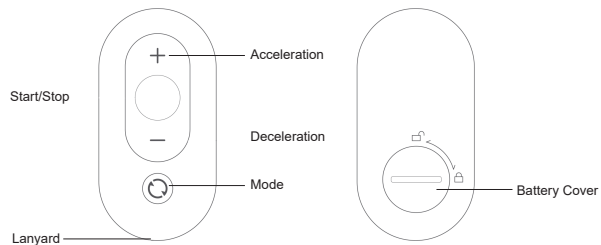


## GUIDE FOR INITIAL OPERATION



Choose flat ground to place the Treadmill. It is forbidden to place it on a thick and soft cushion




Unfold the Treadmill slowly and press it down to completely flatten it




Check and adjust whether the walking belt is in the middle position

## 3. Lubricate the Belt

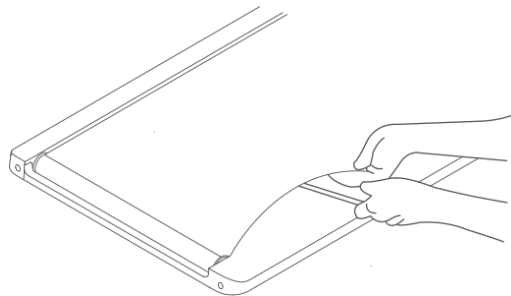


- Unplug the unit from the electrical source before you begin.
- Lift up the belt and apply the silicone to the underside surface of the belt.
- Power on the walking machine.
- Keep the machine running with 4km/h for 10 to 20 seconds.
- Do not use more than 5 to 10ml lubricant, too much lubricant can make the belt slip.
- Use Silicone oil once every 3 months

## 2. Adjust the belt

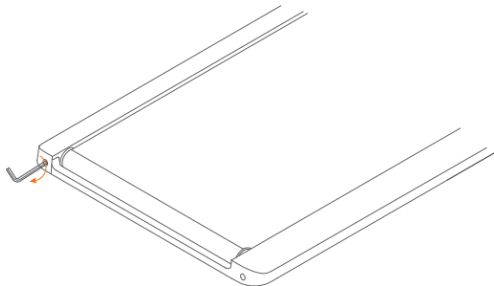

- Press both Mode and Acceleration Button on the remote control for over 3 seconds.
- The display panel shows “CALI” and the speed is 4km/h.
- If belt moves left: Turn the left adjusting screw a half-circle clockwise.
- If belt moves right: Turn the right adjusting screw a half-circle clockwise.
- If belt is slipping: Turn both left and right adjusting screw a half-circle clockwise at same time.
- Check whether it needs to be readjusted after 1 to 2 minutes of use.

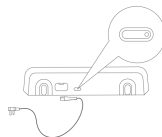

Connect the power line and turn on the switch



Search "Walkingpad" App from Apple Store or Android Google Play and complete installation




Open the App, follow the prompts to set up the device




Enter novice guide



The Speed Limit is 3km /h, 6km/h can be unlocked after novice guide



Start using the walkingpad

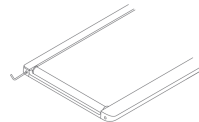

If the belt deviates from the orbit in use, please adjust properly. SEE: 06 Maintenance and servicing

## LEARN TO USE WALKINGPAD

### Mode instruction



Standby Mode

Light of the Standby mode is on; Motor and sensor stops responding



Fixed speed mode

Light of the fixed speed mode is on; Control the speed through the remote control or APP



Automatic Mode


Light of the automatic mode is on; Speed is automatically controlled by intelligent algorithm.

### Instructions of the standby mode control.



Standby Mode

The motor and sensor stop responding in this mode to prevent non-users from accidentally triggering the WalkingPad.




Mode Switch

Short press: return the previous mode.


## MAINTENANCE AND SERVICING

### 1. Clean the walking machine

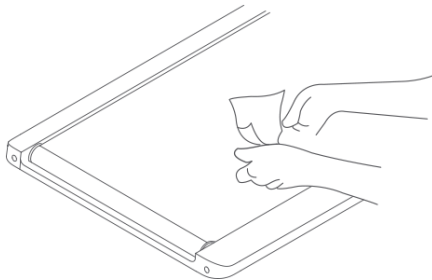


- Unplug the unit from the electrical source before you begin.
- Pour a little gentle detergent in the cotton rag or towel. Don't pour the detergent on the belt directly, and don't use acid or corrosive cleaners.
- Wipe down the frame, motor encasement and belt. Don't wipe backside of the belt.
- After using it for sometime, the end part may appear dusty and stained, that's a normal situation, and just needs cleaning




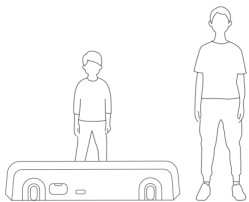


⚠ Minors must be accompanied by an adult.

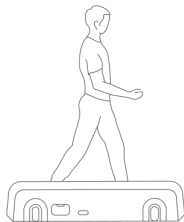

⊗ Walking sideways on the machine is prohibited

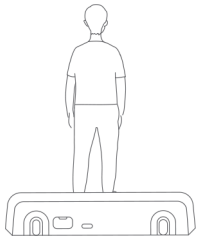

⊗ Walking backwards on the machine is prohibited.

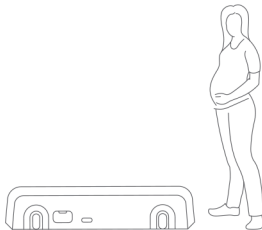


⚠ Please do not use the walking machine if you are aged or pregnant

## Instructions of fixed speed mode control (primary mode)

**M**

Fixed speed mode

In this mode, the speed of the Treadmill can be controlled by the remote control. It is recommended that beginners use the fixed speed mode first and then use the automatic mode after being skilled in using the Smart Track Treadmill. The fixed speed mode is controlled by remote control by default, that is, the START/STOP button of the remote control is used to start or stop the treadmill, which can be modified in the client "Personalized"

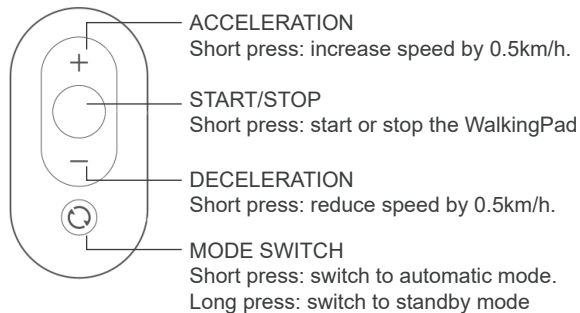


## AUTOMATIC MODE/ ADVANCED MODE

### Description of automatic mode control (advanced mode)


A

#### Automatic Mode

This mode is an advanced mode, which is more difficult and can be used completely without the remote control. It is recommended for users who have good coordination or have walking machine experience.

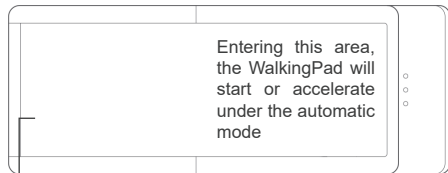


Entering this area, the Treadmill will slow down automatically under the automatic mode

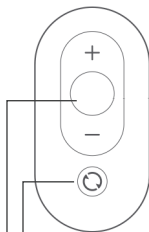


Mode switch: Short press: switch to the fixed speed mode  
Long press: switch to the standby mode

Short press: stop the treadmill


## SAFETY NOTICE

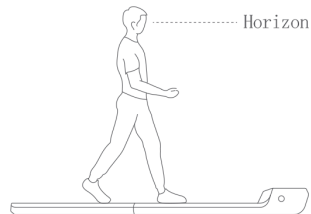


⚠ Please keep your sight horizontal to avoid dizziness.

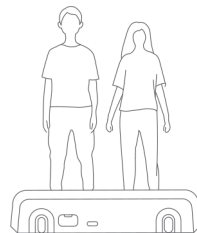


⊗ More than one person to use the machine at same time is prohibited

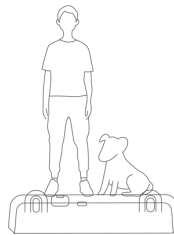


⊗ Using machine with pets is prohibited.

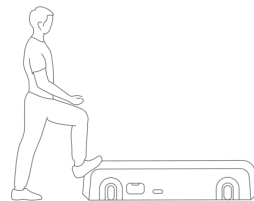


⊗ Trampling the machine head is prohibited.

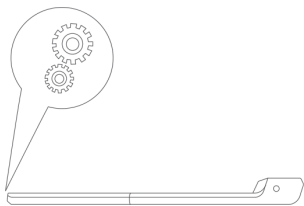


⚠ Anti-involved, please do not trample.

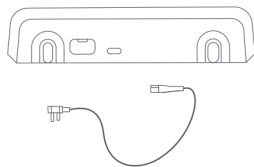

⚠ Please pull out the plug when you're not using it.

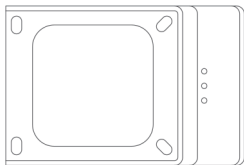

⊗ Prohibition of vertical placement

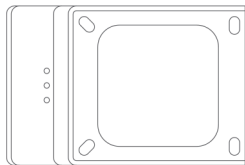

⊗ Prohibition of lateral placement

## REMOTE CONTROLLER NOTICE

If the remote control doesn't work or you buy a new one, The remote control and walking device need to re-establish communication.

**Pairing method:** Restart walking device and short press the MODE Button of Controller many times during display "WAIT".

## FAULT WARNING LIGHT

The Fault Warning Light is off when the walking machine is working well. While error occurs, the fault warning light switches on and the display panel shows the error code

**E01:** Drive communication fault

**E02:** Motor abnormalities

**E05:** Overcurrent protection


**E06:** Motor Protection

**E08:** Sensor Fault


**E10:** High temperature protection, automatic recovery after the end of countdown.

**E11:** Overload protection, please add lubricating oil, and resume automatically after countdown

## SAFETY NOTICE

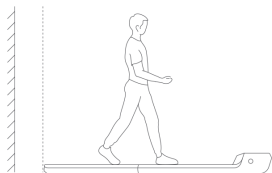

⚠ Please keep a rear distance of 50cm or more.

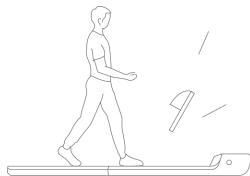


⚠ Please choose sport shoes.


WAIT



⚠ Please do not stand up on the walking machine when it is under power on and auto-calibrating.

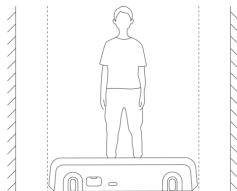


⚠ Please keep a distance of 50cm or more for both sides.

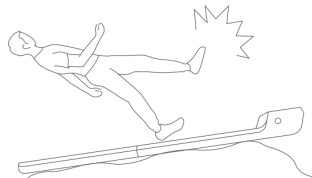


⊗ Using on uneven ground is prohibited.



⊗ It is strictly prohibited to walk up and down the walking device when running.

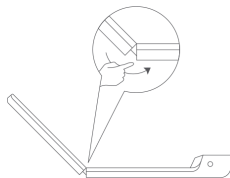

⊗ Anti-pinch

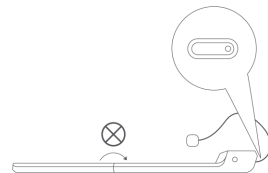

⊗ Folding the machine if the power is not off is prohibited.