

Terms and Conditions:

1. This warranty is void if:
 - a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorized servicer.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorized service provider as well as any other expenses and incidentals will be borne by the consumer.
5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Manufactured for & Marketed by :
Lifelong Online Retail Private Limited

Made in China

For queries and complaints:
please contact: customercare@lifelongindia.com
www.lifelongindiaonline.com

lifelong

BODY MASSAGER

LLM36



Dual head for
powerful massage



Adjustable speed



Non slip
rubber handle

Dear Customer,

Congratulations on your Lifelong Purchase. Our name stands for high-quality and thoroughly tested products. Please read these instructions carefully before use.

HOW TO USE

The Lifelong Body Massager can give you an effective full body massage in the comfort of your own home. The sturdy design and non-slip handle ensure a firm grip while massaging

Step 1: Ensure that the device is switched off before you plug in.

Step 2: Choose between 3 different massage head options – Multiple point, 3 point and rounded heads depending on your personal preference

Step 3: Switch on the device by sliding the switch to ON position

Step 4: Guide the device to the area of the body to be massaged. You can stand, sit or lie down and use the massager

Step 5: Glide the speed switch and adjust the speed as per your requirement

Step 6: Use on a particular area only for 15 minutes and then switch to another.

Step 7: Switch off the machine and let it cool after 15 minutes of use

Step 8: Unplug the device and let it cool down use. Keep the device dry.

CLEANING

To clean the unplugged device after it has cooled down, wipe with a slightly damp cloth. You can use a mild cleaning agent. However, ensure that water never gets inside the device. Do not use the device again until it is completely dry.

IMPORTANT

- The device is only intended for individual use, and not for medical and commercial use.
- Do not use the device continuously for longer than 15 minutes to avoid overheating. Let the device cool down before using it again.
- Never cover the device when it is switched on (with blanket, pillow etc.)
- Never operate the device unsupervised, especially if there are children in the vicinity.
- Children, helpless and disabled persons must use the device only under adult supervision or must be familiarised with the device beforehand.
- Do not use with animals or pets.
- Persons with cardiac pacemakers are requested to consult their doctor before using the massager device and never to massage the region of the heart.

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log onto to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.

- Never use the device on swollen, burned or injured areas of skin. The following should also not be massaged: bones (e.g. joints, spine), the head or other sensitive areas of the body.
 - Do not carry out a massage if you have a cold with a high temperature, varicose veins, thrombosis, vein inflammation, jaundice, diabetes, pregnancy, nerve disorders (e.g. sciatica) or acute inflammation. In such case, consult your doctor.
- You must never fall asleep during use.
- Connect the device only to the voltage stated on the type nameplate.
- As with every electrical device, this massage device should be used carefully and cautiously in order to avoid the risk of electric shock:
- Unplug the mains cable immediately after use.
- Prevent any contact with water (except when cleaning with a slightly damp cloth). Water must never get inside the device. Never submerge the device in water. Never use the device in the bath, in the shower, in a swimming pool or over a basin filled with water. However, if water has got inside the casing, unplug the device immediately and contact customer service.
- The device and in particular the mains cable should be checked for any damage before each use. Never plug the device into the mains power supply if the cable is damaged.

- Never hold or carry the device by mains cable.
- If a fault should occur during use, switch off the device immediately and unplug it from the socket.
- The device is intended only for the purpose described in these instructions for use. The manufacturer can accept no liability for injury arising from incorrect or careless use.

DEVICE DESCRIPTION

A, Non-slip handle

B, Sliding switch

OFF off

ON massage

C, Speed control

(continuously adjustable massage speed)

D, Massage head

E, 3 sets of movable massage heads


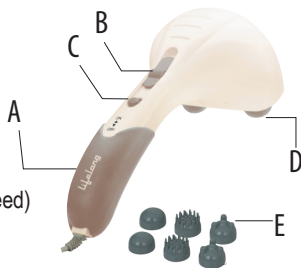


CHART OF BODY POINT

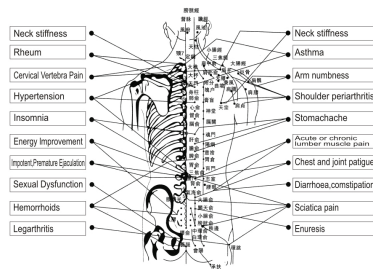

There are around 650 points in our body from neck to waist. And every point is connected with some organs or body condition. Massaging can promote blood circulation, promote metabolism and build up the ability against disease.

JUDGEMENT OF FAULT

Fault	Reason	Fault Remedy
Motor not working	Plug not fixed up	Fix up the plug well.
	Switch is out of position	Checking the Switch
Working too long	Thermal Protection	Rest for 5 minutes
long time for heating	Ambient temperature	Running 5mins first for warm-up