


Lifelong Online Retail Pvt Ltd
5th Floor, Unit No. 508, DLF
South Court, Saket District
Center, Saket, New Delhi -110017

+91-9711558877
customer@lifelongindia.com
www.lifelongindiaonline.com

LifelongOnlineIn f
Lifelong_Online t
Lifelong.Online o

Lifelong
MAKING IT POSSIBLE

RADIANT FACE SPATULA

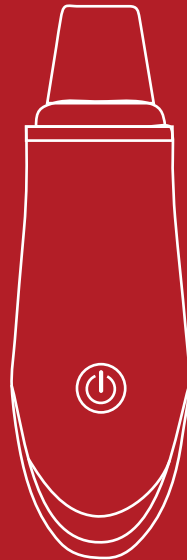

Skin
Cleaning



Skin
Moisturizing




Skin
Lifting

SAFETY PRECAUTIONS:

Do not dispose of the device with general household waste, as the battery can cause harm to the environment and human health. It should be recycled in a dedicated recycling bin or recycling station.

1. While using the spatula, the hand should hold the conductive strip on the side of the machine, so that the ion import and export function can work normally.
2. Do not stop at some point on the face when using the device.
3. If there is inflammation on the face, it should be used after the inflammation has disappeared.
4. The product should not be used more than 3 times a week.
5. Clean the blade and body before and after operation for better hygiene.
6. Not to be used by: People with allergy symptoms, skin diseases dermatitis, skin allergies, severe sunburn, skin damage, eczema, swelling, etc. Patients who has just finished surgery and is recovering. People with physical, sensory or mental problems, unless directed by a guardian, or it is used by responsible for the safety of the user.

COMPONENT DESCRIPTION:

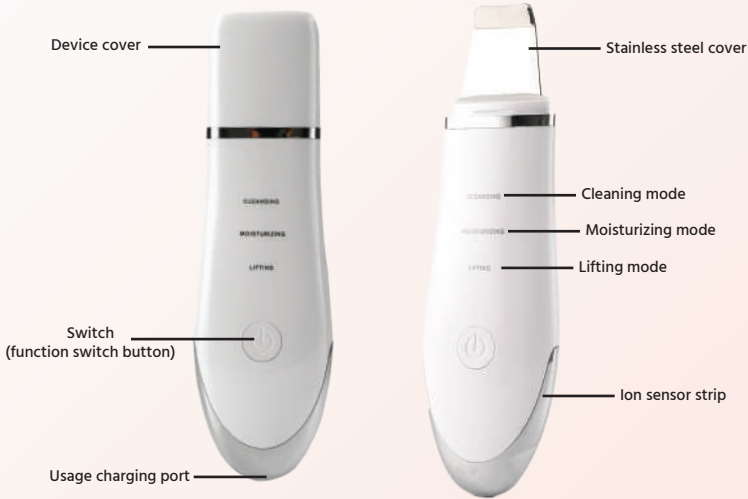

SPECIFICATIONS:

Product Name	Ultrasonic Skin Scrubber
Product Model	RM - CPI
Charging Voltage	5V1A
Battery Voltage	3.7W300mAh
Sound Wave Frequency	20-30KHZ
Battery Capacity	400 mAh
Executive Standard	GB4706.1 GB4705.15

FEATURES:

1. Small and easy to carry

Rechargeable design, compact, lightweight and easy to carry.

2. USB Charging

The USB charging cable is equipped for charging by linking the product with a computer, mobile charger or another device. The battery capacity is 400 mAh. When using the spatula for the first, please charge the device completely.

3. Ultrasonic-ion vibration

With the 20-30KHZ vibrations per minute, deep cleanse pores, improve skin texture and complexion.

4. Customized Operations

The cleaning mode, the moisturizing mode, and the lifting mode can be switched as per your needs.

5. Physical care

Safe, easy to operate, no bad effects.

TIPS:

- Turn off the machine before cleaning and while maintaining the equipment
- This product is not waterproof. It is strictly forbidden to put the whole body into the water or use the faucet to rinse directly. Don't use it while bathing.
- If you feel pain or abnormality in your skin or body, stop using the device immediately.
- Do not disassemble or repair this product yourself. For repairs, please contact customer service
- Please use the matching USB cable to charge, to ensure that the charging voltage meets the product requirements. This product is a personal care product and is not available to a beauty agency for multiple people.

- The Lifelong Facial Spatula is a shovel-shaped stainless-steel device that is ultrasonically introduced to generate high-frequency vibrations which act on the face to deeply clean the dirt in the outer layer of the skin and making the pores fine and smooth.



USAGE SUGGESTIONS:

- When using the device for the first time or after a long time, please charge the battery completely or for at least 2 hours.
- Press and hold the button for 2 seconds to turn it on.
- Press the button once for cleaning mode (Cleansing)
- Press the button again for Moisturizing mode (Moisturizing)
- Press the button again for lifting mode (Lifting)
- Press and hold the button for 2 seconds to turn off.

HOW TO USE:

Cleaning mode (CLEANSING)

Usage time: about 3-5 minutes

The ultrasonic ion vibration is longitudinally cleaned, which makes it easy to remove makeup while soothing the skin.

1. Press and hold the power button for 2 seconds to turn the instrument on.
2. Select the Cleansing mode
3. Apply a cleansing foam (or other cleansing lotion) to the entire face, avoiding the area around the eyes.
4. Gently polish the face with a machine probe for approximately 5-10 seconds on each part.



Moisturizing mode (MOISTURIZING)

Usage time: about 10 minutes

The active ingredients such as vitamin C and amino are generally alkaline ions, and it is difficult to penetrate into the dermis layer of the skin due to the skin epidermis. The ions produced in this mode can introduce the active ingredients in the beauty liquid into the deep layers of the skin through directed ion motion

1. Press and hold the power button for 2 seconds to turn on the power.
2. Select Moisturizing mode.
3. Apply the beauty lotion to the entire face (avoid around the eyes) or apply the mask.
4. Gently massage the face in the direction of the skin muscle.



Lifting and tightening mode (LIFTING)

Usage time: about 10 minutes

This mode uses the fine vibration of ultrasonic ions to transmit to the skin, making the skin moist and smooth.

1. Press and hold the power button for 2 seconds to turn on.
2. Select Lifting mode.
3. Apply a nutrient serum (avoid around the eyes).
4. Move slowly in the direction of the pores and use for 10 minutes.



CLEANING, MAINTENANCE AND CARE:

CLEANING, MAINTENANCE AND CARE:

1. Keep the instrument away from moisture and do not place the instrument in a dishwasher or microwave oven. Please turn off the machine before cleaning.
2. Do not use sharp or corrosive, volatile thinner cleaning products.
3. You can use a soft cloth or a cotton pad to gently wipe.
4. This machine is not waterproof. Do not rinse the machine directly with water, as it will cause damage to the machine.

HOW LONG WILL IT TAKE BEFORE I SEE VISIBLE RESULTS?

We suggest using the device not more than thrice a week, everyday use would be too much for your skin. Typically, it can take anywhere from 2-4 weeks of 2 treatments per week to see visibly significant results.

A reminder once again: It gets slightly worse before it gets better. But it's worth it. You might notice redness and light bruising on your skin. It is completely normal in the beginning.

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from the date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 1 year

Please note:

Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log on to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.

Terms and Conditions:

1. This warranty is void if:
 - a. The completely filled warranty card is not presented at the time of servicing the product.
 - b. The product is not operated according to the instructions given under the user manual.
 - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - e. Product label specifying the model number, serial number and production code has been removed and altered.
 - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.
5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.

7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply notwithstanding the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is there of authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.