

Manufactured for & Marketed by:

Lifelong Online Retail Private Limited

For queries and complaints:

please contact: customercare@lifelongindia.com

www.lifelongindiaonline.com

lifelong

CHAIR MASSAGER

User Manual



Built for Relaxation. Built for India.

INTRODUCTION:

Dear Customer, Congratulations!

We welcome you to the Lifelong family, as you welcome the Lifelong Chair Massager to be a part of your home.

At Lifelong, our products are carefully built for the needs of India, which is why we have crafted a diverse range of innovative products, across a spectrum of categories - Home, Kitchen, Grooming, Fitness, Lifestyle and Smart Home, to better help you.


We then deliver them at the best prices, enriching your everyday living.

We are sure you can't wait to start using your new Lifelong Chair Massager.

We know we can't!

Looking forward to building our bond for life, cheers!

Thank you, Team Lifelong

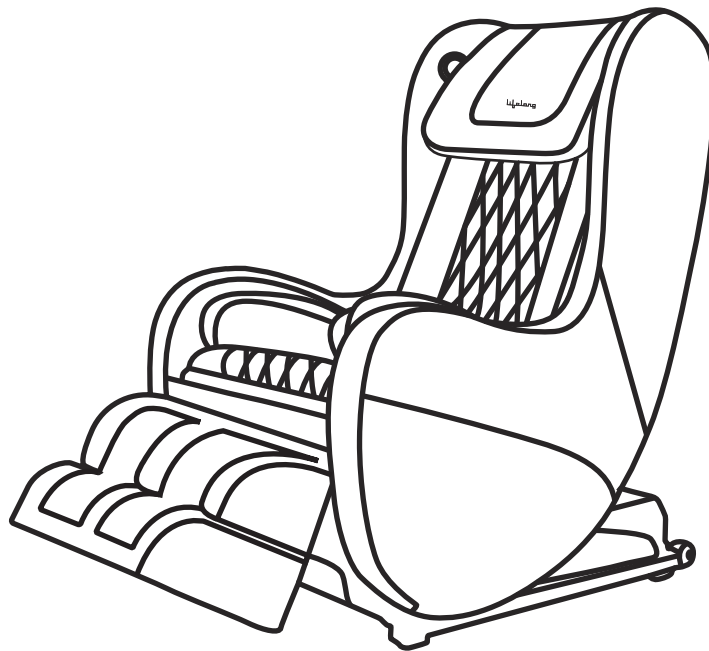

LLM558


TABLE OF CONTENTS :


1. About the product
2. Marking of Product
3. Remote Manual
4. Foot Massager Features
5. Technical Specifications
6. Troubleshoot Chart
7. Terms & Conditions
8. Warranty Card

ABOUT THE PRODUCT:

The Lifelong Chair Massager is a calming device that gives you great value for money. The massager relaxes your muscles, letting the day's worries melt away.

MARKING OF PRODUCT:

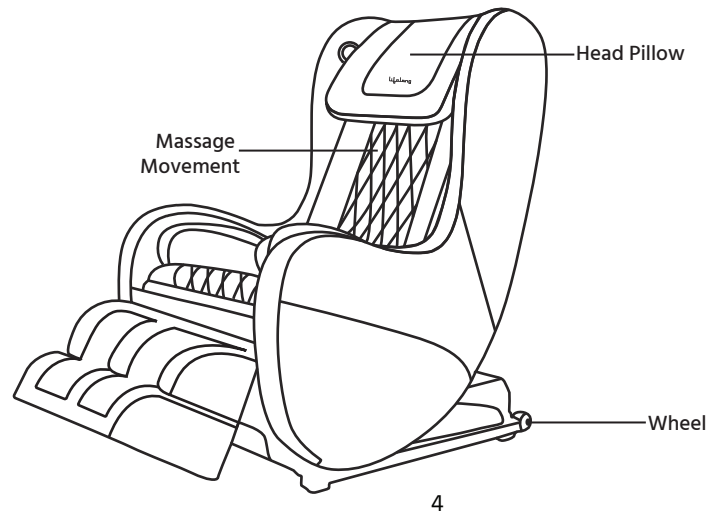

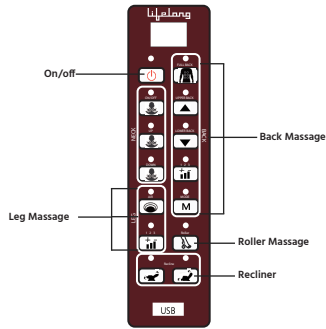


REMOTE MANUAL:

- **Power:** Used to turn on or shut off the chair.
- **Auto:** Used to choose a different massage mode. Press the button once, the massage mode will change once.
- **Intensity:** Used to change the massage intensity. Press the button once, the massage intensity will change once.
- **Area:** Used to choose different massage area.
- **Seatback Adjustment:** Used to change the seatback angle. Press the button once the massage seatback will change once. Hold down the button and keep it, the backrest will upright or lies down, release the button, the change will stop.
- **Zero-G:** Press the button once, the chair will enter zero-gravity state, and then press to release.

FOOT MASSAGER FEATURES:

1. Four wheels driven, the rollers move up and down on backrest, with a static sound effect designed massage manipulator
2. There are 5 types of simulation massage technique including Shiatsu, Kneading, Flapping, Knocking, Kneading, and knocking synchronous.
3. There are Leisure, Upper Body Automation, Stretching and sleeping four sets of automatic massage modes
4. There is air pressure massage function for arms, hips, calves, and feet.
5. Provides kneading massage on foot.

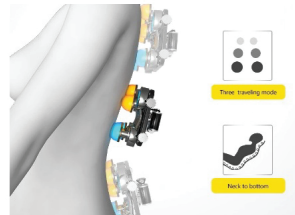

TECHNICAL SPECIFICATIONS:

Name	Massage Chair	Net Weight	39.40 Kg
Model	LLM558	Gross Weight	47.2 Kg
Input Voltage	220 V	Packing Size	100 cm x 64 cm x 108 cm (L x B x H)
Power	100 W		

TROUBLESHOOT CHART:

Trouble	Possible Cause	Troubleshooting
The massage chair doesn't work after the power is ON.	Check whether the plug and socket are in poor contact.	Make sure plug and socket are connected.
	It is the sound of motor and/or the mechanical parts.	Please ask the manufacturer or call the Lifelong customer care number.
	Check if it is due to overusing the product without giving it resting time.	Please ask appointed or authorized maintenance man for checking and repairing.
There is a beep sound inside the massager while working.	It is sound of motor and mechanical parts.	This sound is normal.

Trouble	Possible Cause	Troubleshooting
Sound suddenly becomes much louder while working.	Check if it is due to long time working.	Turn the massager OFF and let it rest for 30 minutes, before using it again.
	Caused due to the fretting of inner circuit caused through an extend period of use.	Please ask the manufacturer or call the Lifelong customer care number.
Massage function suddenly stops while working.	Sudden power down.	Turn the massager OFF and let it rest for 30 minutes, before using it again.
	Setting time is up.	Turn off the power to have the massager rest for over half an hour before next turn working.
The chair can't return to its original position.	Excessive operation; setting time is up.	Please ask the manufacturer or call the Lifelong customer care number.
Electric wire or plug give out heat	Maybe caused due to overload	Turn the massager OFF and let it rest for 30 minutes, before using it again.
	Other abnormal case	Please stop using the device and contact the manufacturer/ call the Lifelong customer care number.

Terms and Conditions:

1. This warranty is void if:

- The completely filled warranty card is not presented at the time of servicing the product.
 - The product is not operated according to the instructions given under the user manual.
 - Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
 - Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
 - Product label specifying the model number, serial number and production code has been removed and altered.
 - Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
 - Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
 - Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as will as any other expenses and incidentals will be

5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the law.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply not with standing the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: _____

Model: _____

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: customercare@lifelongindia.com

Customer Details

Name: _____

Address: _____

Home Number: _____

Office Number: _____

E-mail Address: _____

Product Details

Model No.: _____

Serial No.: _____

Purchase Date: _____

Invoice Number: _____

Online Site: _____

Please log on to www.lifelongindiaonline.com and complete the online warranty form with your personal and product details within 14 days.